



Installation Guide

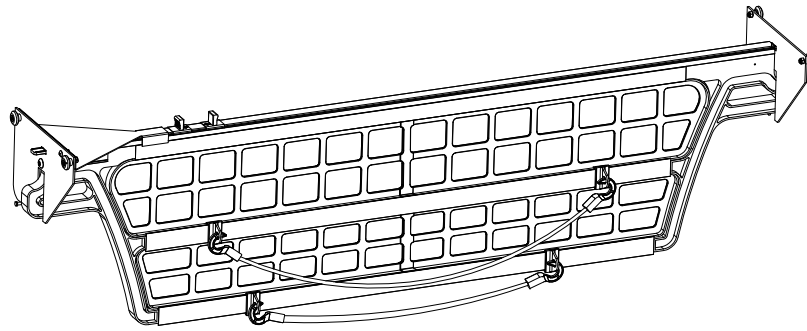


Parts List


Item	Part Name	Qty.	Item	Part Name	Qty.	Item	Part Name	Qty.
A	Cargo Manager Gate	1	G	5/16-18 x 3/4" Truss Head Screw	2	M	#10 Lock Washer	1
B	Cargo Manager Track	2	H	Star Washer	2	N	#10-24 Nut	1
C	Left side Tram Plate	1	I	Shoulder Bolt	1	O	3/16" Allen Wrench	1
D	Right side Tram Plate	1	J	Delrin wheel	1	P	Cargo Nut	8
E	Gusset Bracket	1	K	1/4-20 Lock Nut	1	Q	#6 x 3/8" Truss Head	1
F	Tram Plate Stem	2	L	10-24 x 1/2" Truss Head Screw	9	R*	Bottom Rail Extender	1

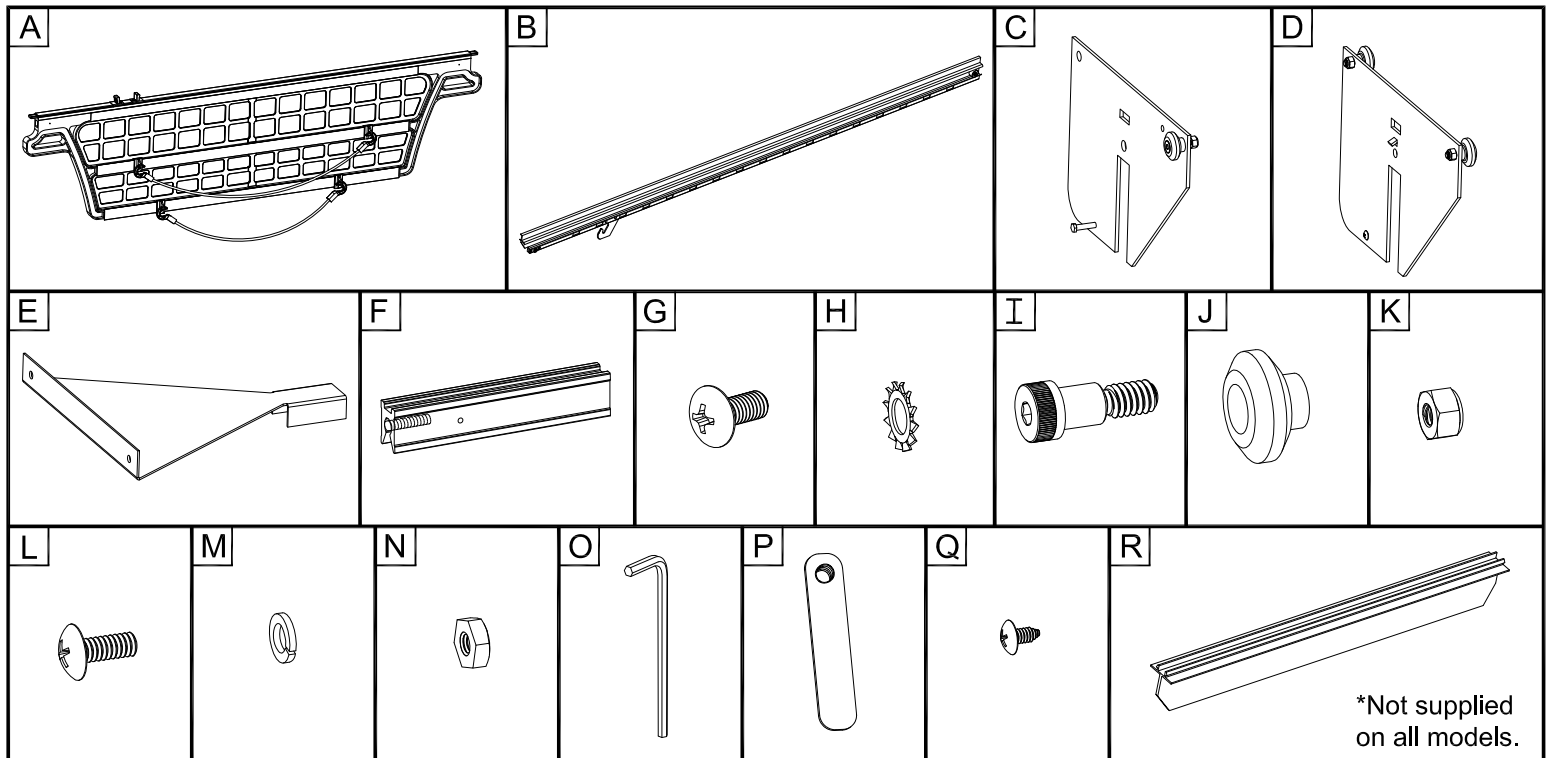


Tools Needed

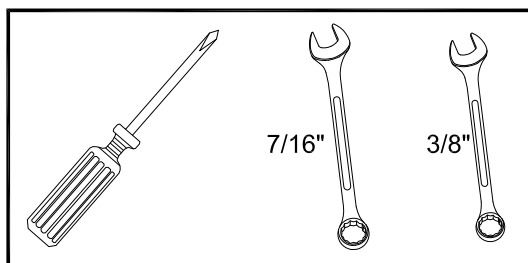

Optional: Snap the Bottom Rail Extender (R) to the bottom of the Cargo Manager Gate (A).
 Note: Not all models are supplied with the Bottom Rail Extender. May be already installed.

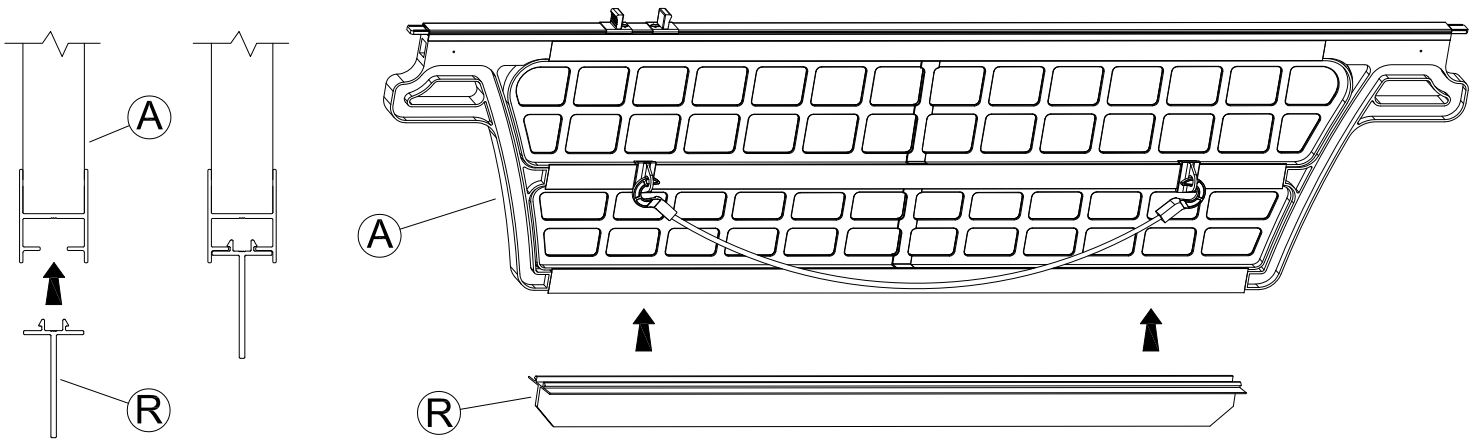


1a LHS

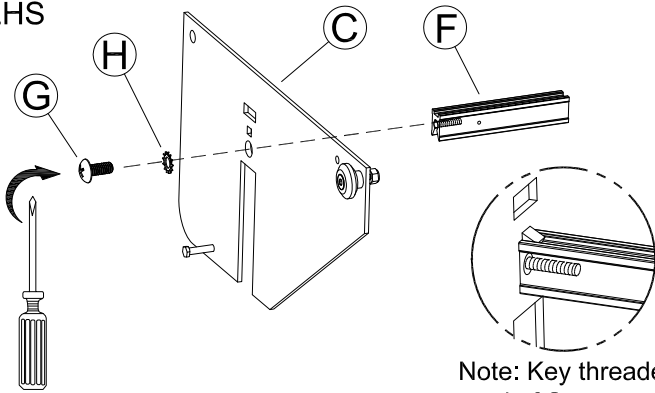

Attach threaded end of Stem (F) to Left side Tram Plate (C).


Note: Key threaded end of Stem onto tab.

1b

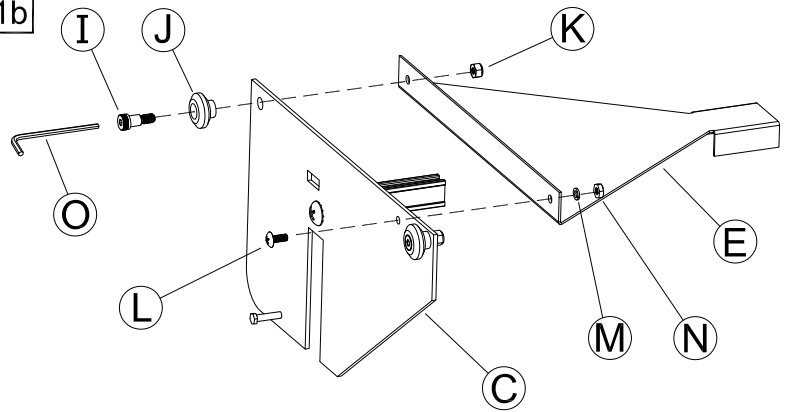

Attach Gusset Bracket (E) to Left side Tram Plate (C).

2 RHS

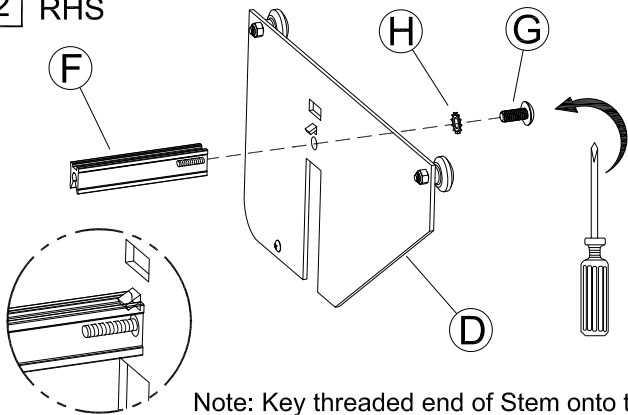


Attach threaded end of Stem (F) to Right side Tram Plate (D).

Note: Key threaded end of Stem onto tab.


3 LHS = RHS

Slide tram plates onto Cargo Manager Gate (A).

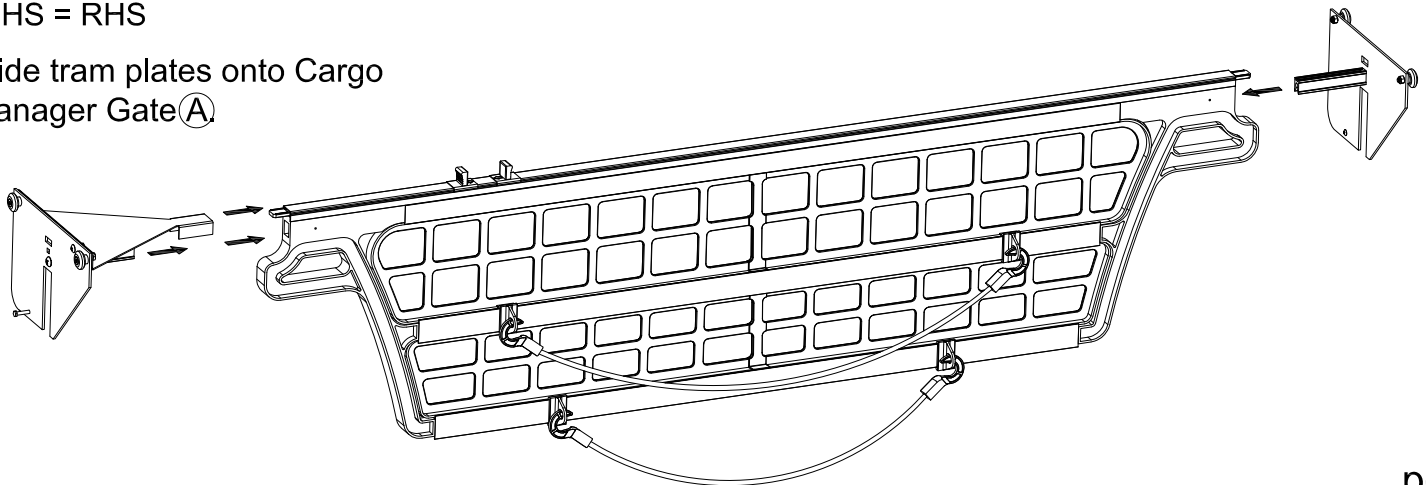



LHS = RHS

 Long bed tracks are shipped apart and must be joined prior to installation.



4 LHS = RHS

Attach Cargo Manager Tracks **(B)** thru the unused holes in the Rugged Ridge Tracks.

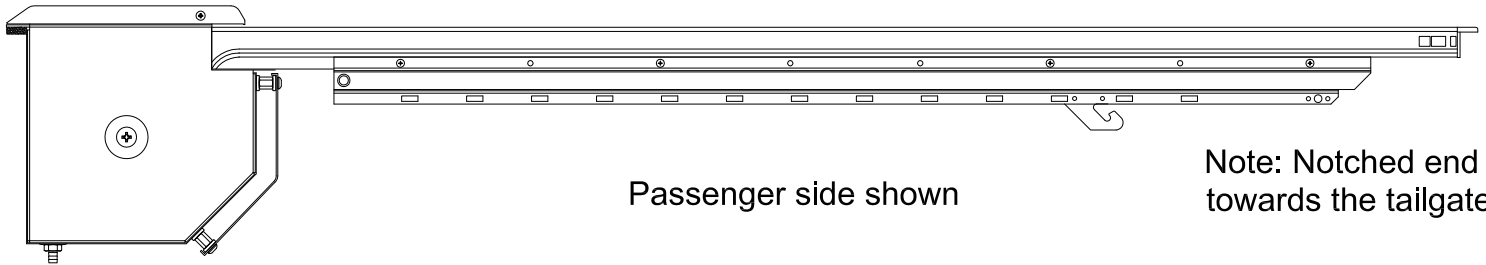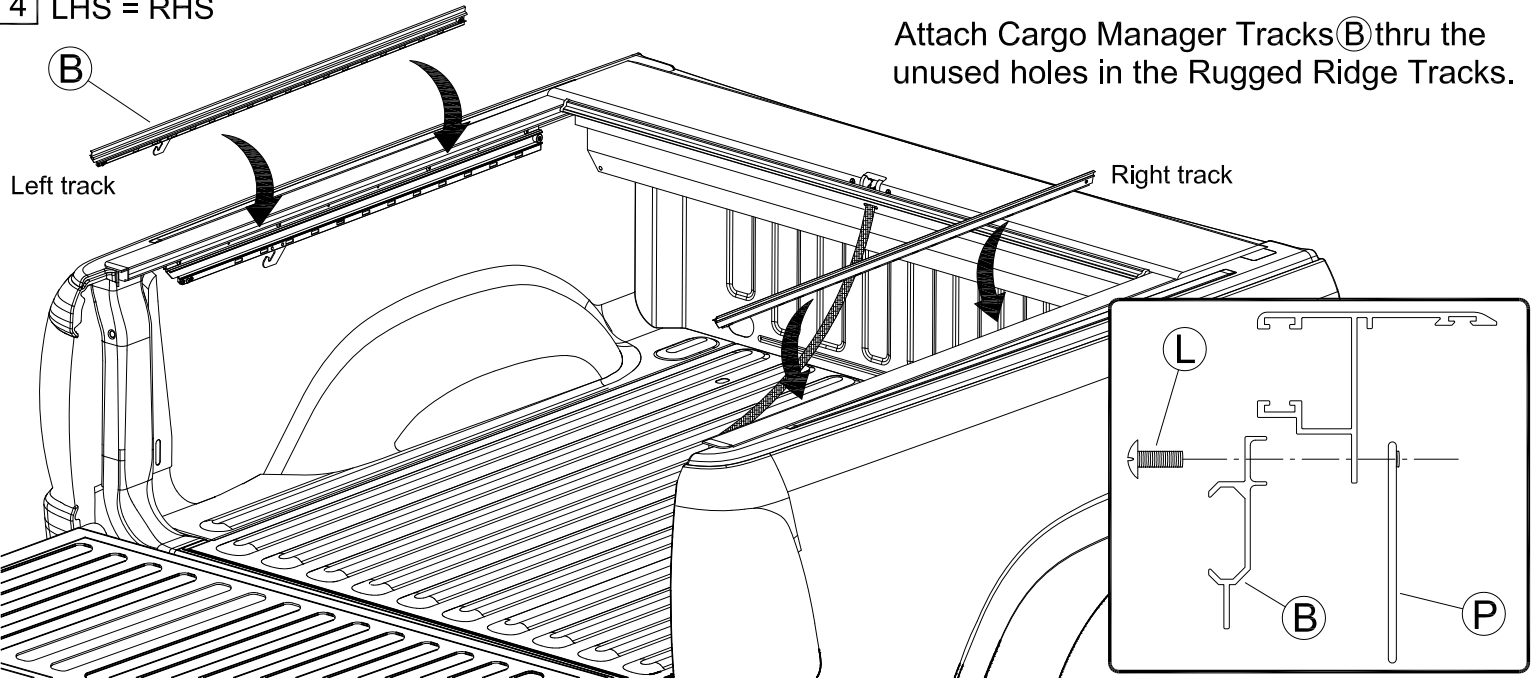


Passenger side shown

Note: Notched end towards the tailgate.



5 LHS = RHS

1. Push the track stop pins outward.
2. Maneuver the assembled Cargo Manager around the back truck bed posts, rotate the Cargo Manager and insert the lead wheel on each side into the tracks.


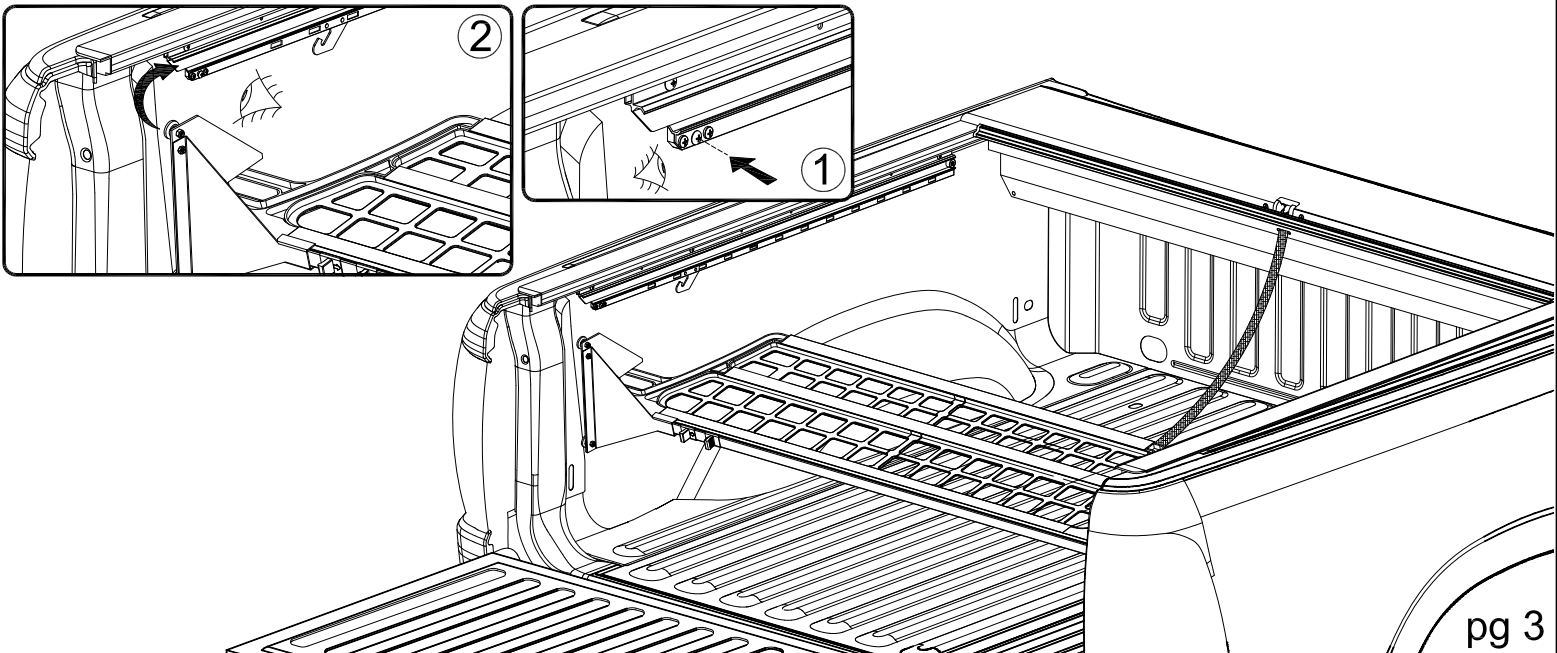


6


With the lead wheels in place, squeeze the levers and rotate the Cargo Manager level and key the back wheels into the tracks.

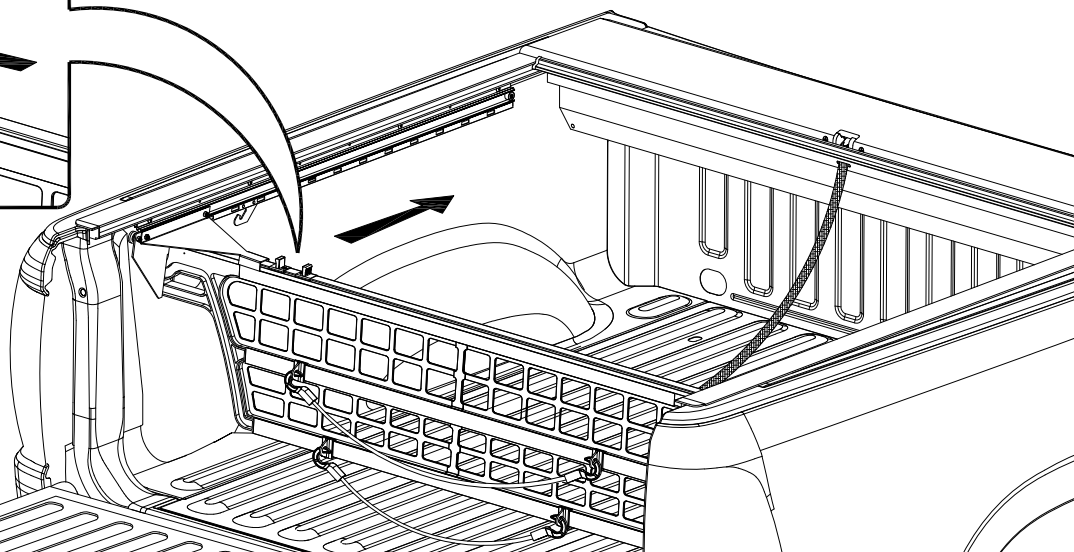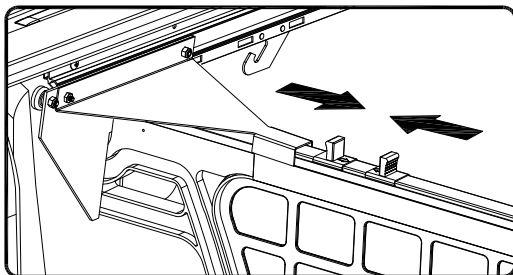

7 LHS = RHS

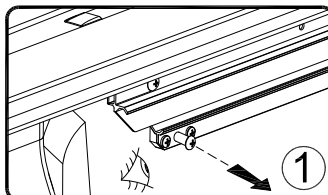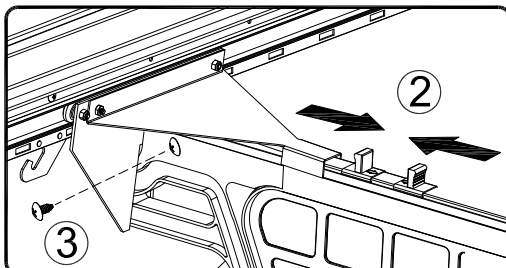

1. Press the track stop pins inward to prevent the wheels from leaving the track.
2. Squeeze the levers to operate the Cargo Manager back and forth, release at desired location.
3. Optional: Screw \textcircled{Q} tram plate to stem.

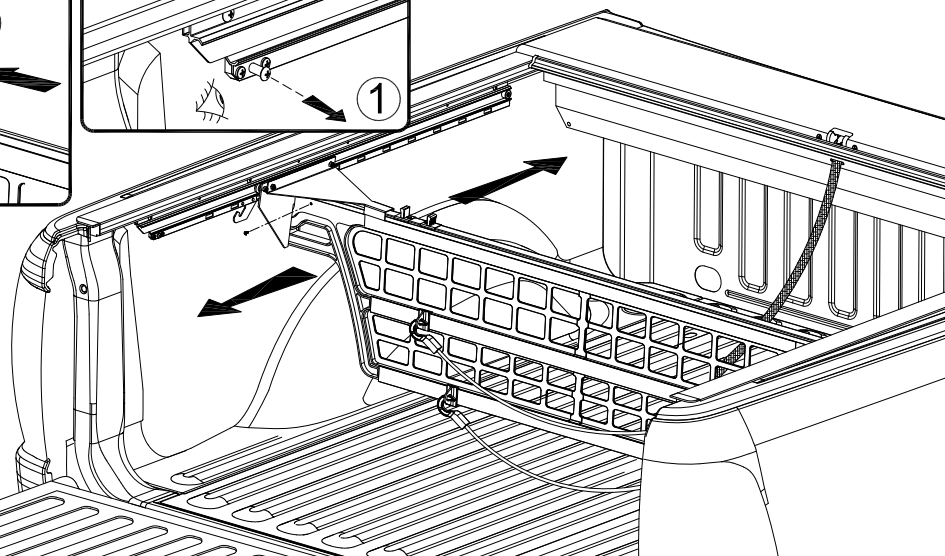

8 LHS = RHS If desired push track stop pins in, slide Cargo Manager back so only the back wheels are out of the track. Rotate the Cargo Manager and key the stay pins onto the track hooks.

