



HOOD SHIELD INSTALLATION and CLEANING

I - Sheet Number STMPDBF95 Rev.A

- 1. **NOTE**: Do **NOT** install hoodshield if vehicle does **NOT** have a factory installed front hood seal / gasket.
- Open Hood.
- 3. Remove (4) plastic seal retaining fasteners that align with the pre-drilled holes in the hood shield. Next, carefully separate the hood seal / gasket from the areas of the hood that align with the hood shield flange. **NOTE: Exercise extreme caution not to tear or damage the hood seal / gasket when seperating from hood.**
- 4. Reposition the hood shield with the tabs sliding between the hood and rubber seal and align with holes.
- 5. Install (4) screws with washers. (See detail below.)
- 6. Tighten all (4) screws until snug to secure hood shield to hood.
- 7. Turn both of the hood bumpers counter clockwise 1 1/2 turns.
- 8. Close Hood.
- 9. Apply bump ons to surface of hood.

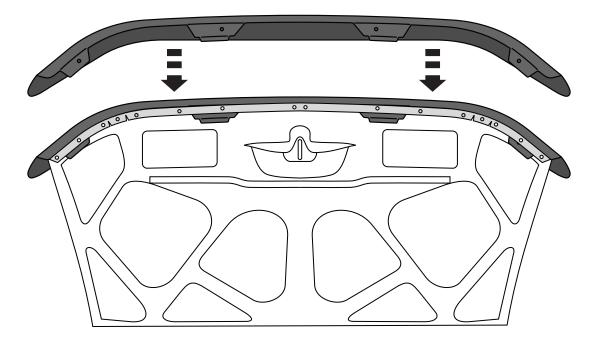

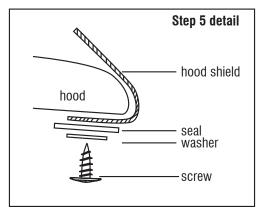

IMPORTANT: Before driving, ensure the hood shield is properly secured to vehicle. Clean with a **SOFT** cloth and soap and water ONLY! Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.