

TRUXEDO® CLAMP EXTENSION AND STAKE POCKET CLAMP

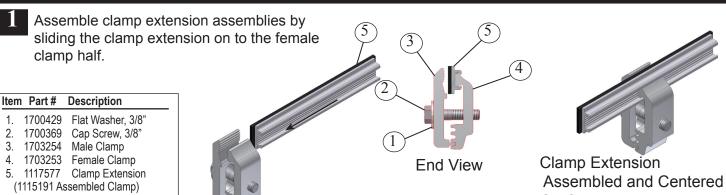

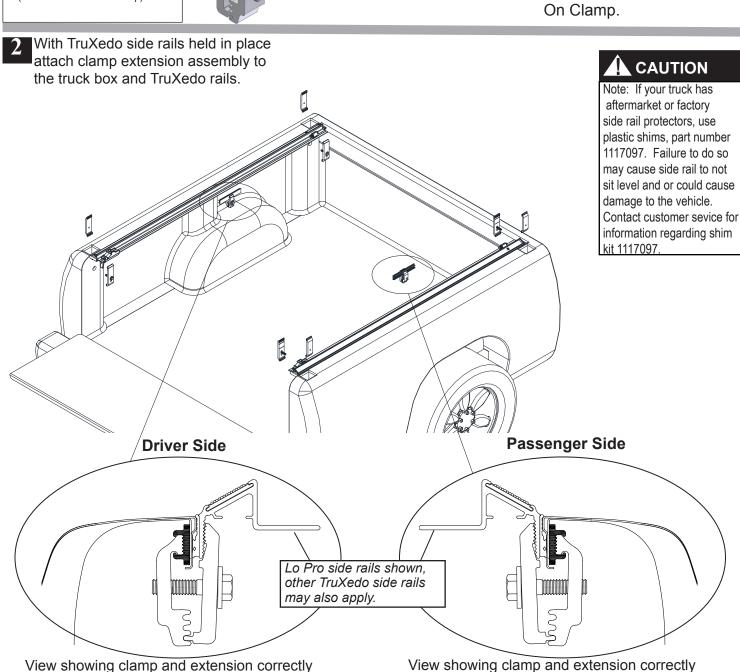

by TruXedo, Inc.

truck box.

P.O. Box 1078, 2209 Kellen Gross Dr., Yankton, SD 57078 **Phone**: 877- 878-9336 • **Fax**: (605) 664-9304 **www.truxedo.com**

attached to the driver side TruXedo rail and




attached to the passenger side TruXedo rail

and truck box.

TRUXEDO® CLAMP EXTENSION AND STAKE POCKET CLAMP

Disassemble stake pocket clamp assemblies by unscrewing the stake pocket clamp half from the female clamp half.

Item	Part #	Description
1.	1700428	VMI Flat Washer, 5/16"
2.	1703548	Cap Screw, 5/16"
3.	1704576	Stake Pocket Clamp
4.	1704583	Male Clamp
5.	1704585	Urethane Round
(1704592 Assembled Clamp)		

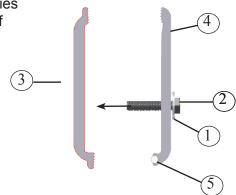


With TruXedo side rails in place, insert stake pocket clamp half into stake pocket. While holding stake pocket clamp half, insert male clamp half and bolt through the bolt hole of the stake pocket. Bolt clamp halfs together and tighten.



attached to the driver side TruXedo rail and

CAUTION

Tighten clamp assemblies securely on side rails before driving vehicle.

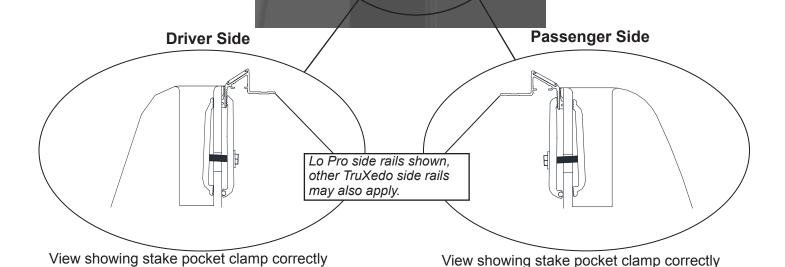

truck box.

by TruXedo, Inc.

truck box.

P.O. Box 1078, 2209 Kellen Gross Dr., Yankton, SD 57078 **Phone**: 877- 878-9336 • **Fax**: (605) 664-9304 **www.truxedo.com**

attached to the driver side TruXedo rail and

