

PUTCO LOAD RESISTOR INSTALLATION SHEET

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at:

1-800-247-3974

Monday-Friday 8:00 a.m.- 5:00 p.m. (Central Standard Time)


Contact your PUTCO dealer for other quality accessories.

PUTCO Inc. - 216 West First Street - Story City, Iowa 50248

PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION AND TO CHECK TO SEE THAT ALL PARTS ARE INCLUDED.

Installation Instructions

1. Not all vehicles require load resistors. To determine if your vehicle does require them install the Putco lighting first to determine if your turn signals hyper flash.
2. If hyper flashing is noticed, wire in one load resistor into the right turn signal circuit and another into the left turn signal. This should be done near the headlight or the taillight of the vehicle, which ever is easiest to access the wiring near.
3. Depending on the number of bulbs replaced with LEDs multiple load resistors might be required to prevent hyper flashing.

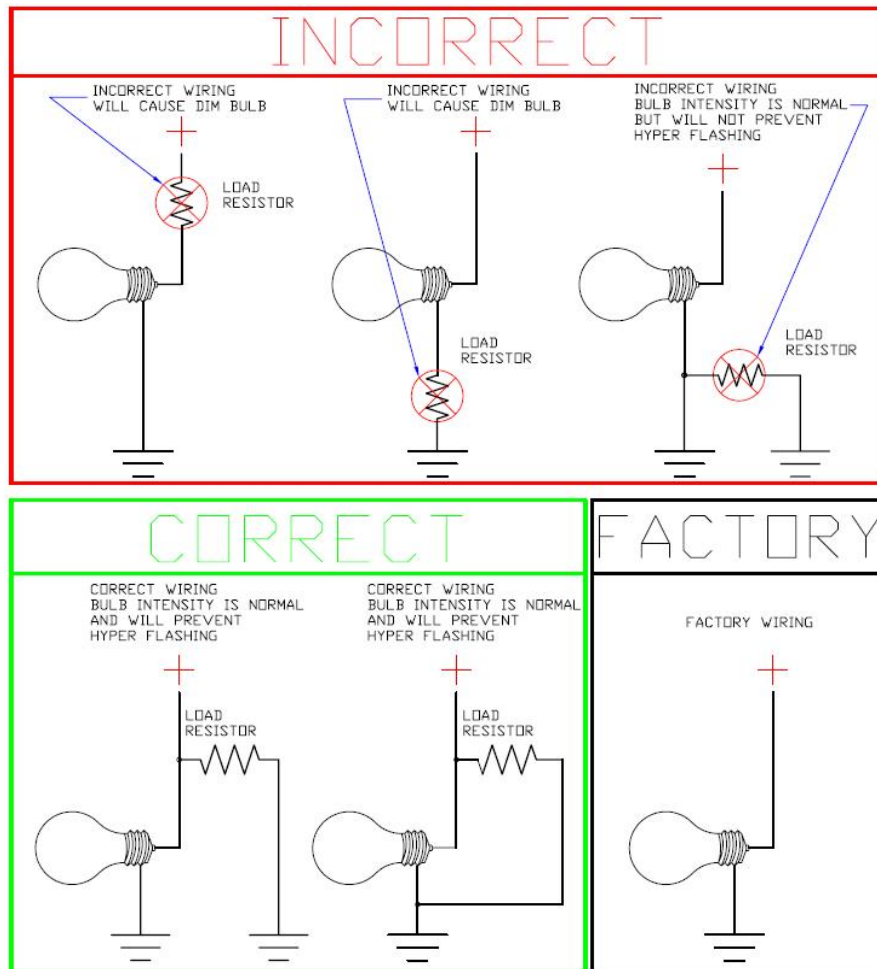

Note: PUTCO recommends soldering the connections and covering them with heat shrink tubing or electrical tape.

LIMITED WARRANTY

Putco warrants its stainless steel and aluminum products against defects in workmanship and materials for as long as you own your vehicle. "Black powder-coated and chrome plated products have a one year warranty on the finished surface." Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco. Putco requires the original receipt for any warranty claims.