


Installation Manual

ATTENTION: DO NOT cut anything before you are completely sure the seat cover is aligned and fitted to your satisfaction.

Front seat cover:

1. Align the bucket cover over the seat and slide it down gently, ensure that the designs are lined up correctly. If you are not able to slide the cover on, remove headrest first (push release button).
2. Once the backrest part has been fitted, locate the straps in the center of the cover and push it through the back seat crevice and tighten the straps on the bottom of the seat.

Optional: If your front seat center crevice is blocked by a flap, you can pull up the flap by locating the strap on the bottom rear of the seat.

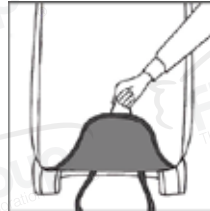

3. Fit the base part of the cover over seat and secure it by connecting the elastic loops underneath the seat with supplied Snaps OR you can just tuck the mesh cloth underneath the seat.
4. Reinsert headrest and cover it with headrest cover, secure headrest cover by fastening the elastic straps inside the headrest cover and close the opening with the velcro on top of the seat cover.

