


SETTING TENSION ADJUSTMENT BLOCKS

Cover tension is controlled by four position adjustable blocks. To start, place blocks in position shown below. With 4 on top and closest to front header. Secure block with hitchpin in #2 hole, this is the least amount of tension. (Position 4) See manual for other settings.

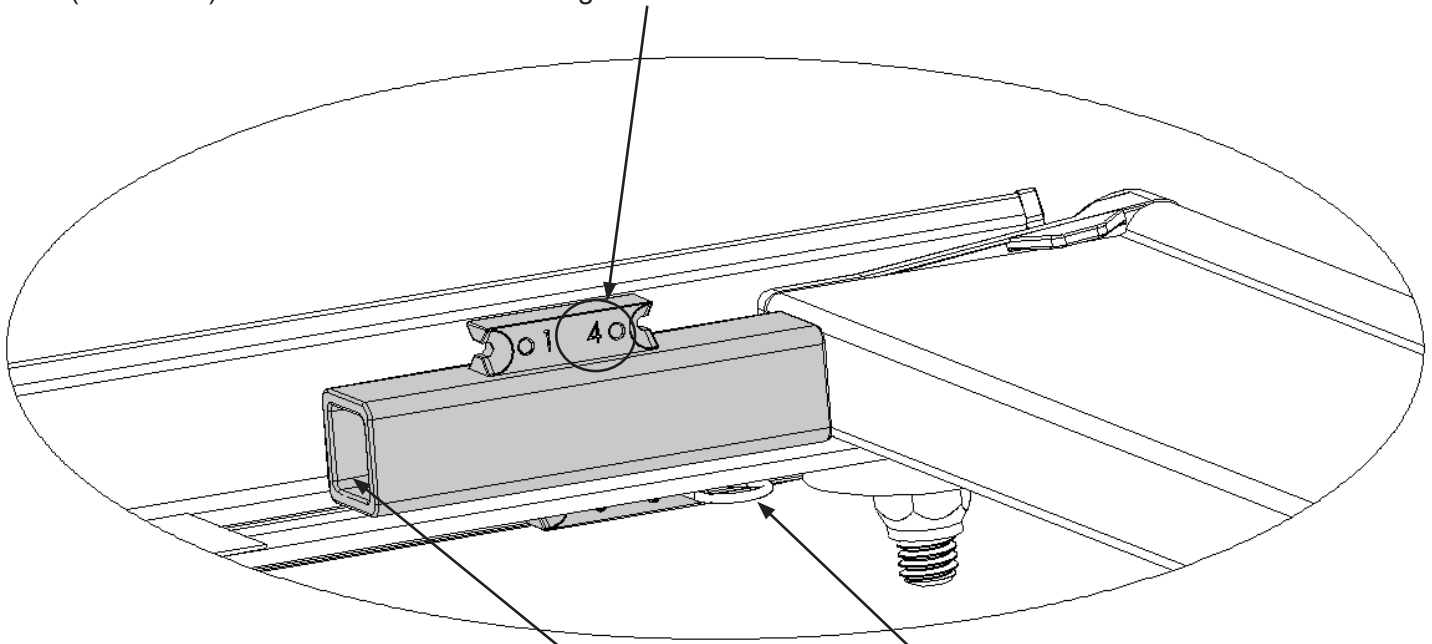


IF NUT FROM HARDWARE BAG APPEARS TO BE MISSING **Hitchpin**
* LOOK FOR NUT HERE *

P/N 1117960 Rev B

SETTING TENSION ADJUSTMENT BLOCKS

Cover tension is controlled by four position adjustable blocks. To start, place blocks in position shown below. With 4 on top and closest to front header. Secure block with hitchpin in #2 hole, this is the least amount of tension. (Position 4) See manual for other settings.

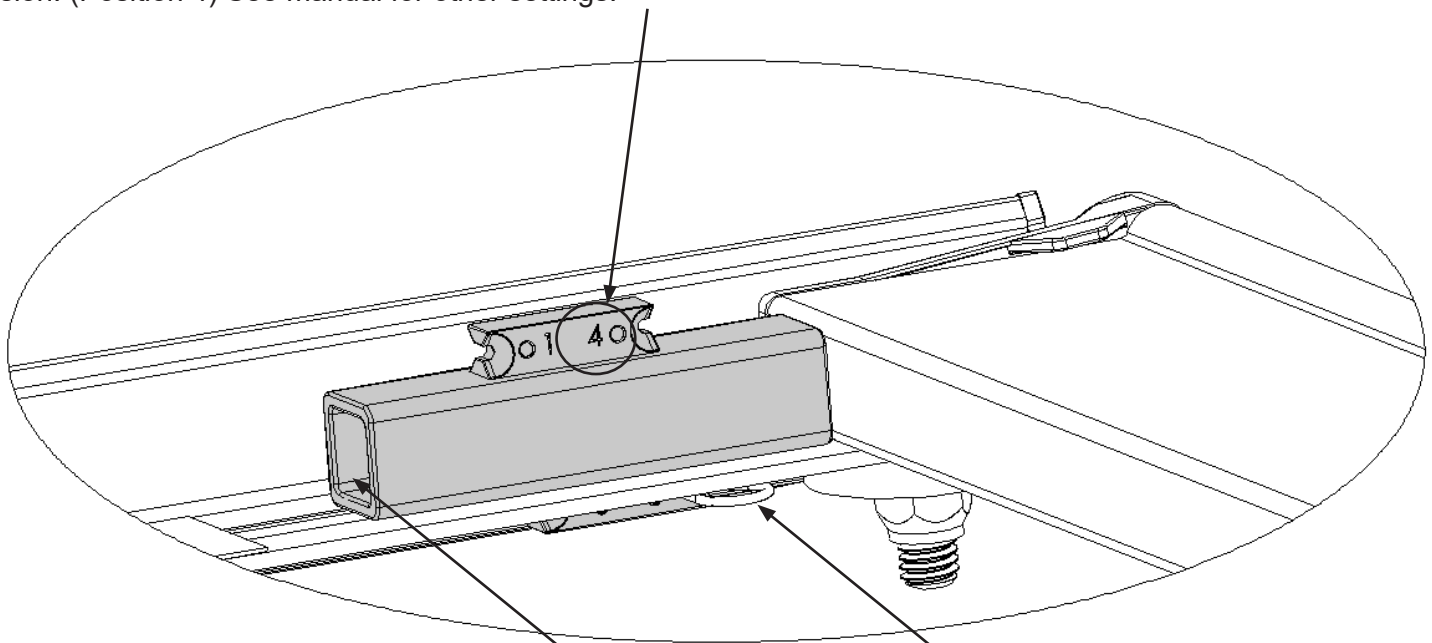

IF NUT FROM HARDWARE BAG APPEARS TO BE MISSING **Hitchpin**
* LOOK FOR NUT HERE *

P/N 1117960 Rev B