GO RHINO &

INSTALLATION INSTRUCTIONS



PART NO.

• C2-32-25

PRODUCT DESCRIPTION:

Keyed Compression Latch

APPLICATION:

• False Floor with Electronics Tray

PRODUCT SAFETY & LEGAL DISCLAIMER

- IMPORTANT READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING, FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY.
- **Review the product package and contents prior to beginning the installation.** Take care when opening the packaging and removing items. If a return is needed you will want to return the product in its original packaging if possible.
- This instruction guide is provided as a GENERAL installation guide, some vehicles vary dimensionally and may require additional steps.
- Test fit the product on the vehicle prior to any third party modifications and or finishing. The manufacturer and/or distributors do not accept responsibility for third party charges, labor and or third part replacement modifications. Some modifications may void the factory warranty.
- Exercise due-diligence when installing this product. The manufacturer and distributors of this product do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product. Careless installation and operation can result in serious injury or equipment damage.
- This product is for general off-road use. All liability for installation and use rests with the owner/operator.
- INSTALLER: Once installation is complete, please return this guide along with other documentation included in this product back to the consumer for future reference. The manufacturer/distributors of this product do not guarantee this particular version will be available at a later date.

© 2016 Go Rhino Products. All rights reserved



INSTALLATION INSTRUCTIONS

INJURY HAZARD

Please complete a shop and tool inspection prior to beginning the installation.

- Always make sure you have a clean, dry and well lit work area.
- Always remove jewelry, loose fitting clothing and wear protective gloves and eye protection.
- Always use extreme caution when jacking or raising a vehicle for work. Set the emergency brake and use tire/wheel blocks and jack stands. Refer to the vehicle manufacturer hand book. Utilize the vehicle manufacturers designated lifting points.
- Always use appropriate and adequate care in lifting parts during disassembly and installation. Seek help in lifting heavy or large items into place. Utilize jacks and or lifting devices when available.
- Always insure products are secure during disassembly and installation.
- Always wear eye protection and take steps to protect any exposed skin during the installations. Drilling, cutting and grinding plastic and metal may create flying particles that can cause injury.
- Always use extreme caution when drilling, cutting and or grinding on a vehicle. Thoroughly
 inspect the area to be drilled, on both sides of material, prior to modification and relocate any
 objects that may become damaged.
- Always assemble and tighten all fasteners per the installation instructions.
- Always route electrical cables carefully. Avoid moving parts, parts that may become hot and rough or sharp edges.
- Always insulate and protect all exposed wiring and electrical connections.

MAINTENANCE AND CARE

- Always perform regular inspections and maintenance on mounts and related fasteners.
- Periodically check and tighten all fasteners.
- Stripped, fractured, or bent fasteners must be replaced.
- After washing the vehicle make sure to fully dry all surfaces.
- In areas with cold temperatures make sure to wash the product often to remove harmful materials used on road ways.
- Never use abrasive cleaners or polish compounds. Clean with a gentle soap and water. If you use wax use a non-abrasive automotive wax such as pure carnauba wax.

WARNING

Some products have been designed to work together with factory rear sensor systems, factory forward facing sensor systems and factory air bags.


- Installation of some of these products may alter the factory sensor system performance.
- Factory sensors may read shackles or hooks protruding from the fairlead and or tow hooks.
- All sensor testing is completed by Go Rhino Products and or third party testing labs on modified vehicles.
- Sensor sensitivity, factory sensor housing, orientation, and operating conditions are all variables that will influence functionality of the sensors.
- Installation of some product may effect the factory air bag systems.
- Some products allow the use of third party products such as winches, shackles, hooks, etc. Follow the respective manufacturers operating instructions for use with our products.
- Make sure to fully understand the product, it's intended use and operation prior to use.
- Above all... be safe!




Step-1 Open the False Floor Lid.

Step-2 Release the lever on each slide at the same time, and pull the Electronics Tray toward the rear of the vehicle, (Fig 1).

Fig 1

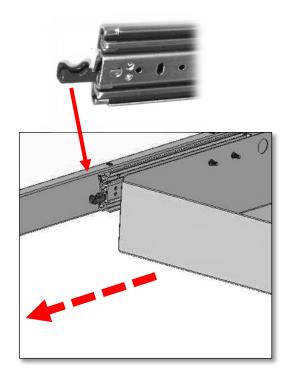

Step-3 Using a 5/16" wrench and 5/64" hex key, remove the (2) nuts and (2) screws securing the cover plate to the Electronics Tray, (Fig 2). Discard the cover plate, screws and nuts.

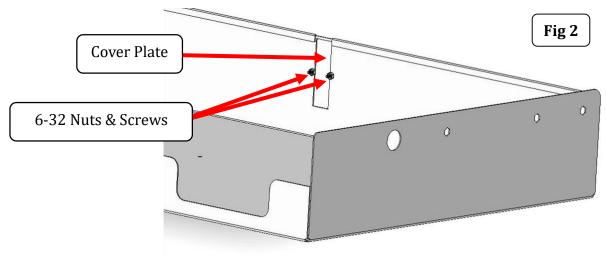




INSTALLATION INSTRUCTIONS

Step-4 Position the keyed lock housing in the opening in the Electronics Tray and secure the housing to the Electronics Tray using the mounting bracket, (1) M5 screw and (1) M5 lock washer supplied with the keyed lock, (Fig 3). Tighten the M5 screw.


Step-5 Assemble the jam nut, adjusting screw and rubber bumper, then thread the adjusting screw into the keyed lock lever, (Fig 3).

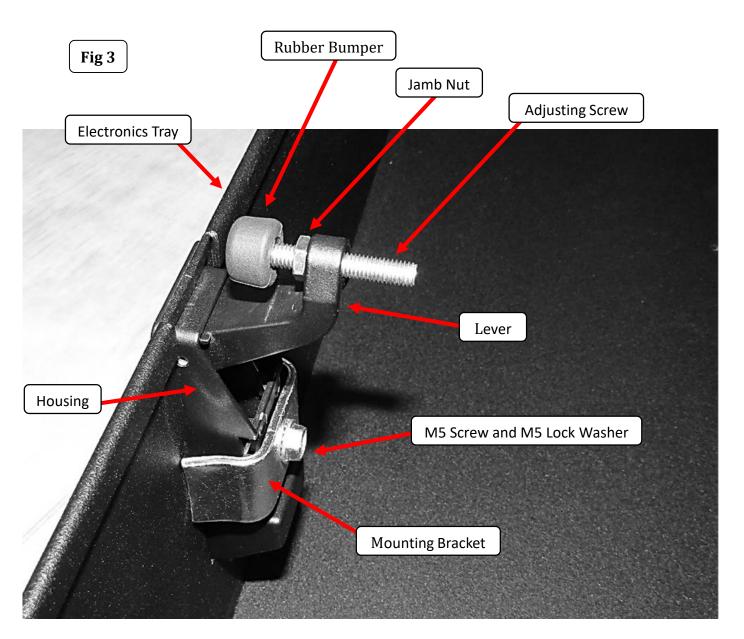



INSTALLATION INSTRUCTIONS

Step-6 Press the keyed lock trigger so the lever is in the closed position then turn the adjusting screw in or out so the rubber bumper is positioned ½" from the front of the keyed lock housing and tighten the jamb nut, (Fig 4).

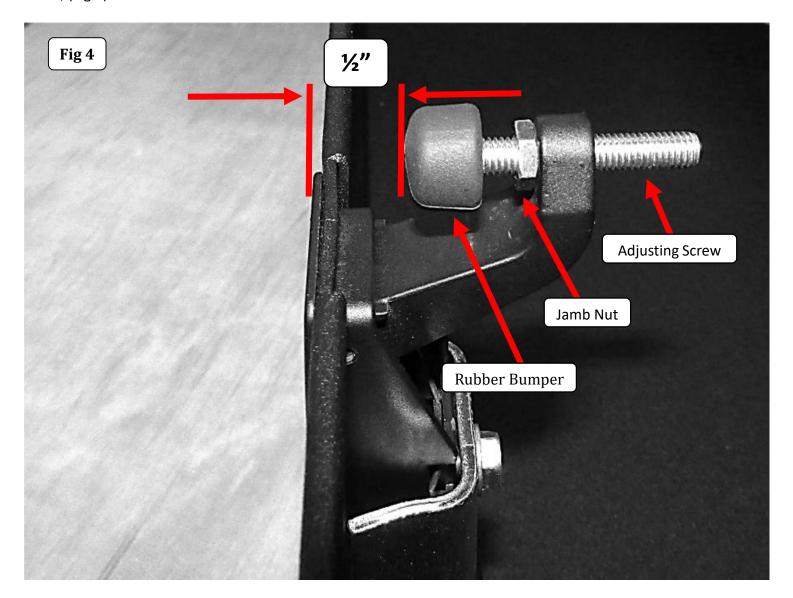

Step-7 Release the trigger so the lever is in the open position and fully close the Electronics Tray.

Step-8 Press the trigger so the lever is in the closed position to check if the adjusting screw rubber bumper is making contact with the stop. Re-adjust the adjusting screw position in or out to make contact with the stop if required.