

APPLICATION

Ford Bronco 4 Door

MODEL YEAR


2021-2026

AMP Part #

77140-01A

Note: The application works only on the Crew Cab model Vehicles.

INSTALLATION GUIDE

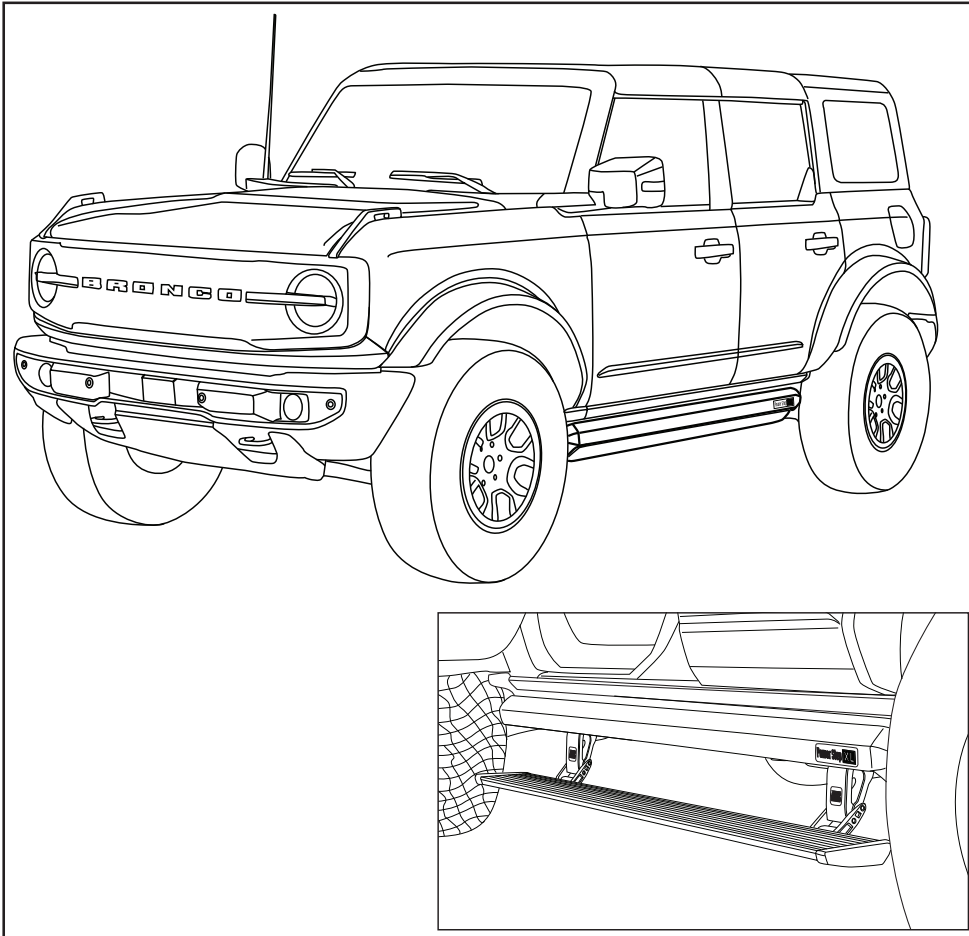

INSTALLATION TIME

3-5 Hours

Professional installation recommended

SKILL LEVEL



4= Experienced

TOOLS REQUIRED

- Safety goggles
- Measuring tape
- 10 mm socket
- 13 mm socket
- 1/2" socket
- Ratchet wrench and extension
- Wire crimpers
- Wire stripper / cutter
- 3/16" hex key wrench (allen wrench)
- 4mm hex key wrench (allen wrench)
- Electrical tape
- Weather proof caulking (silicone sealer)
- Silicone spray
- 5/32" Allen Key
- T-25 Torx driver/bit
- Heat Gun

WARRANTY

5-Year Limited Warranty


NEW Brose 2 Motor Design

REALTRUCK TECH SUPPORT 1-888-983-2204 (Press 2) Monday - Friday, 8:00 AM - 5:00 PM EST

Designed and manufactured by RealTruck AMP Research® • Made in Mexico
 Patent Protected. Please see our product site for applicable patents. www.realtruck.com/b/amp-research/
 © RealTruck Group, Inc., 2026 • Five-year limited warranty. • Professional installation is recommended.


The motors must be attached to the linkage before mounting to vehicle.

Motor Install Orientation

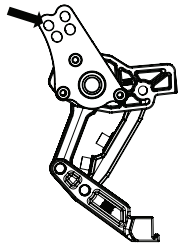


Driver Side

Motor Install Orientation

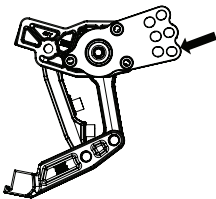

Passenger Side

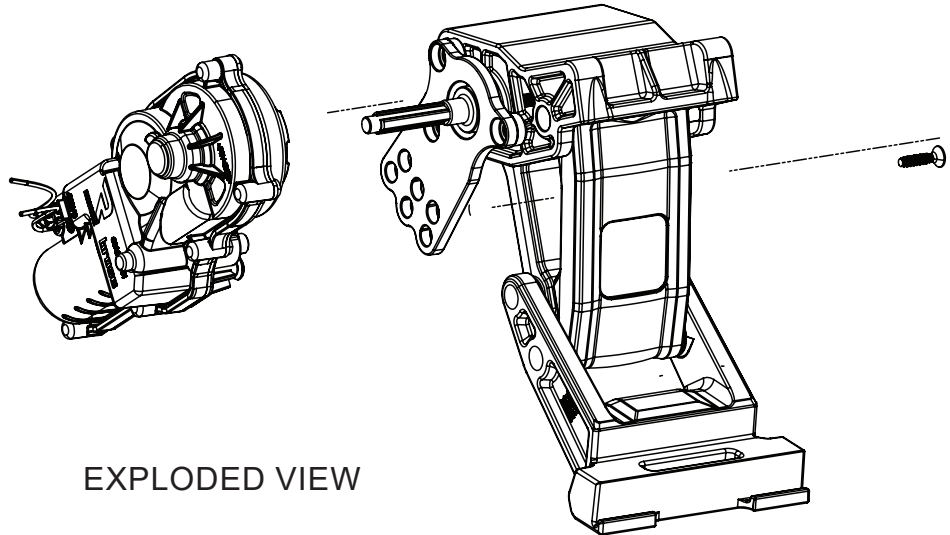

EXPLODED VIEW

- Motor
- Fastener

CAUTION: HANDLE WITH CARE.

To ensure our customers receive all components with full integrity, we pack the motors separate from their Linkage assemblies. This requires that the installer position and fasten the motor before continuing with the install. Please follow the instructions below and handle the assembly carefully.

CAUTION: Dropping the assembly or any excessive impact MAY cause damage to the motor.

Instructions:

1. Slide motor on to drive shaft.
2. Rotate motor by hand while on the shaft to position it to the mounting plate (orientation as shown above).
3. Fasten motor to the motor mounting plate using supplied PT Screw with T-25 Torx driver. Tighten screw to 60 in-lbs (6.8 N·m). **Do not over torque.**

Note:

The motor and shaft have only three possible positions. Depending on the current position of the motor, motor/shaft and the orientation of the motor plate, it may be necessary to power it in order to align it correctly with the linkage and shaft during assembly so that the motor can be mounted to the mounting plate.

To do this:


1. Power up the motor.
2. Open the door to allow the motor to spin and reposition.
3. Once the motor times out, remove the fuse.
4. Assemble the motor onto the shaft.
5. Fasten motor to mounting plate.

This process may need to be repeated to achieve the correct alignment.

PARTS LIST AND HARDWARE IDENTIFICATION

1


Running Board assembly

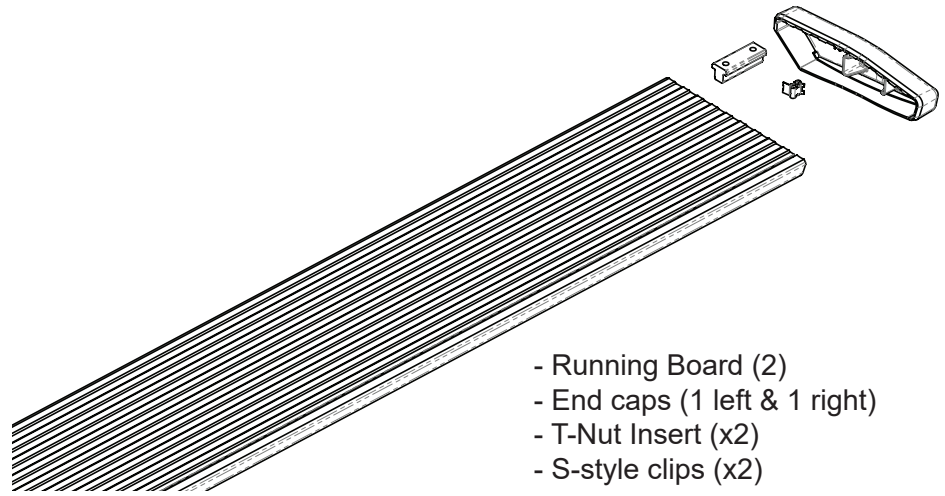

- Running Board (2)
- End caps (1 left & 1 right)
- T-Nut Insert (x2)
- S-style clips (x2)


2 x2

Rail Assembly

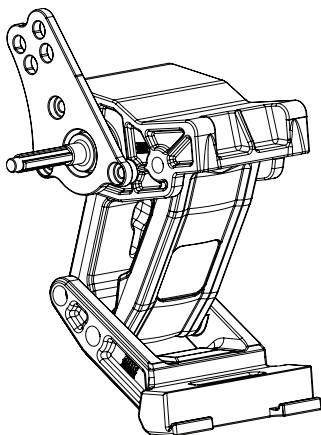


3

Motor Linkage assembly
Driver

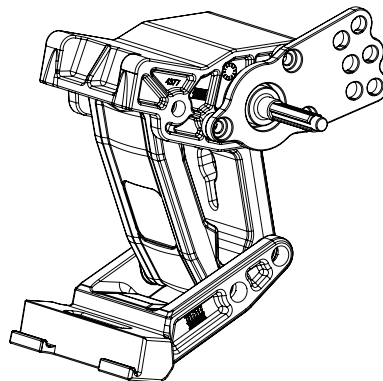

4


Motor Linkage assembly
Passenger

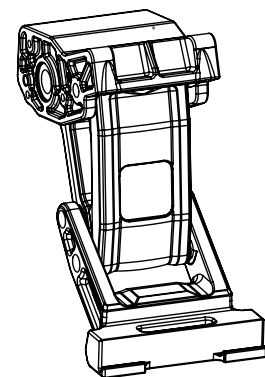

5 x2


Idler Linkage assembly

PARTS LIST AND HARDWARE IDENTIFICATION

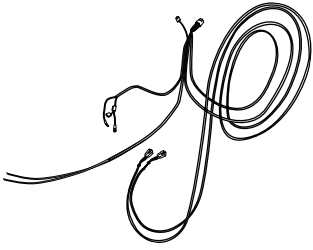


6

Wire harness

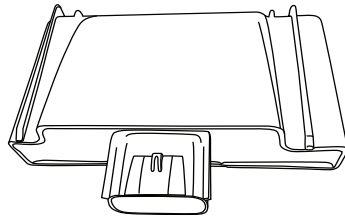


7

Controller STA

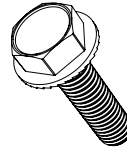


8 x8

M10 Hex Flange Bolt

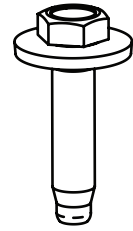

9 x8

M8 Hex Bolt w
Conical washer

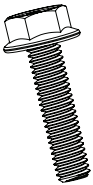


10 x4

M6 Flange Bolt




11 x8

Socket Cap Screw

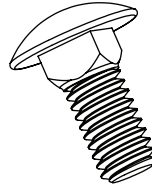


12 x12

5/16-18
Carriage Bolt

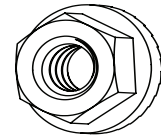


13 x12

5/16-18
Flange nut

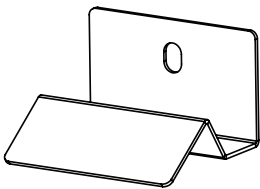


14 x4

LED Light Bracket

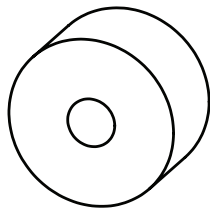


15 x4

Upper Mount
Spacer

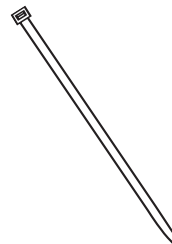

16 x20


Cable tie (7")

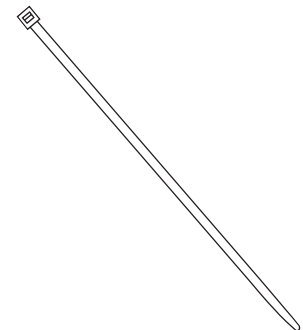


17 x2

Cable tie (11")


PARTS LIST AND HARDWARE IDENTIFICATION

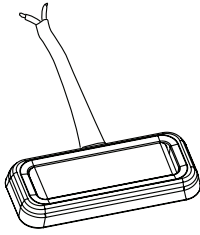


18 x4
LED Lamp

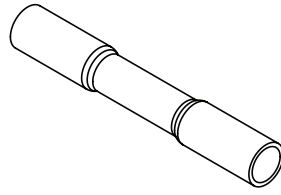

19 x8
Butt Connector

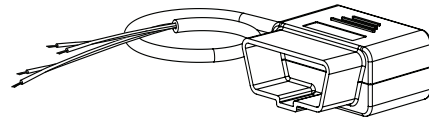


20
ODB II Plug

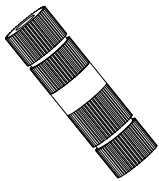


21 x2
Posi-Lock™




22 x2
Posi-Tap™
(Red)

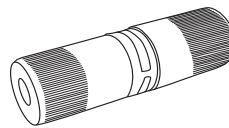


23 x4
Posi-Tite®

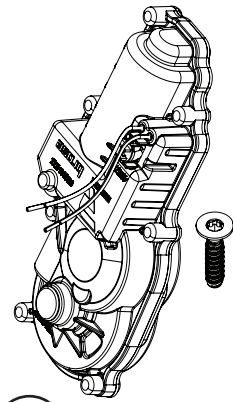


24 x2
Motor Assembly kit

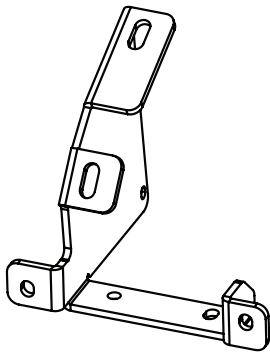


Driver Front

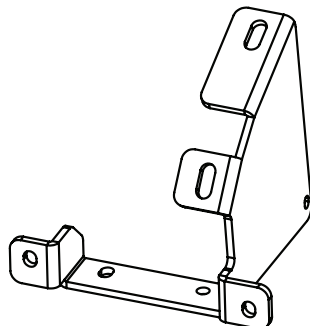

Passenger Front

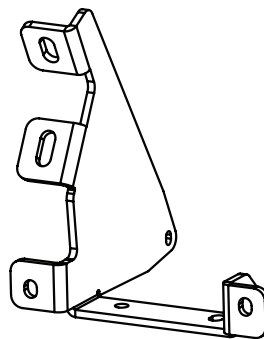


26
Rear Side Brackets

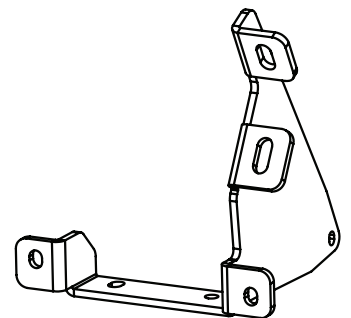

25
Front Side Brackets


Locate **Front Idler linkage** location. If plastic plugs are present remove plastic plugs to expose threads.

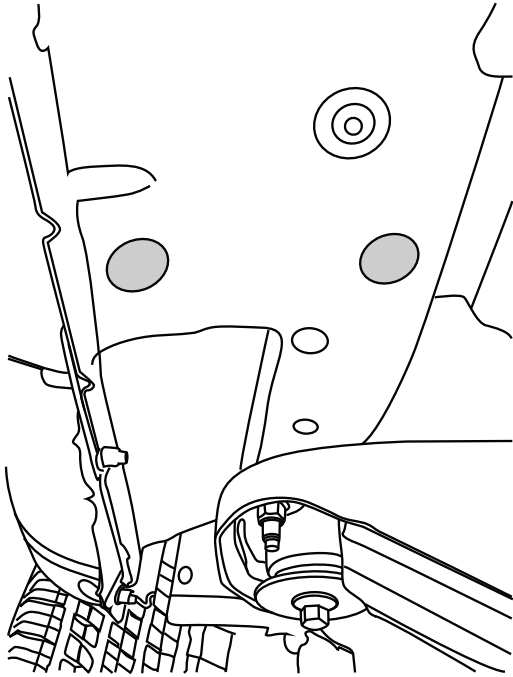

1


Attach bracket (25) using M10 Hex Flange Bolts (8).

Driver side shown.

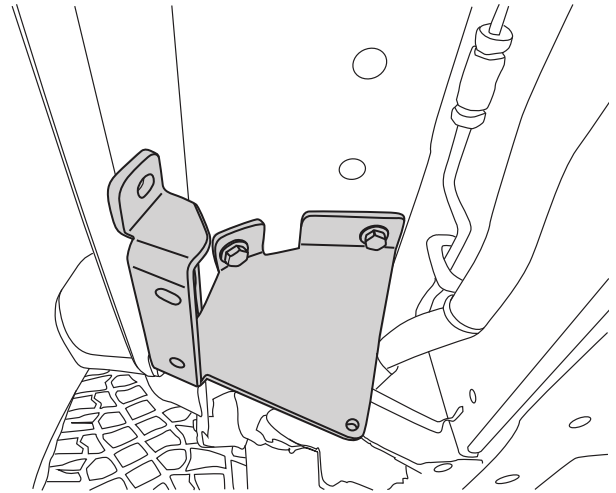

2


Locate **Rear Drive linkage** location. If plastic plugs are present remove plastic plugs to expose threads.

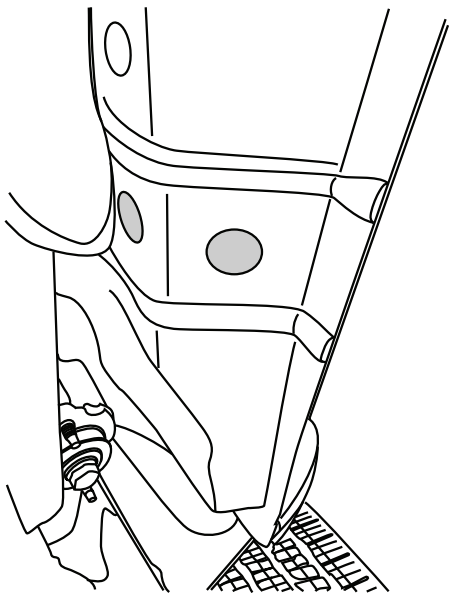

3

Attach bracket (26) using M10 Hex Flange Bolts (8).

Driver side shown.


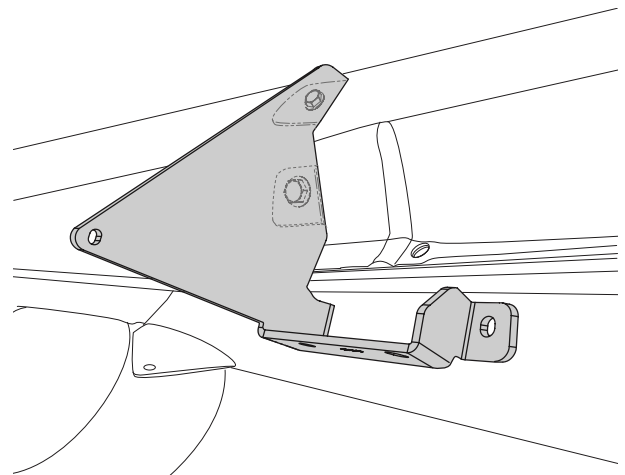


4

REALTRUCK AMP RESEARCH POWERSTEP XL™ – FORD BRONCO

Insert 6 Carriage bolts (#12) into slot on rail (#2) from either end of rail. Add Light Bracket (#14) on the 3rd and 4th bolt. Insert Flange nut (#13) onto bracket tab to attach light brackets (14) into position shown. Dimensions shown are for reference. Leave loose to allow for adjustment.

Driver side shown.

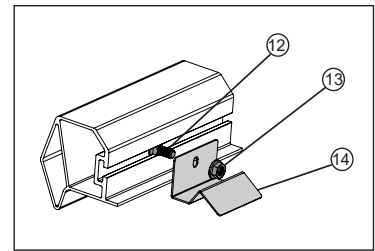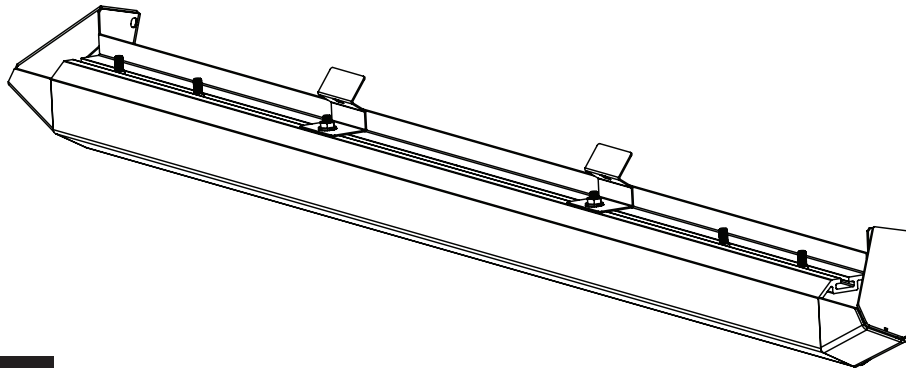


5

Set rail up into position, center in rocker panel area. Starting with the rear bracket, work towards the two front brackets. Insert Flange nut (13) to bolts to attach rail to brackets.

Start from rear of vehicle and torque 4x M10 Flange Nuts (13) to 16 ft-lbs.


Note: DO NOT TORQUE nuts holding light brackets. They will be tightened in step 17.

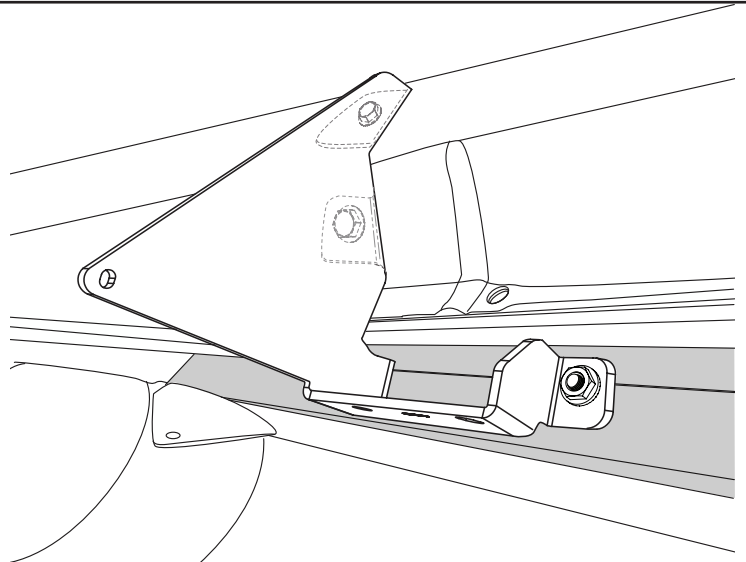

6


Mount rear drive linkage onto rear location on driver side. Thread supplied M8 Hex bolts (#9) into rear drive linkage. Repeat step for Front idler linkage.

Do not tighten.

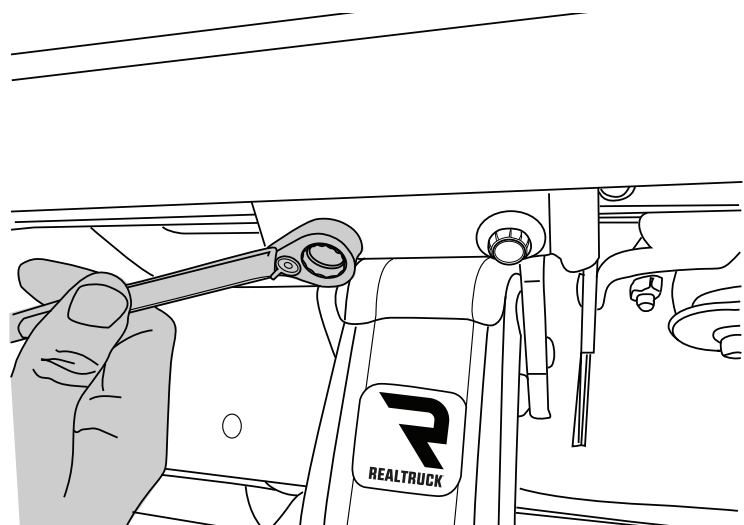


7

Install provided Spacer (15) and M6 Bolt (10) into upper mount as shown on both the Drive and Idler linkages. Do not tighten.

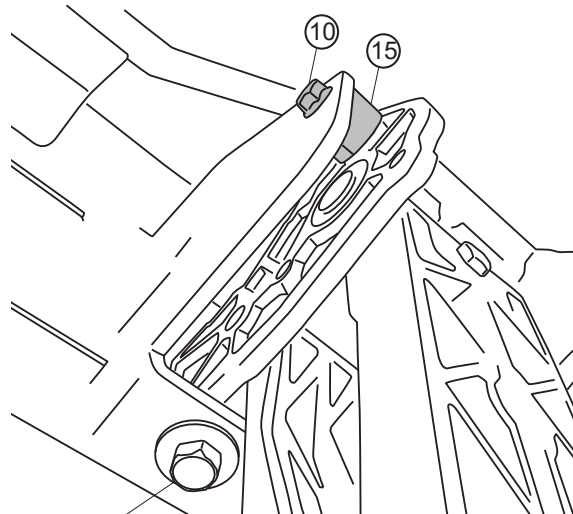


8


Slide mounting T-nut into position, Center board in rail pocket. Tighten Socket Cap screws (11) to 10 ft-lbs.

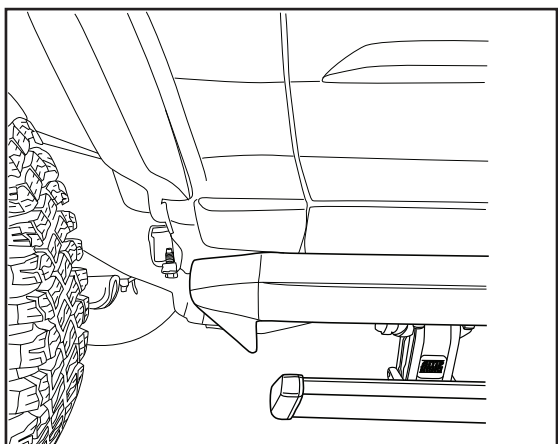

9

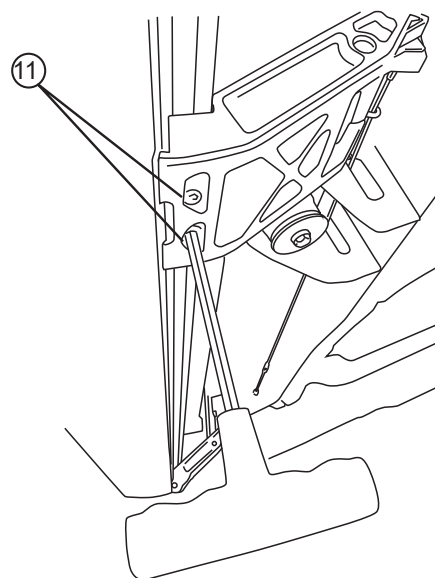

Using a 13mm socket Torque linkage bolts 4x (9) from step 5 to 16 ft-lbs. Next use a 10mm socket, torque linkage spacer bolt 2x (11) from step 6 to 8 ft-lbs.


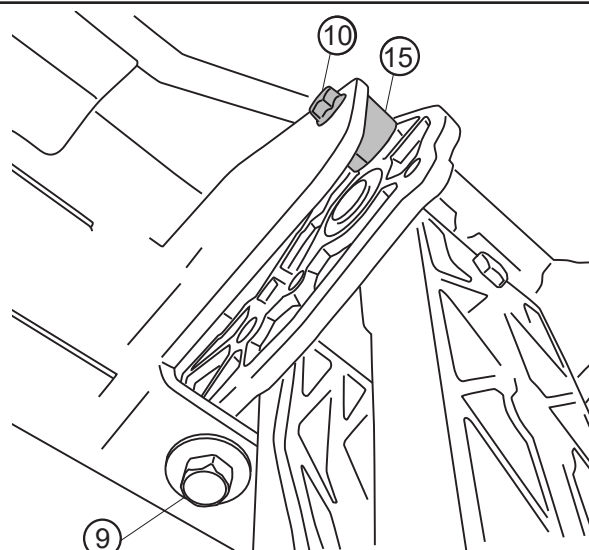


10

REALTRUCK AMP RESEARCH POWERSTEP XL™ – FORD BRONCO


Remove fuses from Power Step Wire Harness (6). Mount controller using supplied zip ties (17) to harness (6) in front of battery as shown. Connect positive leads from harness. Red to positive battery terminal and black to negative battery terminal.

Remove fuses from
Power Step Wire
Harness.

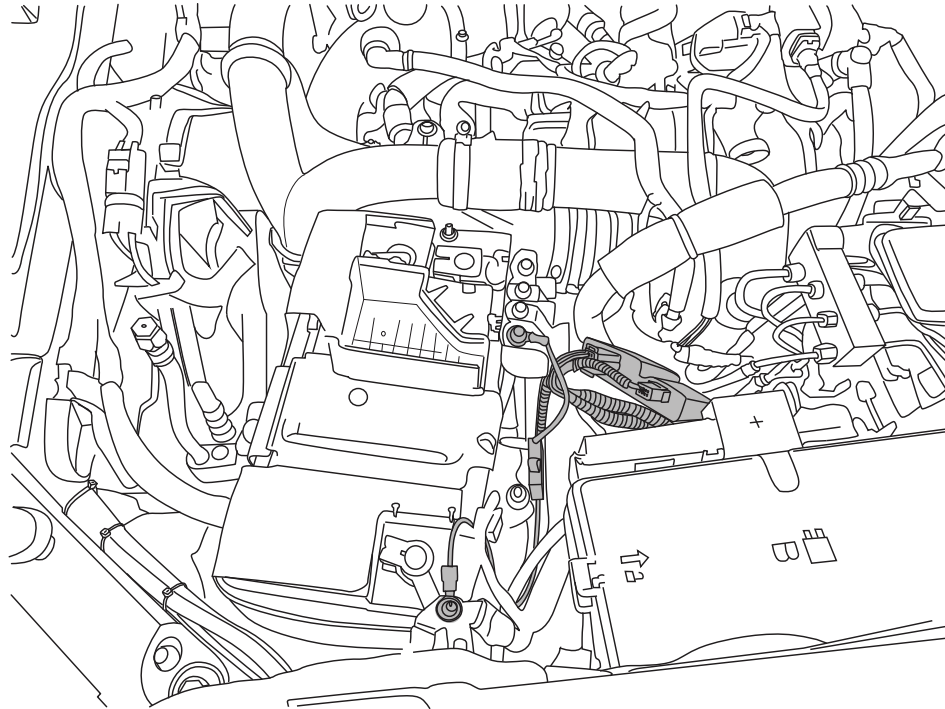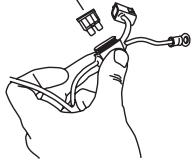


11

Route the two wire harness legs down over to each wheel well. Long leg will run across to passenger side, short leg will run down to driver side. Ensure loom is free from steering and exhaust components. Secure harness with Zip Ties (16).

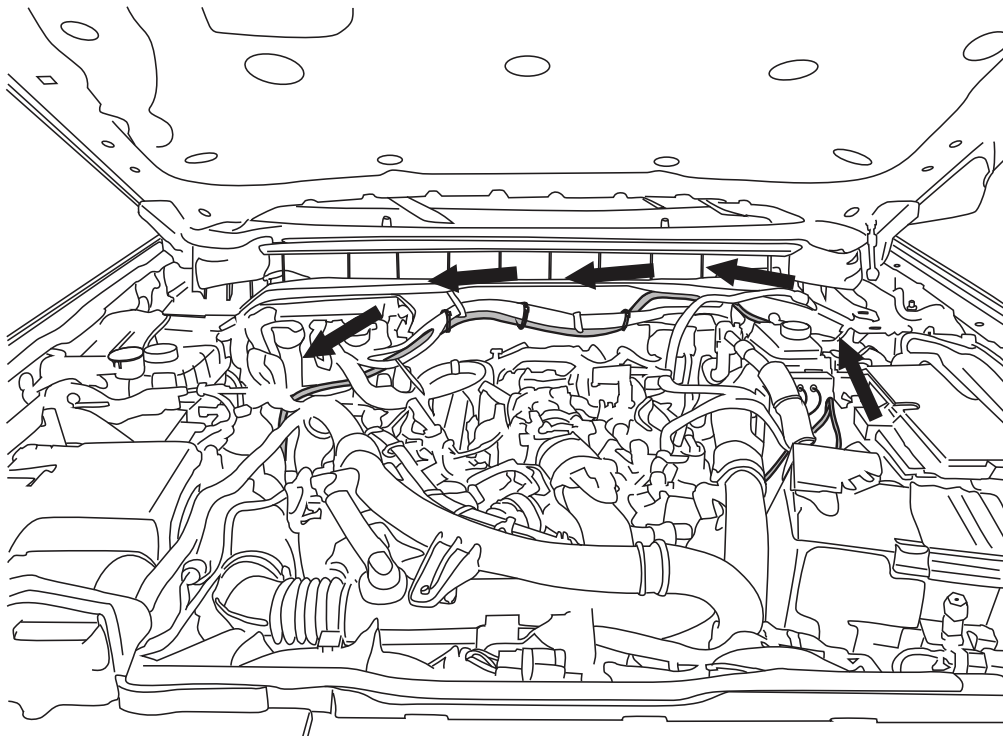



12

Locate oval grommet on driver side of firewall and push out. Poke small hole in grommet and thread trigger wires into cab of vehicle.

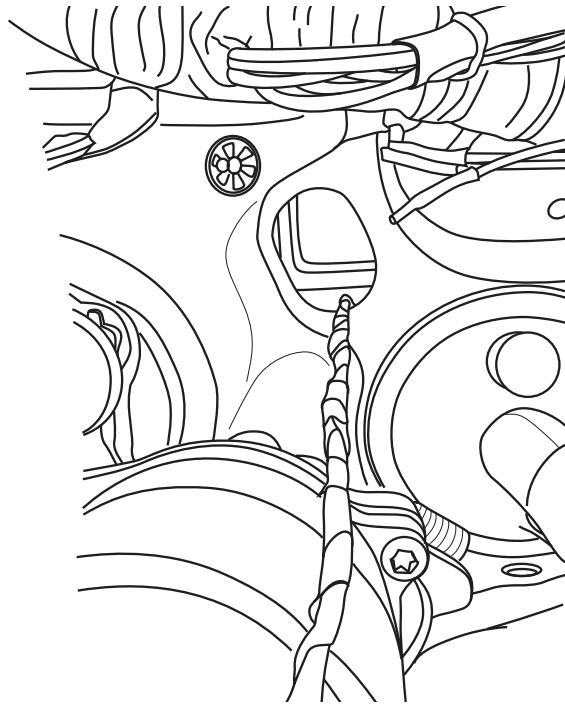

13


Locate the following wires and connect with supplied Posi-Tap™ (22) to the following wire colors listed below.

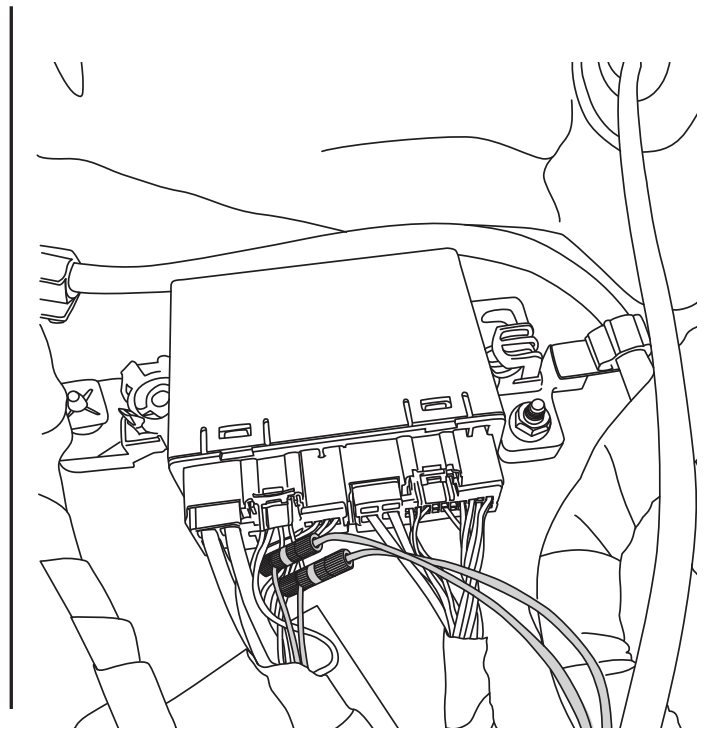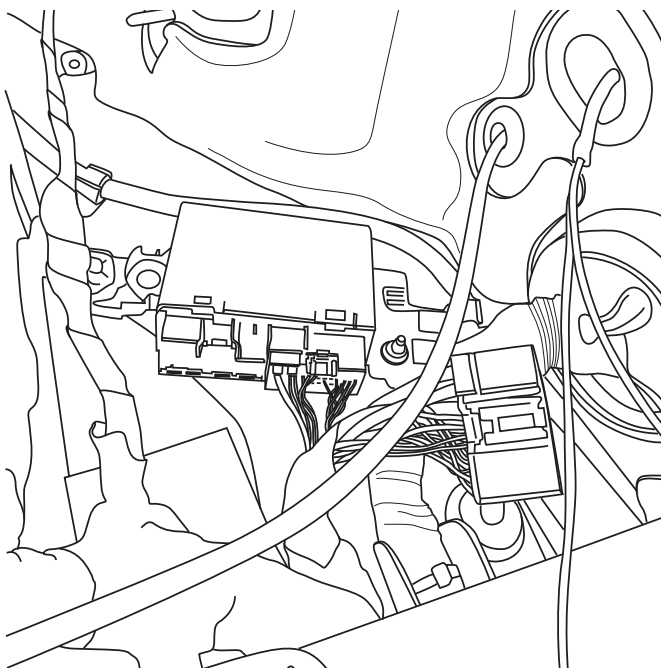


2021 - 2026	
Factory Can Wire	OBD Module Wire Color
Grey with Orange Stripe	White Wire
Purple with Orange Stripe	Blue Wire

14


Wire OBD II connector with Posi-Lock™ (21)

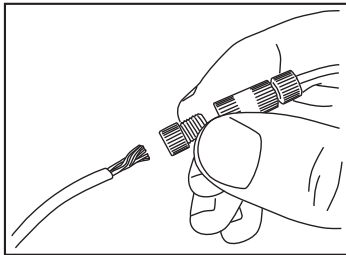

OBD II Connector located below steering column.

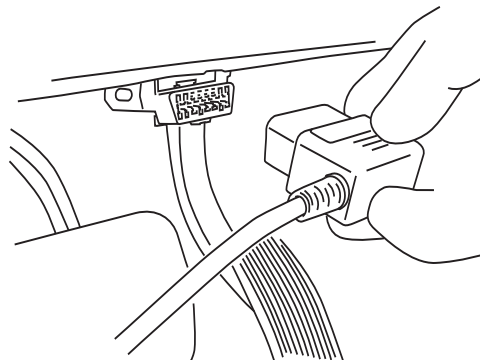

OBD II install: Use Supplied Posi-Lock™ (21) connector to attach the Plug and Play Module to the Harness. Attach matching colors on the harness to the wires on the module. Plug in module to OBD II port on the vehicle. Secure harness with supplied tie wraps. **Note: If the OBD II pass thru harness (76404-01A) was purchased see install sheet supplied in packaging. The pass through harness allows for an open port for other accessories. See below for a brief description.**

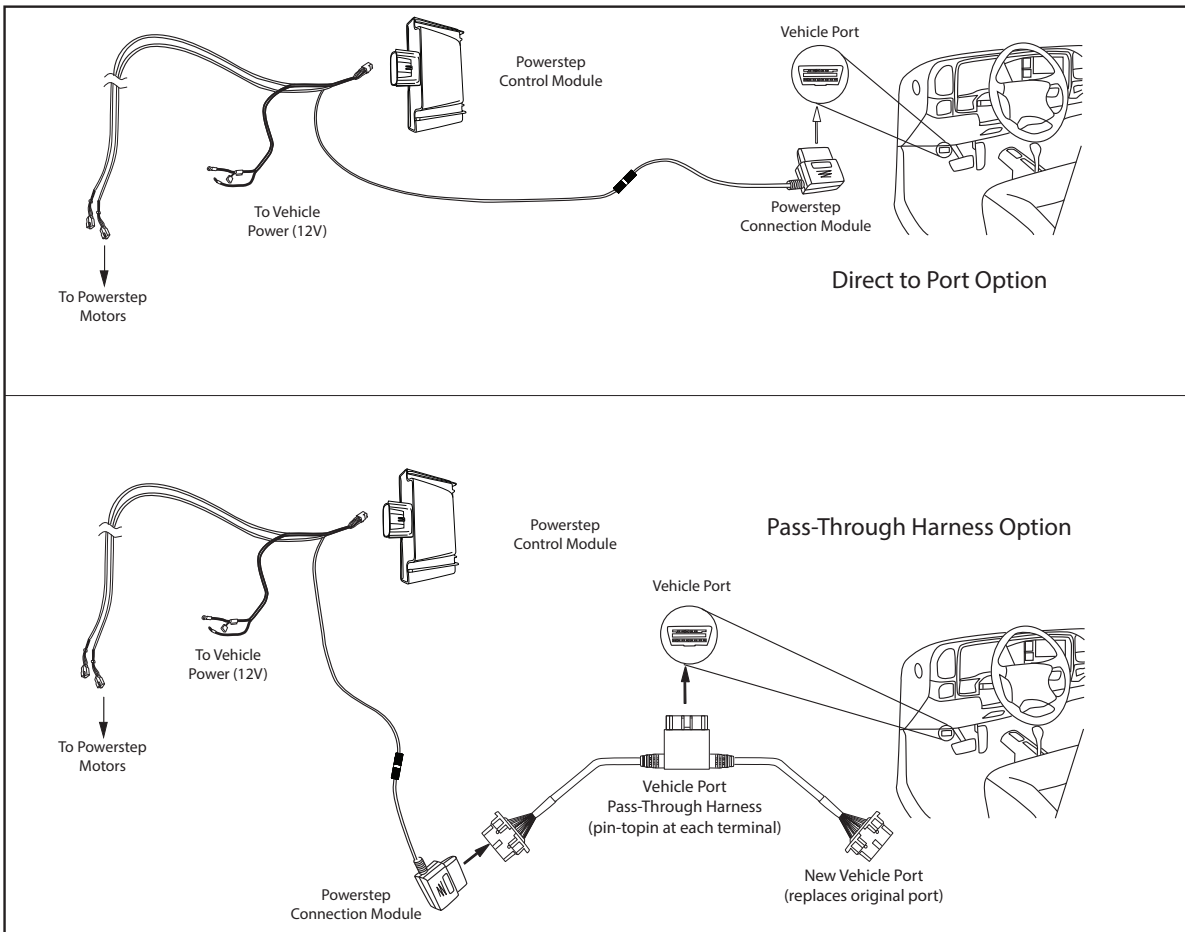

Before proceeding, see spin direction of the each motor than proceed with step A or B below.



Use Method A for driver side & Method B for passenger side for motor linkage.

A. Motor spinning the shaft clockwise direction:

- 1) First, install one Posi-Tite® (23) onto black wire from the motor. See image on right.
- 2) Install second Posi-Tite® (23) onto red with purple stripe wire from motor. See image on right.

- 3) Next, connect the white wire with black stripe from the wire harness to the other end of the Posi-Tite® (23) that is connected to the all black wire from first step above.

- 4) Connect the Posi-Tite® (23) the red with purple stripe wire from the motor with the orange with black stripe wire from the harness.

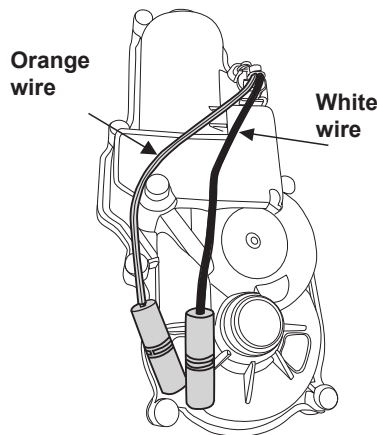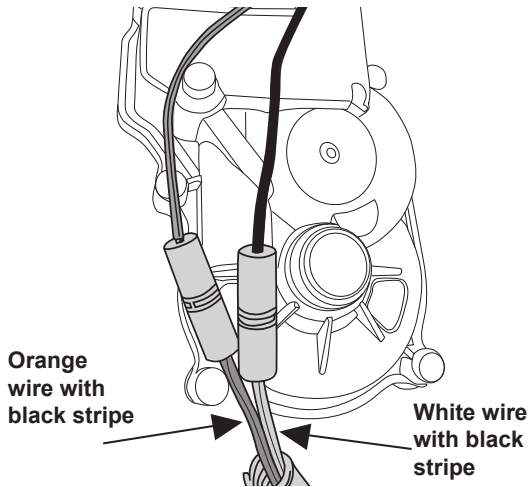

Posi-Tite® Instructions


1. Strip 3/8"



2. Push



3. Tighten


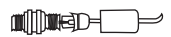


B. Motor spinning the shaft counter clockwise direction:

- 1) First, install one Posi-Tite® (23) onto black wire from the motor. See image on right.
- 2) Install second Posi-Tite® (23) onto Red wire with purple stripe from motor. See image on right.

- 3) Next, connect the orange wire with black stripe from the wire harness to the other end of the Posi-Tite® (23) that is connected to the all black wire from first step above.

- 4) Connect the Posi-Tite® (23) the red wire with purple stripe from the motor with the white with black stripe wire from the harness.

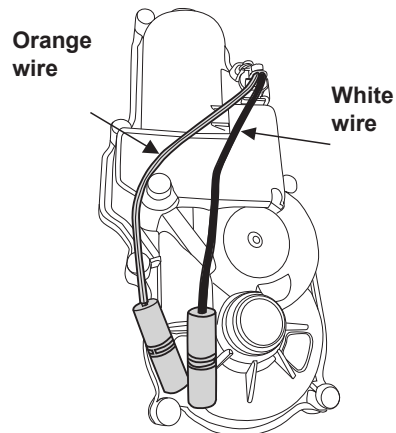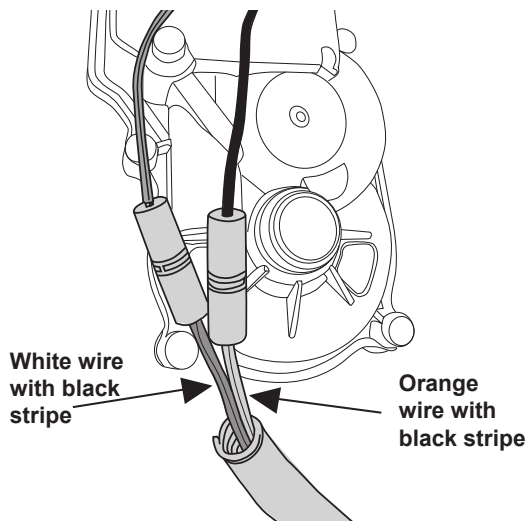

Posi-Tite® Instructions


1. Strip 3/8"






2. Push



3. Tighten


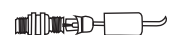


Affix LED Lamp (18) to Light Bracket (14) on rail. Slide bracket into desired position and tighten using 5/32" Allen key.

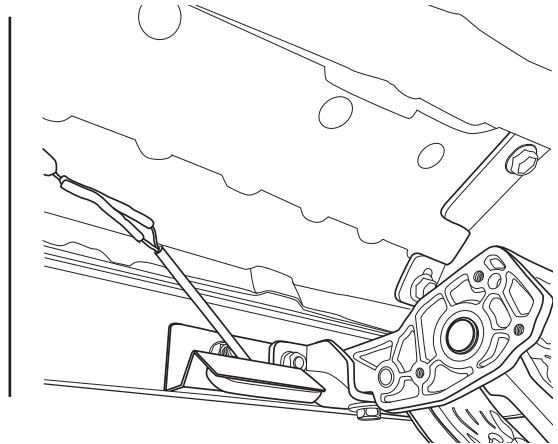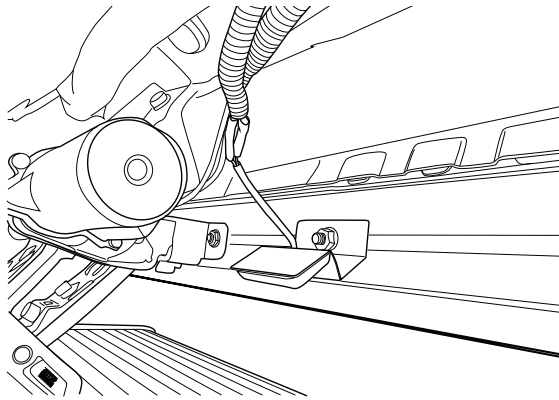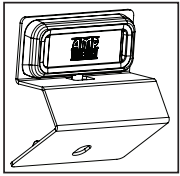


17

Using supplied butt connectors (19), connect the lamp wires. Red to Red, Black to Black. Once Crimped use heat gun to shrink tube. Close and wrap conduit with electrical tape. Secure all loose wires with zip ties (16). Pull lamp wires upward to avoid any wire snagging.

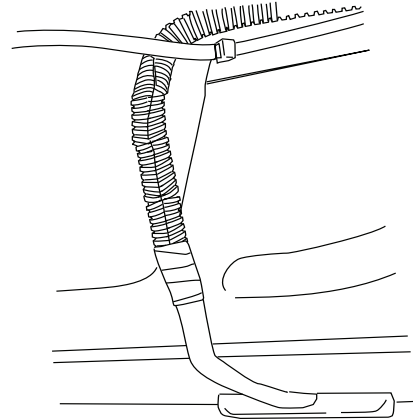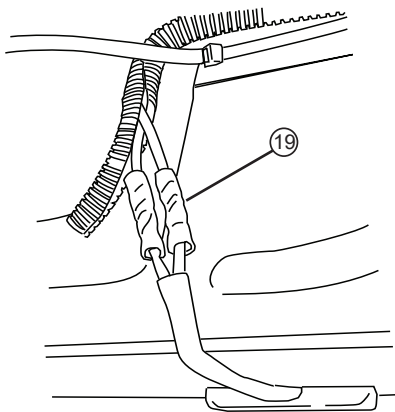


18

Reinstall Fuse.

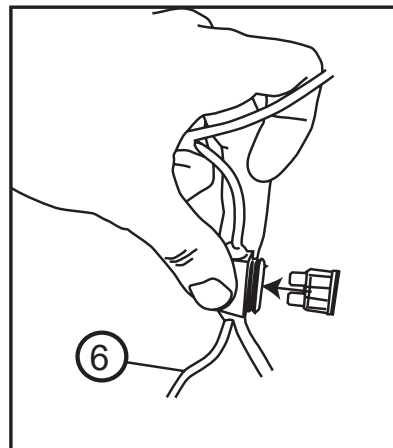

19

Check that all doors activate the Power Step and the LED Lights work when doors open and close. Reinstall any remaining trim panels.

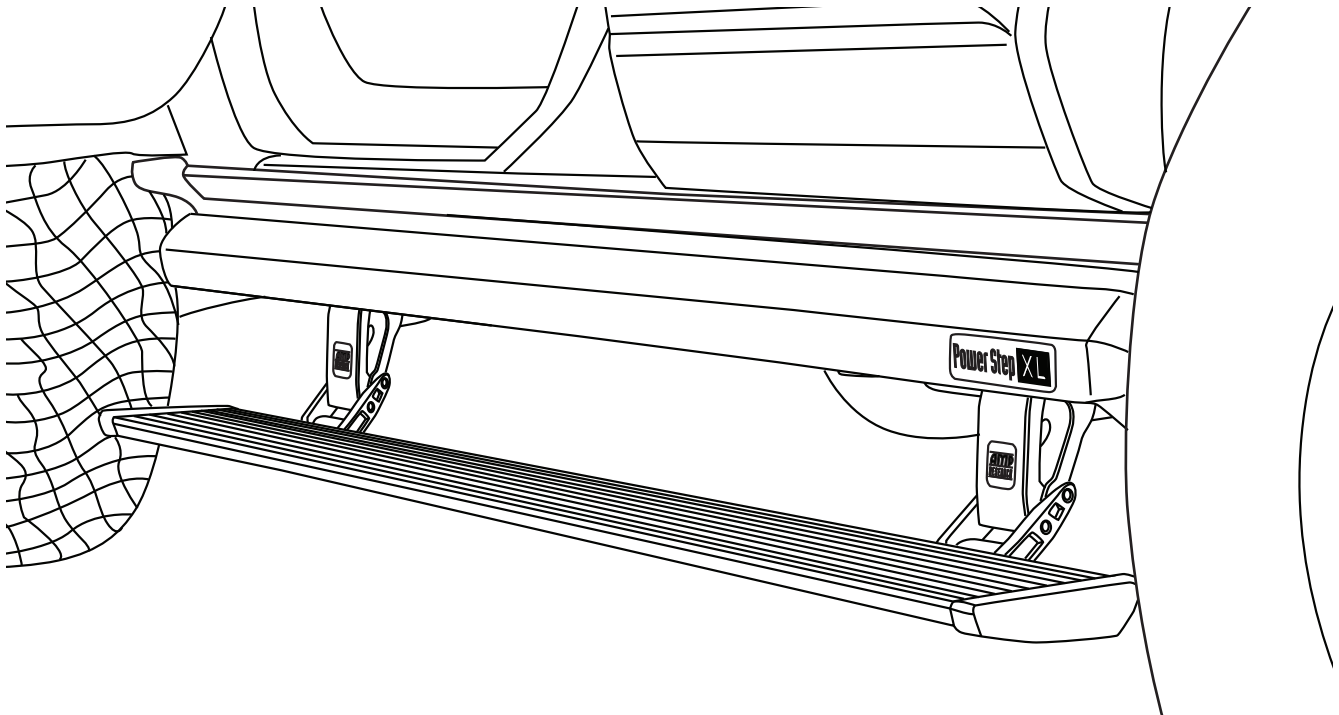

FINAL SYSTEM CHECK

Check that all doors activate the PowerStep and the LED lights work when doors open and close.

NORMAL OPERATION: When the doors open, PowerStep automatically deploys from under the vehicle.

When the doors are closed, PowerStep will automatically return to the stowed/retracted position. **Note**

that there is a 2-second delay before the PowerStep returns to the stowed/retracted position.

CORRECT OPERATION OF LIGHTS: All four lamps will illuminate upon opening any door of vehicle.

Lamps will stay on until restowing of both Power Steps or until 5 minutes has expired with the doors open.

When the lights timeout after 5 minutes, they can be reilluminated by closing and opening any door of vehicle.



AMERICAN DESIGNED & ENGINEERED

Thank you for your recent RealTruck purchase.

REGISTER YOUR PRODUCT TODAY FOR FASTER SERVICE & PRODUCT UPDATES

Please visit:

<https://realtruck.com/warranty-registration/>
or scan the QR Code



Product Registration Benefits:

- Ensure we have your purchase receipt and product info in our system which is required for warranty.
- Faster and easier access to customer service and tech support in the unlikely event you need warranty or product support.
- Registration helps us keep you up to date on product information and offers.

To view other RealTruck products that may be offered for your vehicle.

Please visit: www.realtruck.com

Rev 05.30.24

Congratulations on your purchase of the genuine RealTruck / AMP Research PowerStep! Here's what you should know...

POWER-DEPLOYABLE RUNNING BOARDS OPERATION: RealTruck / AMP Research PowerStep running boards automatically move when the doors are opened to assist entering and exiting the vehicle.



Automatic power deploy:

The running boards will extend down and out when the doors are opened.

Automatic power stow:

The running boards will return to the stowed position when the doors are closed. There will be a 2-second delay before the running boards move to the stowed position.


Automatic stop:

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.



Manually set in the deployed (OUT) position for access to the roof:

The running boards can be manually set in the deployed position by firmly holding the step down with your foot while at the same time closing the door. To resume normal operation, open and close the door.

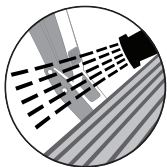

Maintenance: In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to the deployed position and flush the front and rear hinge arms with a high-pressure car wash wand.

Avoid spraying the motors directly. After washing, apply silicone spray lubricant to the hinge pivot pins. Do not apply silicone, wax or protectants like Armor All® to the running board stepping surface.

Caution! Keep hands away when the running board is in motion.

5-YEAR LIMITED WARRANTY

RealTruck / AMP RESEARCH warrants this product to be free from defects in material and workmanship for FIVE (5) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, acts by nature or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL REALTRUCK TECH SUPPORT 1-888-983-2204

WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.



The material that your product is made from can be recycled.
Please also consider recycling the packaging that your product came in.

