

# IONIC

---

## AUTOMOTIVE

# INSTALLATION INSTRUCTIONS

### PART NO.

- G1420687

### PRODUCT DESCRIPTION:

- Ionic Automotive E-Board

### VEHICLE APPLICATION

- Dodge Ram HD (Crew)
- Ram HD (Crew)
- Dodge Ram 1500
- Ram 1500



## PRODUCT SAFETY & LEGAL DISCLAIMER

- **IMPORTANT READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING, FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY.**
- **Review the product package and contents prior to beginning the installation.** Take care when opening the packaging and removing items. If a return is needed you will want to return the product in its original packaging if possible.
- This instruction guide is provided as a GENERAL installation guide, some vehicles vary dimensionally and may require additional steps.
- Test fit the product on the vehicle prior to any third party modifications and or finishing. The manufacturer and/or distributors do not accept responsibility for third party charges, labor and or third part replacement modifications. Some modifications may void the factory warranty.
- Exercise due-diligence when installing this product. The manufacturer and distributors of this product do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product. Careless installation and operation can result in serious injury or equipment damage.
- This product is for general off-road use. All liability for installation and use rests with the owner/operator.
- **INSTALLER:** Once installation is complete, please return this guide along with other documentation included in this product back to the consumer for future reference. The manufacturer/distributors of this product do not guarantee this particular version will be available at a later date.



# INSTALLATION INSTRUCTIONS

## INJURY HAZARD

Please complete a shop and tool inspection prior to beginning the installation.

- Always make sure you have a clean, dry and well lit work area.
- Always remove jewelry, loose fitting clothing and wear protective gloves and eye protection.
- Always use extreme caution when jacking or raising a vehicle for work. Set the emergency brake and use tire/wheel blocks and jack stands. Refer to the vehicle manufacturer hand book. Utilize the vehicle manufacturers designated lifting points.
- Always use appropriate and adequate care in lifting parts during disassembly and installation. Seek help in lifting heavy or large items into place. Utilize jacks and or lifting devices when available.
- Always insure products are secure during disassembly and installation.
- Always wear eye protection and take steps to protect any exposed skin during the installations. Drilling, cutting and grinding plastic and metal may create flying particles that can cause injury.
- Always use extreme caution when drilling, cutting and or grinding on a vehicle. Thoroughly inspect the area to be drilled, on both sides of material, prior to modification and relocate any objects that may become damaged.
- Always assemble and tighten all fasteners per the installation instructions.
- Always route electrical cables carefully. Avoid moving parts, parts that may become hot and rough or sharp edges.
- Always insulate and protect all exposed wiring and electrical connections.

## MAINTENANCE AND CARE

- Always perform regular inspections and maintenance on mounts and related fasteners.
- Periodically check and tighten all fasteners.
- Stripped, fractured, or bent fasteners must be replaced.
- After washing the vehicle make sure to fully dry all surfaces.
- In areas with cold temperatures make sure to wash the product often to remove harmful materials used on road ways.
- Never use abrasive cleaners or polish compounds. Clean with a gentle soap and water. If you use wax use a non-abrasive automotive wax such as pure carnauba wax.

## WARNING

Some products have been designed to work together with factory rear sensor systems, factory forward facing sensor systems and factory air bags.


- Installation of some of these products may alter the factory sensor system performance.
- Factory sensors may read shackles or hooks protruding from the fairlead and or tow hooks.
- All sensor testing is completed by Ionic Automotive Products and or third party testing labs on modified vehicles.
- Sensor sensitivity, factory sensor housing, orientation, and operating conditions are all variables that will influence functionality of the sensors.
- Installation of some product may effect the factory air bag systems.
- Some products allow the use of third party products such as winches, shackles, hooks, etc. Follow the respective manufacturers operating instructions for use with our products.
- Make sure to fully understand the product, it's intended use and operation prior to use.
- Above all... be safe!

# **IONIC**

---

## **AUTOMOTIVE**

### **INSTALLATION INSTRUCTIONS**

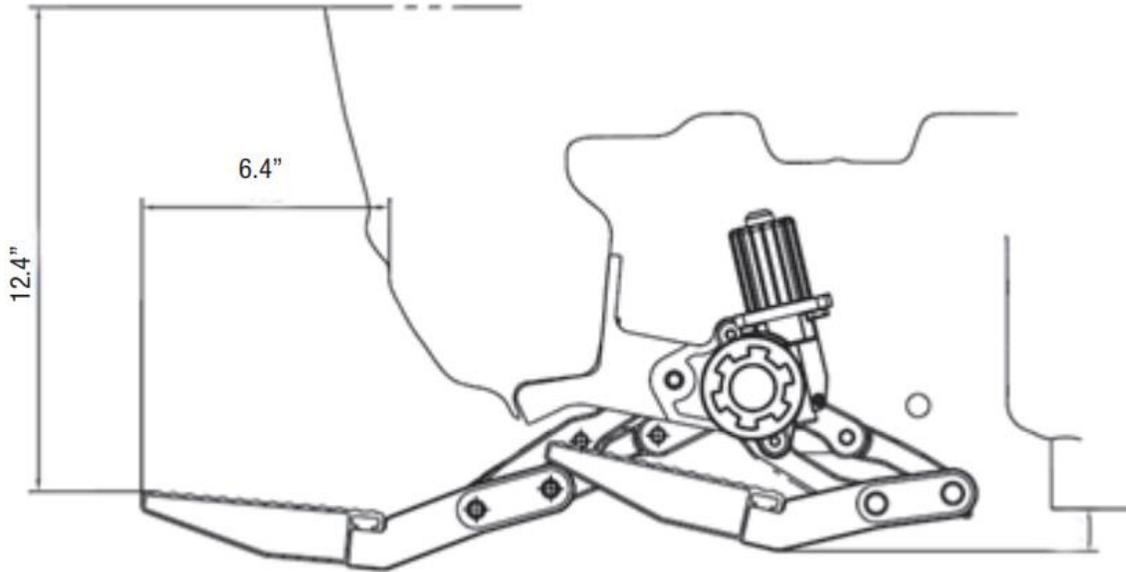

#### PRODUCT TECHNICAL SPECIFICATIONS

- Rated Voltage: 12V
- Load Rating: 600 lbs. per side
- Gross Weight: 55 lbs.
- Horizontal Extension: 6.4" (Horizontal distance between the edge of power board and the vehicle door when the board extends)
- Step Height: 12.4" (Vertical height difference between the edge of power board and the vehicle door while board extending.)

**WARNING:** Keep a minimum of 10" safe distance while the Ionic Automotive E-Board is operating to avoid any personal injury or damage to the running boards. Ionic Automotive E-Boards are not designed to provide vehicle body protection. Components can be damaged by hard impact or contact with foreign objects.

# IONIC

## AUTOMOTIVE

### INSTALLATION INSTRUCTIONS

PARTS INCLUDED IN THIS LIST:

ITEM	QTY	DESCRIPTION
A	2	BOARD
B	1	DRIVER FRONT MOTOR
C	1	DRIVER REAR MOTOR
D	1	PASSENGER FRONT MOTOR
E	1	PASSENGER REAR MOTOR
F	1	CONTROL MODULE
G	1	HARNESS
H	2	WIRED MAGNETIC INDUCTION MODULE
I	4	DOOR MAGNET
J	2	FUSE
K	14	M8 HEX BOLT
L	14	M6 HEX BOLT
M	14	NUT PLATE
N	8	SOCKET CAP SCREW
O	25	ZIP TIES

Ionic Automotive recommends you, the installer, read this installation instruction manual from front to back before installing the product. You may also [click here](https://realtruck.com/installation-instructions/) to view an installation video or visit <https://realtruck.com/installation-instructions/>.

#### TOOLS NEEDED FOR INSTALLATION:

- 5MM HEX KEY WRENCH (ALLEN WRENCH)
- 13MM SOCKET/ WRENCH
- PRY TOOL
- WIRE STRIPPER
- ELECTRICAL TAPE
- 50/50 MIX OF ISOPROPYL ALCOHOL AND WATER

ESTIMATED TIME FOR INSTALLATION:

3-5 Hours










If you need installation service for your new product, call the authorized distributor from whom you purchased the product or an authorized installation service company which can be found by calling toll free 1-888-427-4466

# IONIC

---

## AUTOMOTIVE

### INSTALLATION INSTRUCTIONS

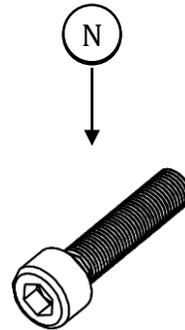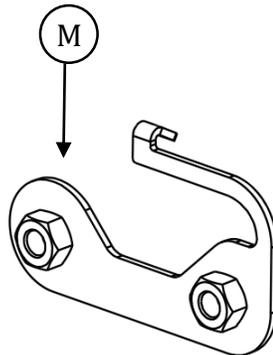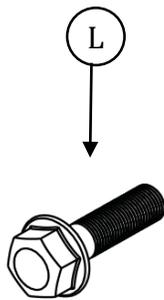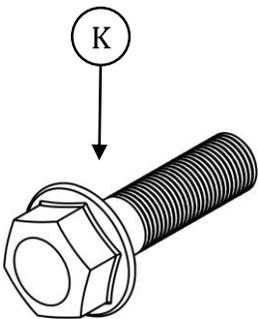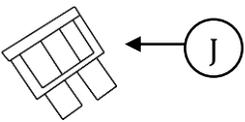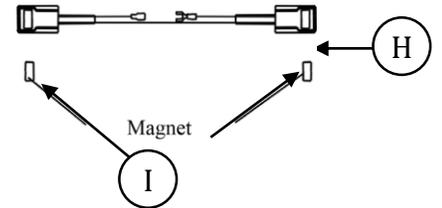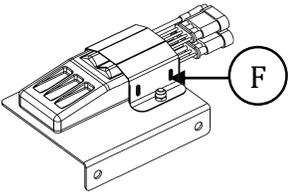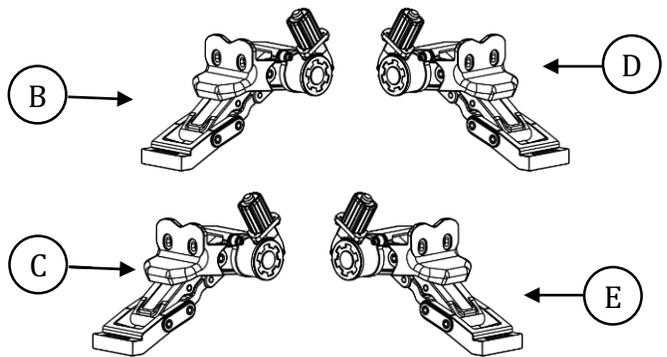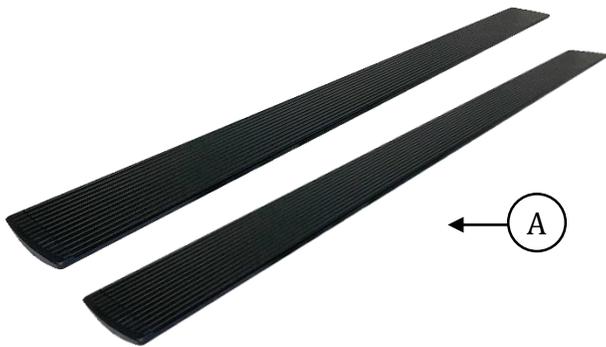


# IONIC


## AUTOMOTIVE

### INSTALLATION INSTRUCTIONS

HARNESS LEADS:

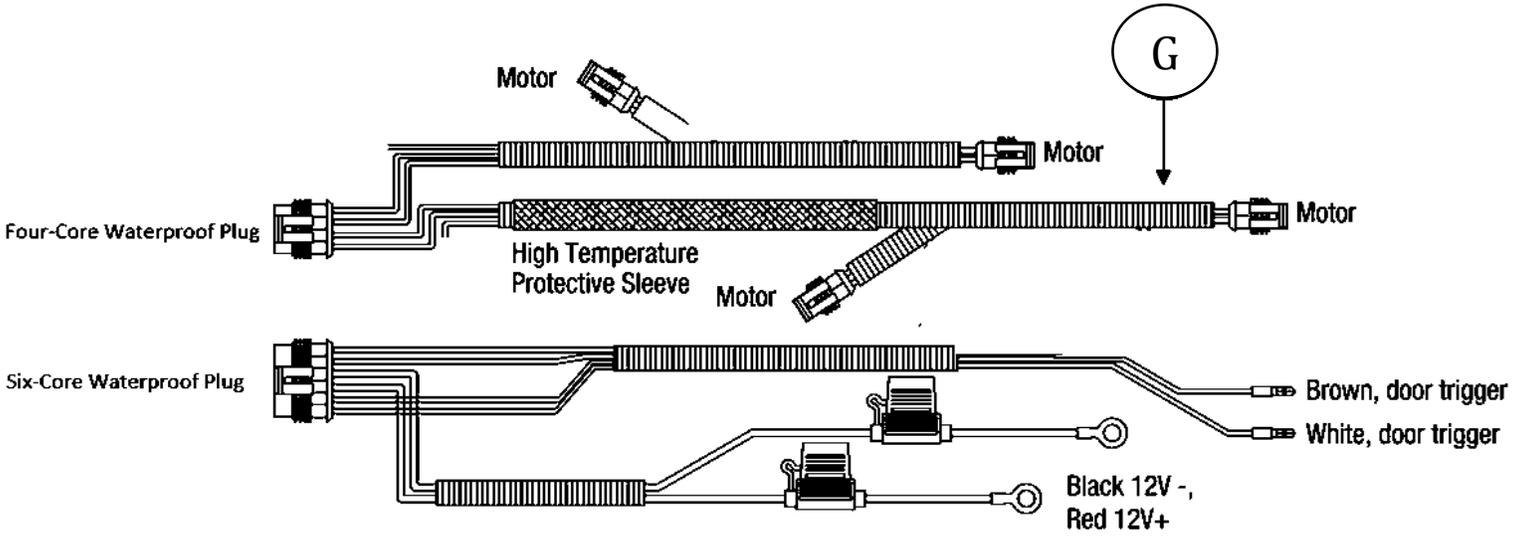

CONTROL MODULE :

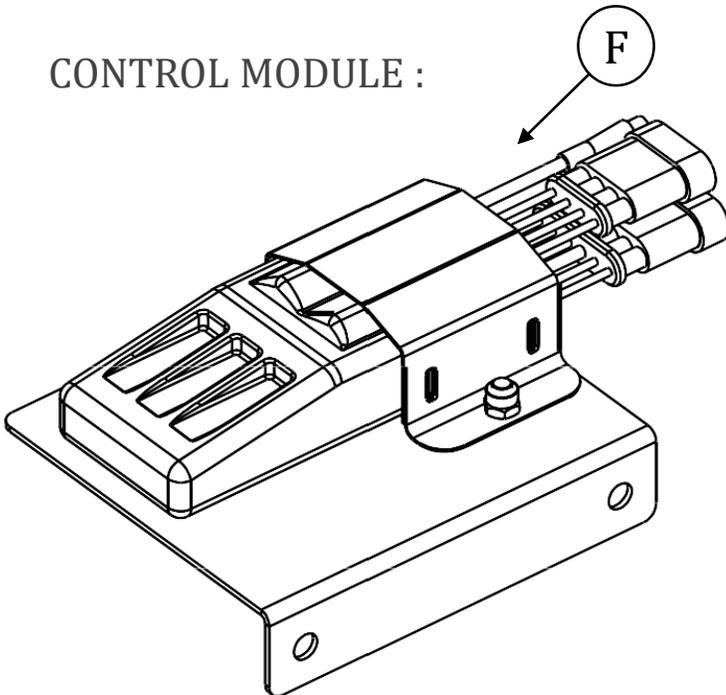


**Notice:** As shown in the picture, there is a four conductor plug, a six-conductor plug, a black two conductor plug, and a red two-conductor plug.

# IONIC

## AUTOMOTIVE


### INSTALLATION INSTRUCTIONS

#### DRIVER SIDE INSTALLATION LOCATIONS

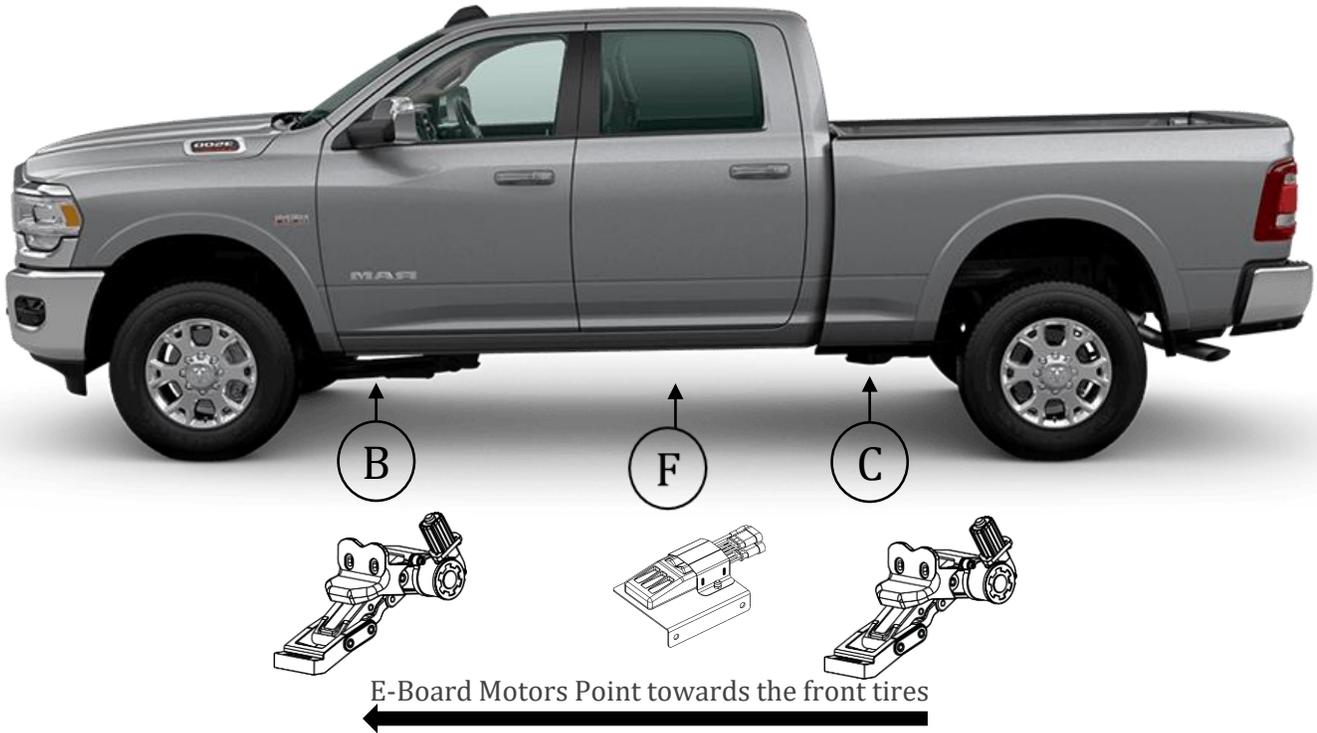

**Step 1:** Disconnect the battery. Begin with the negative battery terminal, followed by the positive terminal.

**Step 2:** Inspect the front Driver side and rear Driver side motor mounting points on the truck. If your truck is equipped with threaded inserts as shown, skip to Step 5

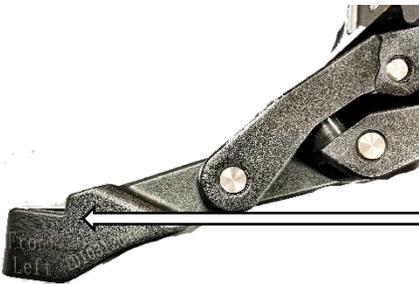

**Note:** Each motor is etched to call out what position it is installed in.


# IONIC

---


## AUTOMOTIVE

### INSTALLATION INSTRUCTIONS


DRIVER SIDE INSTALLATION LOCATIONS

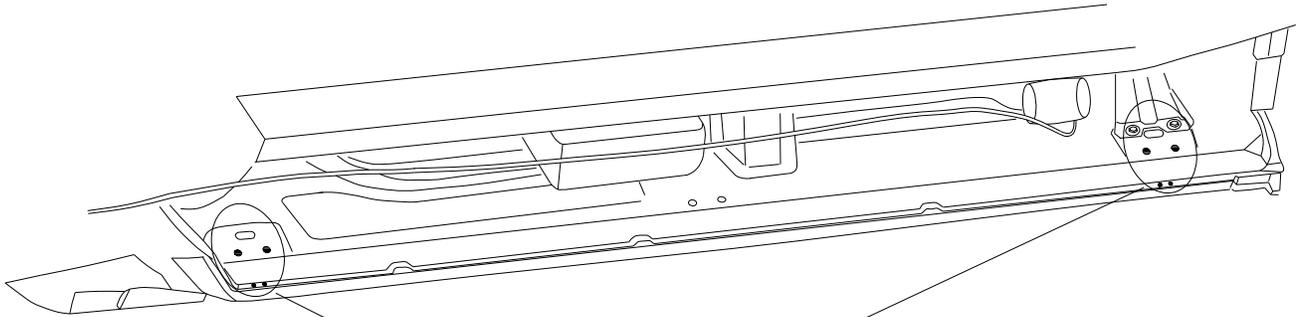

Installation position

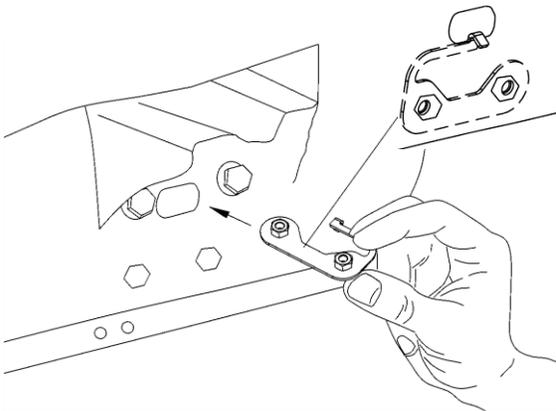

**Step 3 :** Install the Front Driver side motor using (1) Nut Plate , (2) M8 Hex Bolts. Holes that do not have factory threaded inserts will require the threaded nut bracket that is included in this kit. The hardware should be hand tightened only until snug. This will allow the motor assembly to move and align easier when installing the running board.

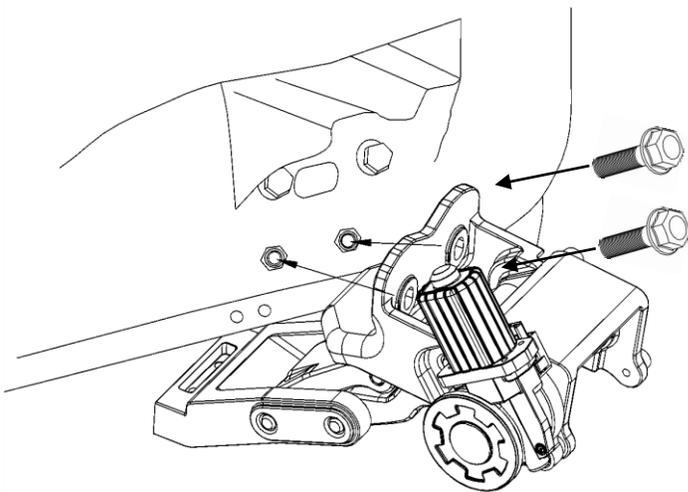

**Step 4:** Install the rear Driver side motor using (1) Nut Plate , (2) M8 Hex Bolts. Holes that do not have factory threaded inserts will require the threaded nut bracket that is included in this kit. The hardware should be hand tightened only until snug. This will allow the motor assembly to move and align easier when installing the running board.


# IONIC

---


## AUTOMOTIVE

# INSTALLATION INSTRUCTIONS

### DRIVER SIDE INSTALLATION LOCATIONS

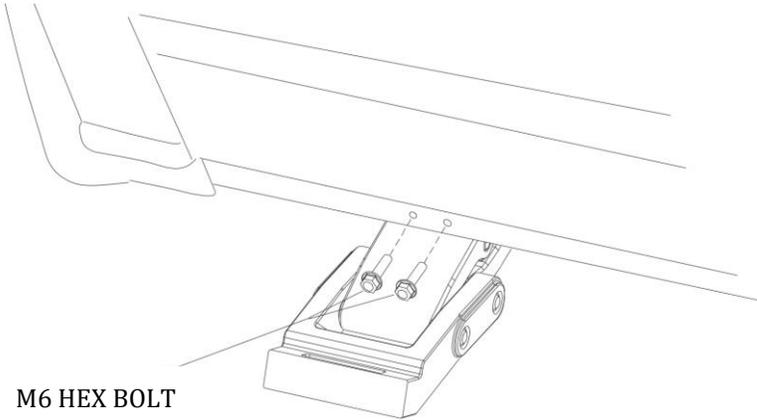

**Step 5:** Install the rear and front Driverside motor using two M6 flange bolts to fasten the motor to the pinchseam. The hardware should be hand tightened only until snug. This will allow the motor assembly to move and align easier when installing the running board.

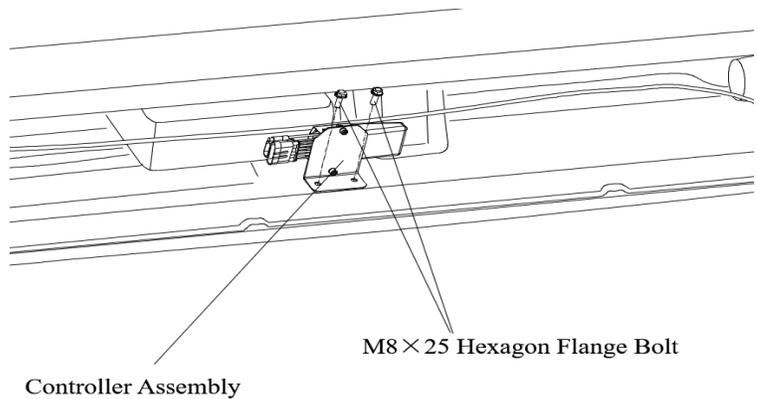

**Step 6:** :Locate factorystep mounting hole pattern just below the middle body mount on the driver side of the truck. Remove the tape covering the large slot. Introduce the threaded bracket through the slot and let it hang from the small tab as shown. Install the controller bracket using two M8 flange bolts.


# IONIC

---

## AUTOMOTIVE

# INSTALLATION INSTRUCTIONS

## DRIVER SIDE INSTALLATION LOCATIONS

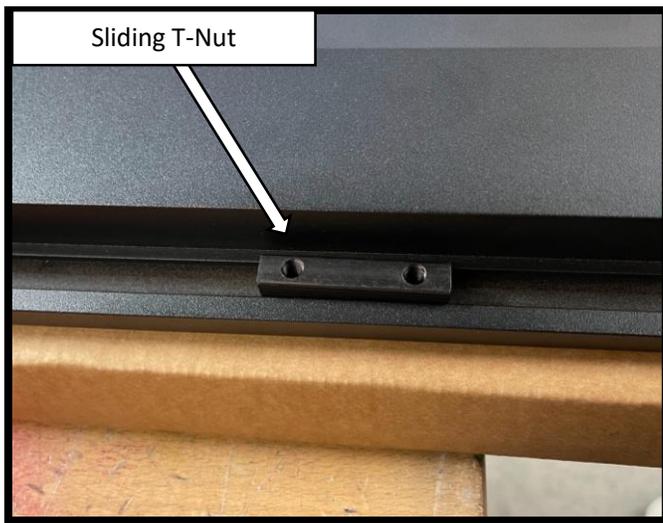

**Step 7:** Install the Driver side running board. With assistance, begin by positioning the board on the front and rear motor assembly bases. Align the sliding T-Nut on the running board with the slots on the front and rear motor base. Once the T-Nuts are aligned, rotate the running board so that the T-Nuts set in the slots on the base of the arms. Repeat Steps 3-6 to install the motor linkage assemblies and running board on the Passenger side.



**Step 8:** Determine where you want to position the board and secure the running board to the arms using the (2 per bracket) M6x25 socket head cap screws. Using a torque wrench, tighten to 9 ft-lbs. Step # With the running board is installed, fasten the hardware on the Driver side front and rear motor assemblies. Using a torque wrench, tighten the mounting hardware to 18 ft-lbs.




# IONIC

---

## AUTOMOTIVE

### INSTALLATION INSTRUCTIONS

#### PASSENGER SIDE INSTALLATION LOCATIONS

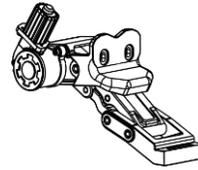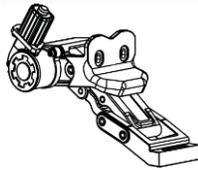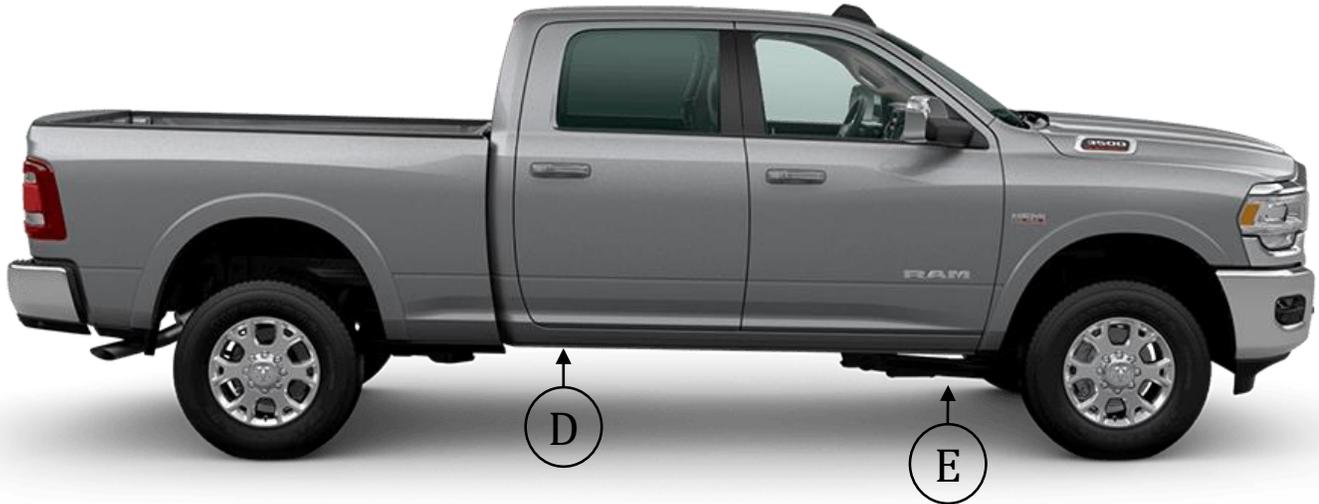

E-Board Motors Point towards the front tires







**Step 9:** Repeat Steps 2-5 to install the motor linkage assemblies. Repeat steps 7-8 to install running board on the Passenger side.

# IONIC

## AUTOMOTIVE

### INSTALLATION INSTRUCTIONS

Wiring your E-Boards

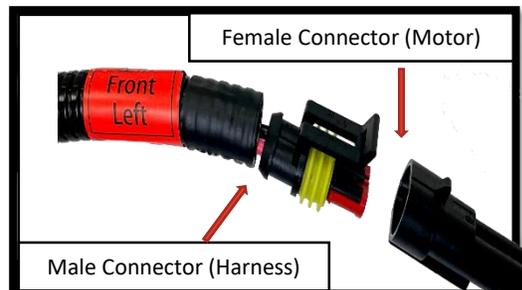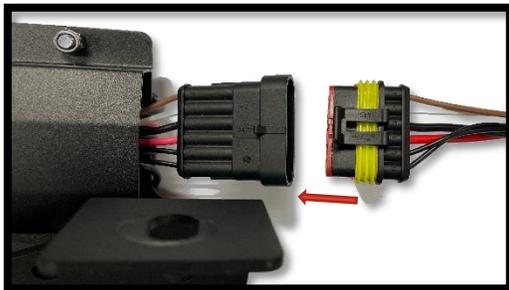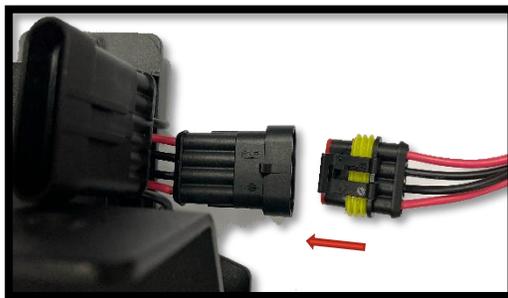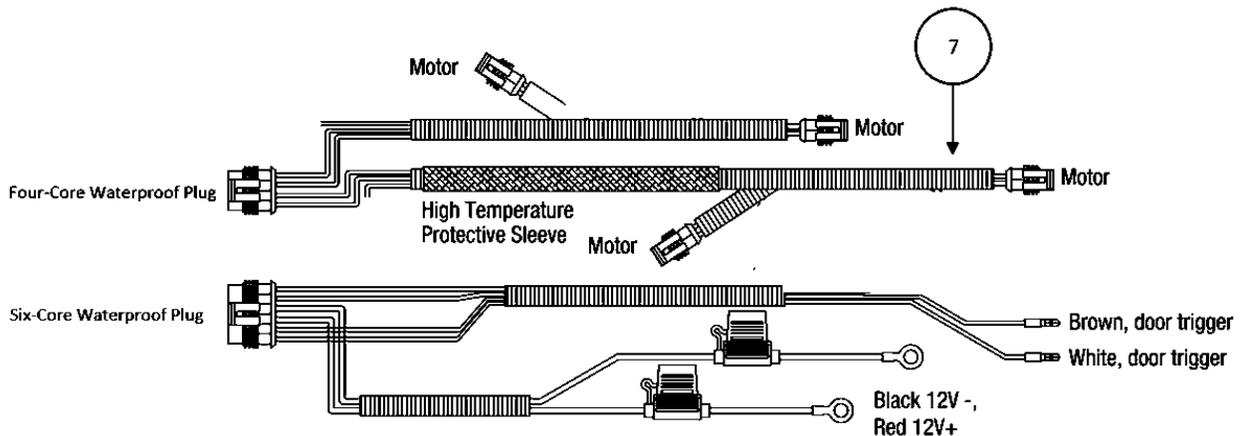

**Step 10:** With the control module installed, plug in the harness connectors to the corresponding connectors. Route the electrical harness from the controller along the frame rail of the truck. Connect the male plug connector on the wire harness into the female socket on the motors. The harness is labeled to show where to plug each male connector to the female connector. For example, Front Left is for the front Driver side motor and Rear Left for the rear Driver side motor. Use supplied zip-ties to secure harness to the frame rail.

**Step 11:** Connect the male plug connector on the wire harness into the female socket on the motors. The harness is labeled Front Right for the front Passenger side motor and Rear Right for the rear Passenger side motor.


# IONIC

---



## AUTOMOTIVE

### INSTALLATION INSTRUCTIONS

#### Wiring your E-Boards

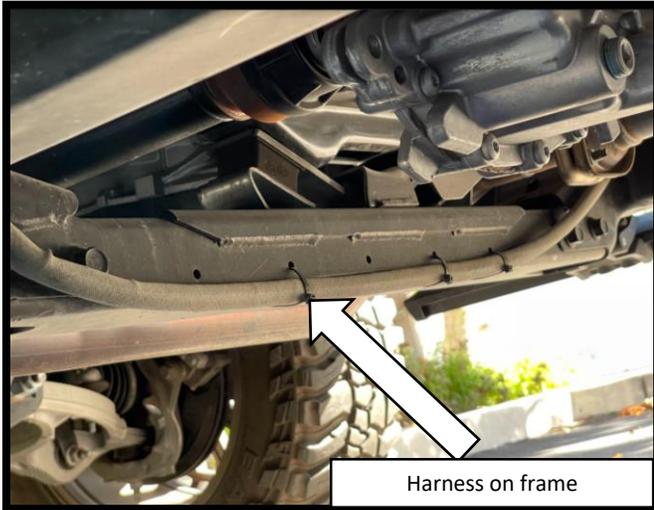

**Step 12:** Route the motor wire harness from the controller to the Passenger side frame rail of the vehicle. When routing the harness keep clear from any moving parts and avoid direct contact with the exhaust system.

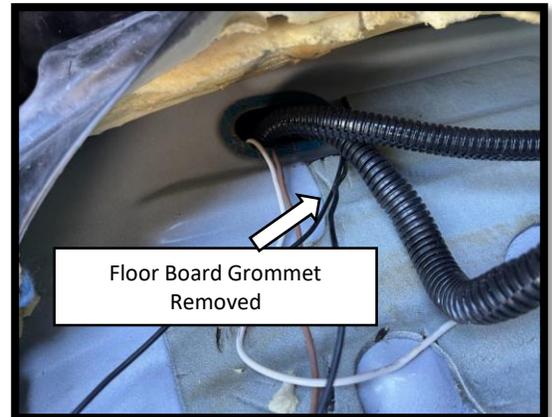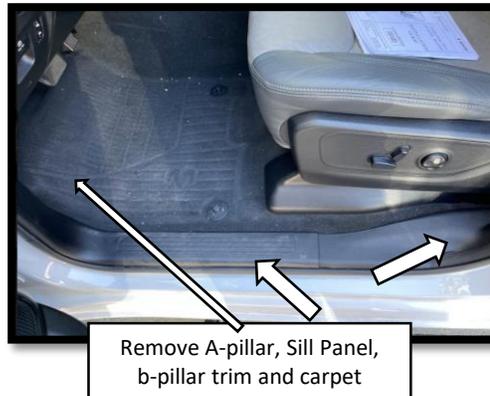


**Step 13:** On the driver side, remove the front kick panel, front door sill trim panel, b-pillar trim panel and pull the front driver carpet back. Now go under the truck and locate the plastic grommet on the driver side floorboard. Drill a 7/16" hole as shown. Make sure not to drill through the carpet.

# IONIC


## AUTOMOTIVE

### INSTALLATION INSTRUCTIONS

Wiring your E-Boards

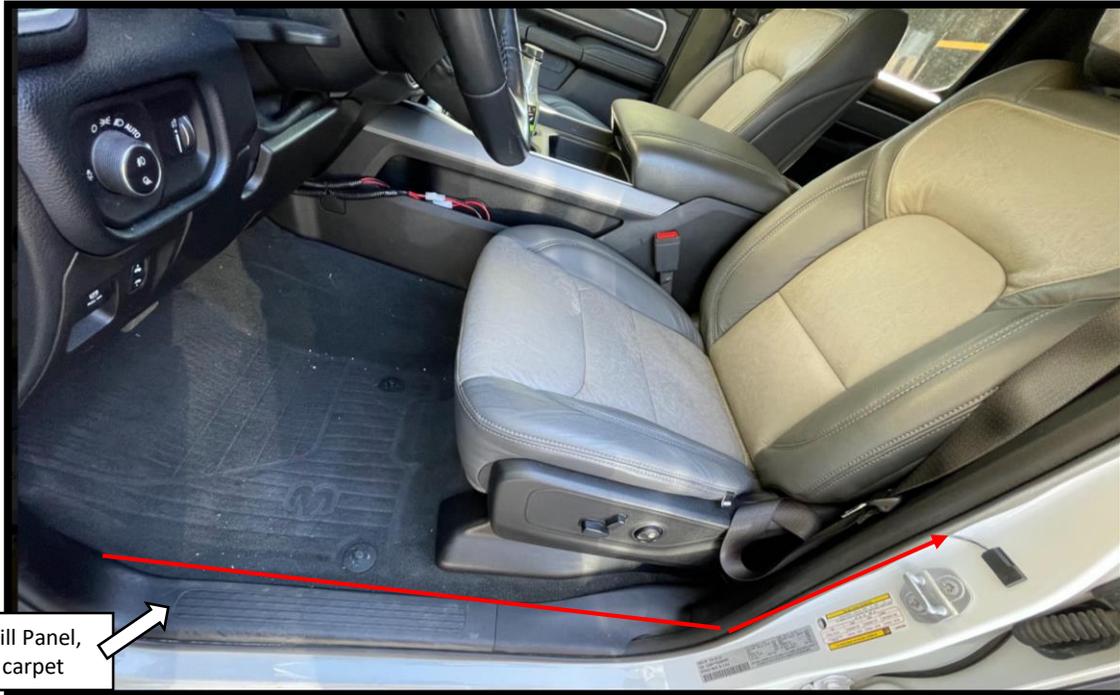


**Step 14:** Route the Driver side door trigger wire (brown) towards the Driver side b-pillar. Route the Passenger side door trigger wire (white) under the center console and over to the Passenger side b-pillar. Route the black disable switch wires to the center console.

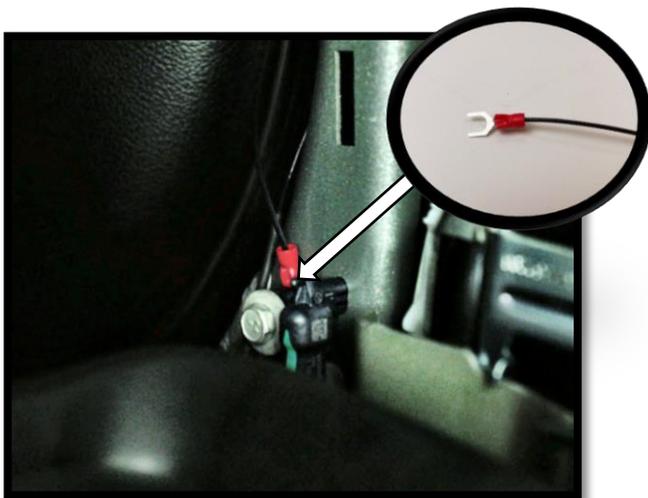

**Step 15:** The door trigger sensor harness will need a ground connection to the vehicle. Locate the hex head screw near the seatbelt assembly and install the ground under the plastic housing as shown.

Connect the snap-in bullet connector to the brown wire on the Driver side b-pillar

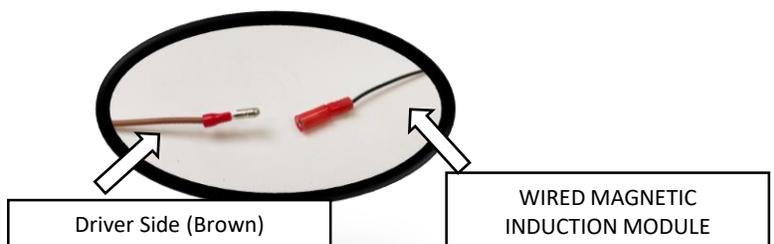

# IONIC

---


## AUTOMOTIVE

# INSTALLATION INSTRUCTIONS

## Wiring your E-Boards



**Step 16:** FRONT DOOR: With the weatherstrip peeled back, route the sensor wire underneath it. Clean the surface by cleaning with a 50/50 mix of isopropyl alcohol and water or equivalent. Once the surface is completely dry, peel the backing from the double-sided tape and stick the sensor on the door jamb. Align the top of the sensor with the 2"

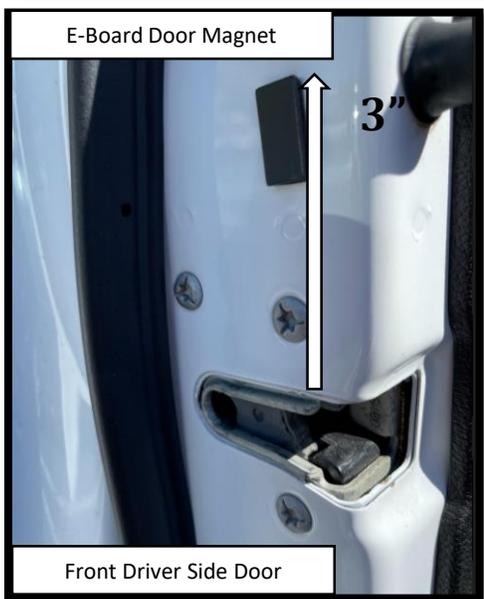

**Step 17:** With the front driver side sensor attached, you can determine the correct position for the door magnet. peel the backing from the double-sided tape and stick the magnet on the door. Align the bottom of the magnet with the 3"

# IONIC

---

## AUTOMOTIVE

### INSTALLATION INSTRUCTIONS

#### Wiring your E-Boards




**Step 18:** REAR DOOR: With the weatherstrip peeled back, route the sensor wire underneath it. Clean the surface by cleaning with a 50/50 mix of isopropyl alcohol and water or equivalent. Once the surface is completely dry, peel the backing from the double-sided tape and stick the sensor on the door jamb. Align the top of the sensor with the 4 1/8"



**Step 19:** With the rear driver side sensor attached, you can determine the correct position for the door magnet. peel the backing from the double-sided tape and stick the magnet on the door. Align the bottom of the magnet with the 4 1/2"

**Step 20:** Repeat steps 16-20 to install the Passenger side door trigger sensors and magnets. The Passenger side door trigger harness is connected to the white wire that was routed under the carpet to the Passenger side b-pillar in Step 16

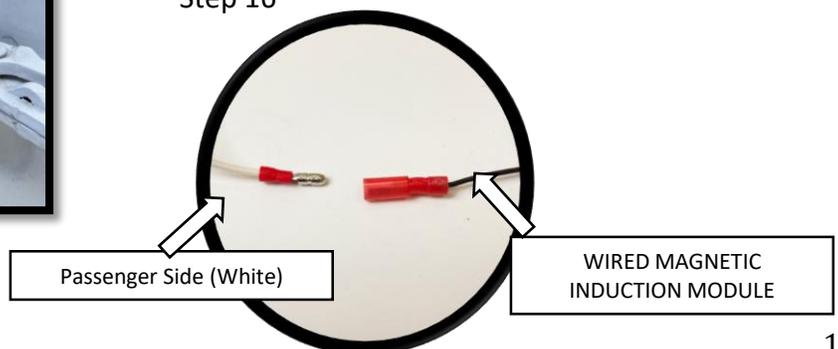

# IONIC


---

## AUTOMOTIVE

# INSTALLATION INSTRUCTIONS

## Wiring your E-Boards

**Step 21:** Remove the 20 Amp fuses from the main positive and negative 12V power leads on the main harness. Route the power wires over the wheel well and into the engine compartment. Connect the ring terminals to the battery positive and negative terminals. Install the 20 Amp fuses back into the main negative and positive power lead fuse holders. Connect the battery terminals. Begin with the positive terminal followed by the negative terminal.

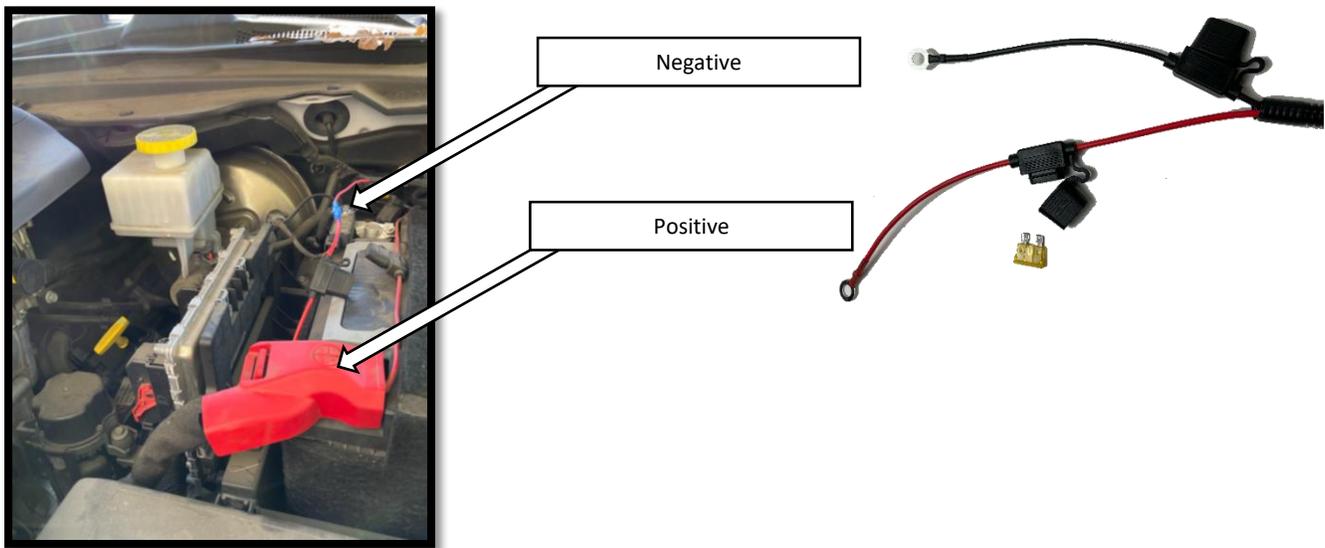



# INSTALLATION INSTRUCTIONS

## LIMITED WARRANTY

Ionic Automotive warrants to Buyer that for a period of five (5) years from the date of shipment of the product(s) ("Warranty Period") for black finishes and chrome finishes, that such products will materially conform to the specifications set forth in Ionic Automotive's specifications in effect as of the date of shipment(s) and will be free from material defects in material workmanship.

Ionic Automotive warrants to Buyer that for the life of the product(s) from the date of shipment of the product(s) ("Warranty Period") for polished stainless steel finished products purchased after April 2004, that such products will materially conform to the specifications set forth in Ionic Automotive's specifications in effect as of the date of shipments and will be free from material defects in material workmanship.

Warranty claims must be accompanied with the original invoice and photos of the product. It is the customer's responsibility to clean regularly and protect finish with regular applications of a nonabrasive polish that is compatible with the product's finish.

This warranty covers the cost of the product only and does not include the cost of removal, installation, third party modifications or shipping of the product. In no event shall Ionic Automotive be liable to buyer or any third party for any damage or harm caused by the product or use thereof, regardless of weather such damages were foreseeable and whether or not Ionic Automotive has been advised of the possibility of such damages, not withstanding the failure of any agreed or other remedy of its essential purpose. This warranty is void if the product shows signs of alteration, misuse, mishandling, improper care, neglect, improper application and/or damage due to improper installation.

With respect to any such product(s) during the limited warranty period, Ionic Automotive shall, in its sole discretion, either: (i) provide a one-time repair or replacement of such products (or the defective part) or (ii) credit or refund the price of such products at the pro rata contract rate provided that, if Ionic Automotive so requests, Buyer shall, at Ionic Automotive's expense, return such product(s) to Ionic Automotive. The remedies shall be the Buyer's sole and exclusive remedy and Ionic Automotive's entire liability for any breach of the limited warrant(ies).

Ionic Automotive disclaims all other warranties except to the extent that any such warranty cannot be validly disclaimed under applicable law.

### Finish Limited Warranty:

Limited lifetime on stainless steel products (after April 2004)  
5 year warranty on black powder coat products  
5 year warranty on chrome products  
This warranty does not cover exposed welds

### Electronics Limited Warranty:

**1 year warranty E-Board Motors or electronics**

Finish warranty covers peeling, flaking, or cracking. Washing all finishes regularly with car wash soap and rinsing well with water is the best method for maintaining the finish on your products. You must also protect the finish with nonabrasive automotive wax on a regular basis. The use of any compound which contains abrasives becomes a self-defeating exercise as the compound scratches the finish and opens it to corrosion. The use of harsh chemicals used to remove bugs and tar may also cause the finish to fail and should be avoided.

If you are unsatisfied with your purchase please contact the establishment you purchased the product from.

If you need to place a warranty claim or need assistance, the Ionic Automotive customer service team will answer any questions you may have. Please contact the Ionic Automotive customer service team at 1-888-427-4466 during normal business hours Monday thru Friday 7 am to 5 pm PST. You may also email <https://realtruck.com/contact-realtruck-com>. In order to better serve you please provide a copy of the original invoice / receipt, a photo of the issue you are experiencing and a photo of the vehicle the product is installed on.

All warranty returns must have an approved RGA number. The RGA number must be clearly marked on the exterior of the return package. All approved warranty returns must be shipped to Ionic Automotive Products, 1002 Carriers Drive, Laredo, Texas 78045.

## PRODUCT REGISTRATION

Please remember to register your new purchase. You may register your product at <https://realtruck.com/warranty-registration>

. Registering your product may help speed any future warranty or customer service inquiries.

**Thank you again for purchasing from Ionic Automotive Products**

Please take a few minutes to view additional products for your vehicle and more at [realtruck.com](https://realtruck.com)  
These installation instructions are available on the Real Truck web site along with installation videos for many of our products.