


# 4002 Pro Lock Assembly Replacement - Drivers Side

## Replacement Kit Includes:

- 1-Lock assembly with Weather cover
- 1-Lock Bracket
- 1-Set of keys
- 1-Lock Rod Spacer
- 1-Shoulder Bolt
- 1-Lock Bracket Bushing



### STEP 1: Remove lock bracket

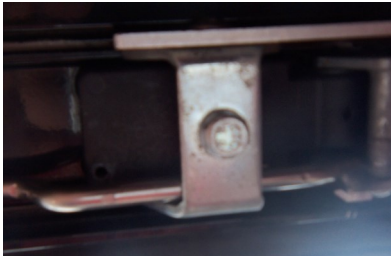


With 10mm wrench remove the lock bracket from the rolling cover.

### STEP 3: Place lock assembly into cover




### STEP 5: Attach lock rod to lock assembly

Attach lock rod to lock assembly using shoulder bolt and spacer. Note where placement of spacer is. **Spacer must be placed between lock assembly and lock rod.**

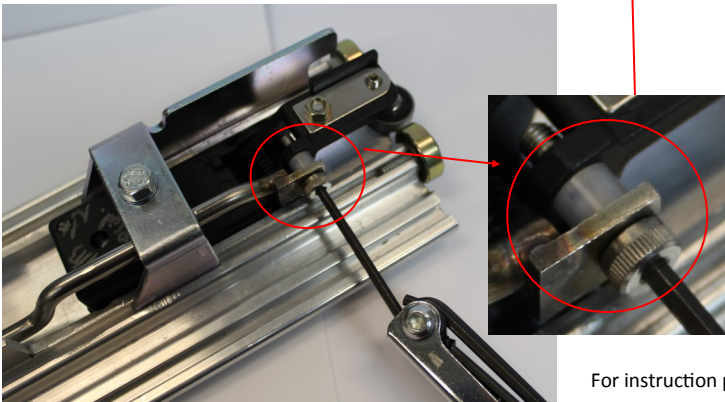


For instruction purposes , lock is upside down .

### STEP 2: Remove lock bracket

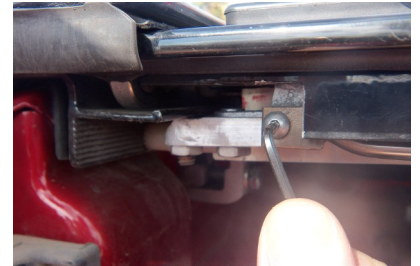

Locate the Allen head screw. It is a 3/32 screw holding the lock rod onto the lock assembly. This screw will need to be removed.

### STEP 4: Attach bolt to bracket

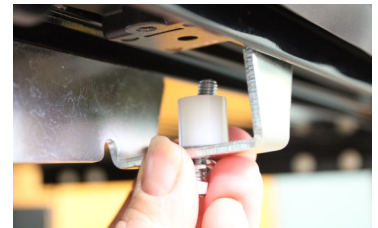

Place lock bracket bushing onto bolt and attach lock bracket. Lock bracket bushing must be placed in-between lock bracket and lock. Tighten 1/4 turn past lock washer compression.