




RS-WP12A-Y, RS-WP12A-R, RS-WP12A-G
Wiring Diagram

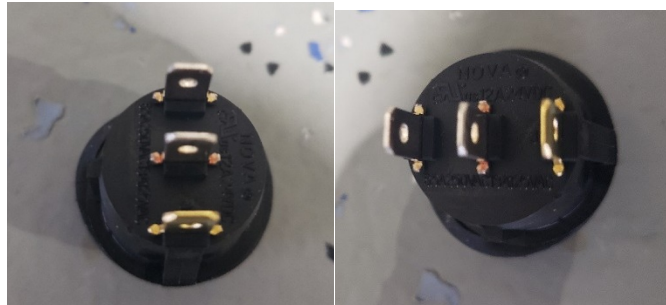

Outer Copper spade is you're Ground wire

Middle spade is you're output side

Top spade is you're 12 volt or ignition

