

## PowerTrax RamBox 2009-18-Classic 19 INSTALLATION SHEET

### Any damaged or missing parts?

Parts will be shipped to you directly. Call 800-206-4070 Mon - Fri, 8:30 a.m. - 5:00 p.m. CST or email retrax@retrax.com


### NOTE: Please read all instructions before assembling the bed cover.


Keep the boxes and packaging until the installation is complete. Unpack carefully to prevent scratching. DO NOT remove any protective films from the cover and canister until after the installation is complete. DO NOT USE A LUBRICANT OR THREAD-LOCKER ADHESIVE ON THE ROLLING COVER. USE OF THESE WILL VOID THE WARRANTY. See the maintenance page for proper care.




### **ELECTRICAL PARTS INCLUDED IN YOUR KIT**

- A 1x Split wire loom
- B 1x Fuse holder
- c 2x 10 amp fuses
- 1x Wire harness
- **E** 10x Wire ties
- F 1x Electronics
- **G** 1x LED lamp

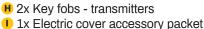

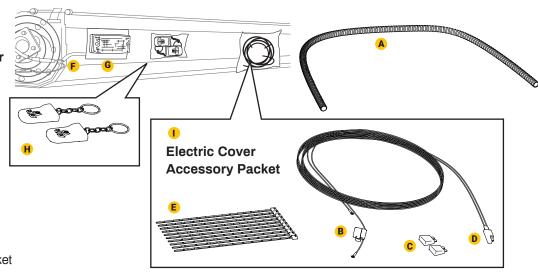

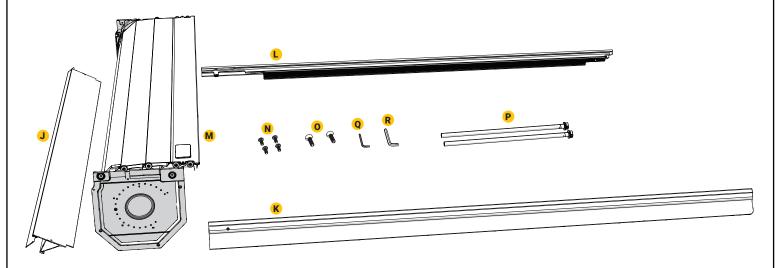

### **COVER PARTS INCLUDED IN YOUR KIT**


- 1x Front cover
- K 1x Driver side rail
- 1x Passenger side rail (Rail is designated by a green sticker)
- M 1x Spiral canister
- N 4x Canister mounting screws (10-32 x 7/16")
- 2x Front cover mounting screws (10-24 x 3/4")
- P 2x Drain tubes
- Q 1x 1/8" Allen wrench
- R 1x 6mm Allen wrench

### **TOOLS REQUIRED**

- #2 Phillips screwdriver
- · Scissors or utility knife

### **PARTS INCLUDED IN YOUR KIT**


- **s** 6x 1/4" flat washers
- T 6x 1/4-28 x 1" bolts
- **u** 6x T-slot nuts
- V 6x Mounting blocks
- W 6x 5/16" lock washers
- **x** 6x 5/16-8 x 1" bolts
- Y 6x 0.050" spacers (optional for step 18)
- **Z** 1x 18" Weather strip

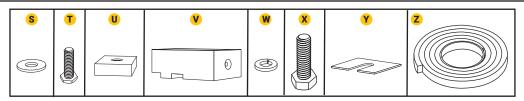

### **TOOLS REQUIRED**

- 7/16" Wrench
- 1/2" Wrench


**NOTE:** Due to the unique configuration of the RamBox rails and toolboxes, it is not possible to completely seal the bed with a bed cover. 18" of 1/2" thick self-adhesive weather stripping (Z) has been provided that can be applied where desired at the owner's/installer's discretion.

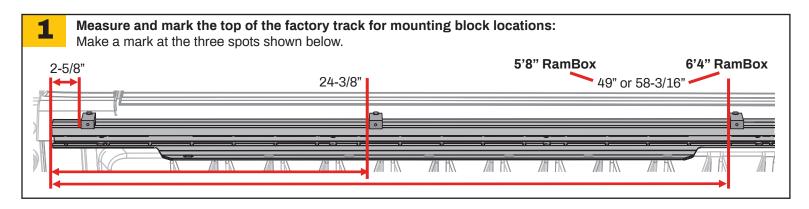

Assemble and position 6 mounting blocks in both accessory rails:

Tighten t-slot nut (U), lock washer (W), and bolt (X) securely with 1/2" wrench.


Repeat with middle and back mounting blocks (V).

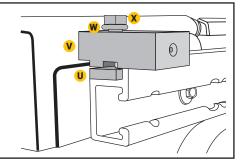

Routing wire harness from battery to truck bed:
Using a wire tie (E), secure the fuse holder (B) end of
the wire harness (D) near the battery (red wire and brown wire).
Note: Do not connect the wiring harness (D) to your
battery yet.

Route the wire harness (D) to the driver side of the truck if it is not already. Note: Using wire ties (E), secure the wiring harness (D) so it does not come into contact with moving parts or exhaust pipes.

Route the wiring harness (D) down along the frame rails to the truck box as shown on the right. Keep the wires as high as possible to prevent damage while driving. Secure the wiring harness (D) with ties (E) every 2-3 feet.

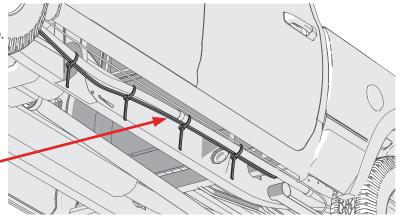



### Wiring options:

### Option 1:


Route the wiring (D) to the driver side drain hole in the truck bed (leave about 24" in truck bed). Use split wire loom (A) to wrap around the wires as a barrier between the wires and the drain tube hole.

Note: This may require a larger hole than normal.


### Option 2:

Route the wiring (D) in the gap between the cab and truck bed leaving about 24" in the truck bed. The wires will be hidden under the front weather stripping of the Retrax cover.

Remove shipping materials:
Remove the screws, shipping
brackets and the white shipping tubes from
both sides. Retain a shipping bracket for later
use as a shim.

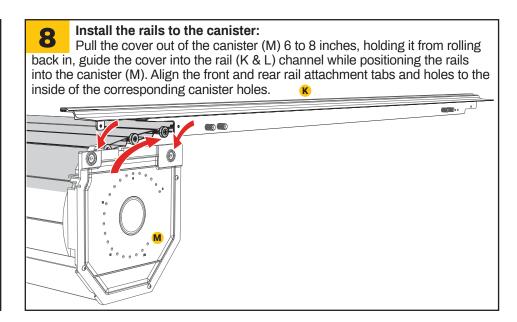


# Fasten the rails to the canister: With the rails in place and the cover slid into the rail channel, attach the rails with the four 10-32 x 7/16" canister mounting screws (N). Tighten the canister mounting screws to: 32 in-lbs.

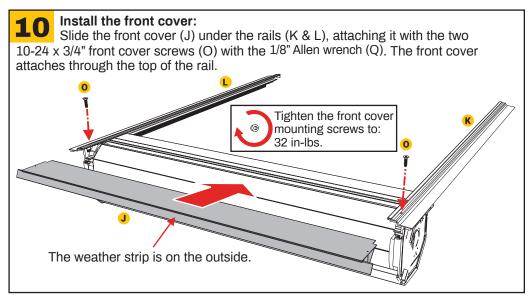


NOTE: The front cover weather strip mentioned in step 12 must lay flat across the truck bed and pointing towards the cab. If it extends past the bed rail cap, cut to fit right up to the cap on the truck bed.


Prepare the bed for cover installation:
NOTE: Prior to installing the cover, some
drop-in style bed liners may need to be notched
in the front/cab end corners to provide clearance
for the cover canister.

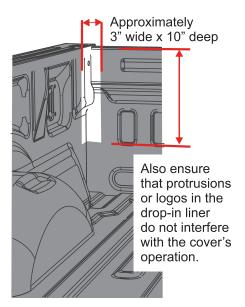


Position the cover:
With two people, lift the cover and place it onto the truck bed starting by placing the canister (M) portion near the bulkhead. The front seal of the cover should lay forward and lay flat.


NOTE: With the cover in place, the front seal lays flat on the bulkhead, but must not extend past the bed rail cap. Trim the seal as needed to ensure that it lays flat.

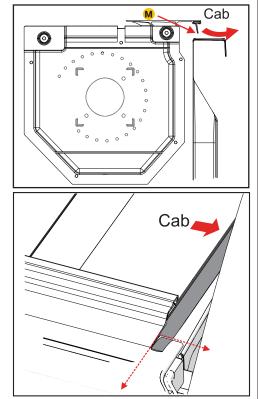

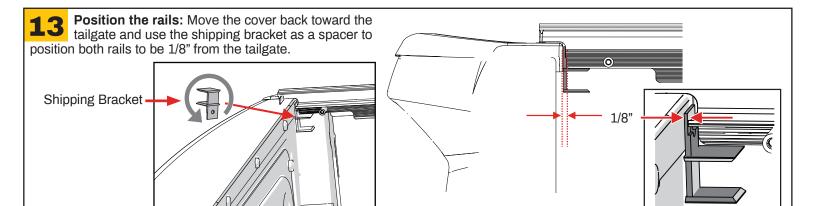

Position both rails to mounting blocks: Ensure the threaded holes in the mounting blocks (V) are behind the openings of both side rails. Use a 7/16" wrench to

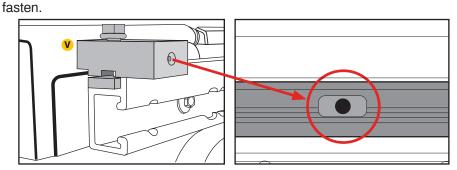

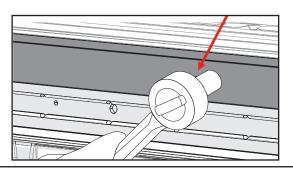


### Note for step 17:

The .050" spacers (Y) can be used to narrow the distance between the rails if needed to get the rails parallel to each other. Position the spacers between the back of the side rail and mounting block.

### Install the fasteners and rails:

Use one 1/4" flat washer (S) and one 1/4-28 x 1" bolt (T) in the three hole locations in the side rails (K & L) and into the three mounting blocks that you installed in step 4. It is important to push down on the rail (K & L) while tightening, AND to tilt the rail up approximately two degrees simultaneously. Both the pushing down and tilting of the rail will position the rail best to minimize water intrusion. Use a 7/16" wrench to fasten side rails to mounting blocks.

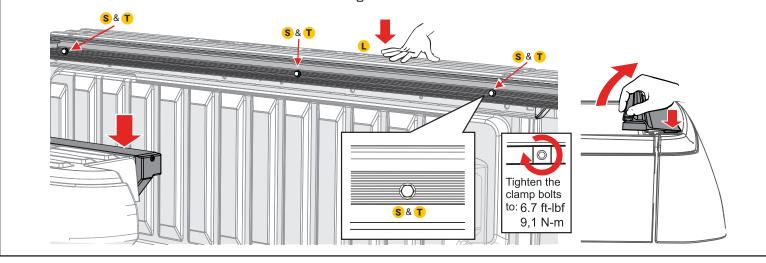


### Measure and record the distance between the rails

**16a**. Measure the distance at point A (on top of the front cover).

**16b**. Then measure the distance at points B & C (above each clamp). They must measure the same  $\pm 1/16$ " as at point A.

**16c**. It is important the rails are parallel, if they are not proceed to step 17. If the measurements are correct, proceed to step 18.

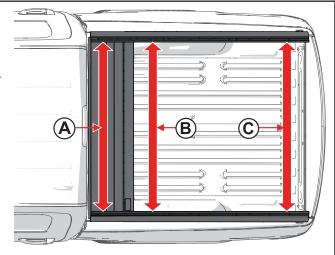


### Adjust the distance between the rails:


Remove the clamps and turn the white adjustment screws with the 6mm Allen wrench (R)

to move the rails. One complete turn = 1/16". Turn both screws.


**NOTE:** When properly adjusted, replace the clamps as in steps 15.

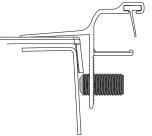

If the rails measured too close together, turn the screws counter clockwise.

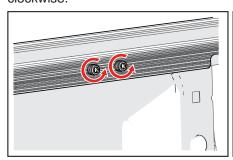


If the rails measured too far apart, turn the screws clockwise.

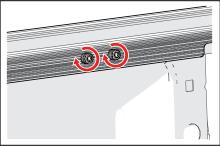

# Check for proper fit between the front cover and the rolling cover:


With the cover closed and latched, if there is less weatherstrip exposed on one side versus the other then adjust that rail more forward and toward the cab. Loosen the clamps and move the rail.


Check again for equal spacing, adjust as necessary then tighten all the clamps per steps 15.

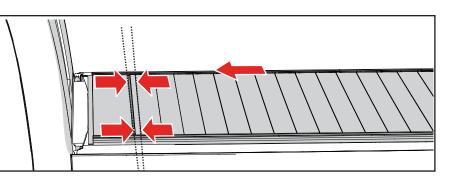

### 19 Remove the protective film and install the drain tubes:

19a. Remove all of the protective plastic film from the canister (M). 19b. Insert the drain tube (P) into the canister (M) on both sides, rotate to the right, clockwise, the fitting will click twice when secure. 19c. Generally the drain tubes (P) will be routed out through a hole drilled in the factory bed plug. Otherwise a suitable existing hole must be utilized. Or a new hole can be drilled, taking great caution to be aware of lines and anything behind where the hole is drilled.

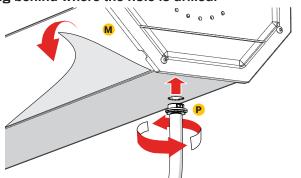


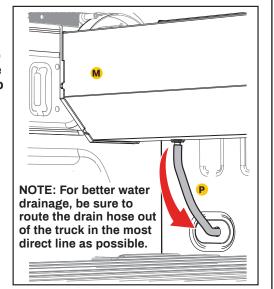


### Connect the wiring harness to electronics box and battery:

A. Connect the power harness to the connector with a white label with the letter "P" on it for Power. Ensure the connectors are securely connected. (Connectors labeled with the letter "M" for Motor will come attached.)


**B.** Connect the wires to the battery and install a fuse (C) in the fuse holder (B). Connect the RED wire (with the fuse holder) to the POSITIVE post and the BROWN wire to the NEGATIVE post.

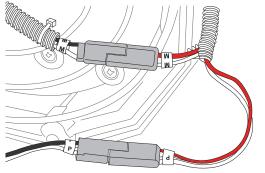

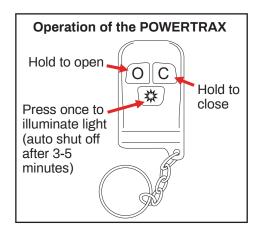

# For proper cover operation, ensure rails are positioned correctly (must be parallel). See steps 16 & 17.

These surfaces must be level.

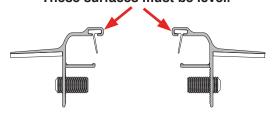

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


### **FINAL NOTES**


- Open and close the cover to ensure that it is rolling without rubbing or binding.
- Open and close the tailgate to check for proper movement.
- On some models, a better fit with the tailgate may be obtained if the rear of the rails are adjusted slightly up or down.
- Remove all remaining protective film.
- · Recheck that all of the clamps are tight.
  - Do this periodically throughout the use of the cover.
- Check that the rails are level and spaced evenly, and adjust accordingly.







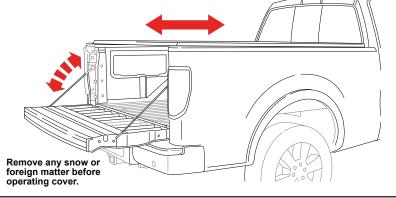


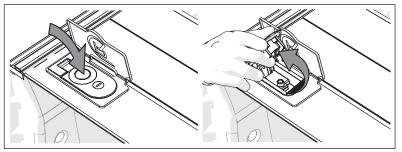

### **USE**


### Opening and using the cover

To use your cover, open the lock cover and press the button at the center of the latch to pop open the handle.

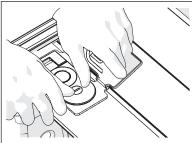


### Closing and locking the cover

To latch your cover anywhere along the rail, push down firmly on the end of the lock handle. Insert the key and turn until it is locked or unlocked.

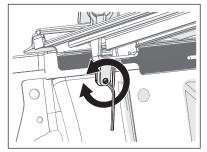

### Lock cover adjustment


A 3/32" Allen wrench can be used to adjust the pointed set-screw on the lock arm. Turn clockwise to increase latching pressure on the rail, or turn counter-clockwise if the lock is too hard to close.

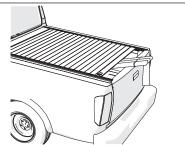

### Securing loose cargo

Retractable covers help in transporting loose and large cargo, a unique feature that most bed covers cannot claim. **NOTE:** Cargo should still be secured to the truck bed to prevent it from coming loose.

To help secure any item too big to fit under the cover, latch the lock handle shut against the item to help keep it in place.

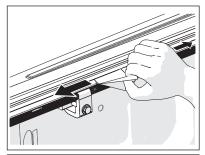

### **MAINTENANCE & CARE**


### Cleaning and caring for your cover.

You can wash the cover, but do not use any cleaners, protectants or strong chemicals.

The cover should be cleaned with mild soap and water.

Do not allow gasoline to come in contact with the cover.

The weather stripping may absorb soapy residue from a car wash, it is recommended to wipe down the inside of the rails from time to time.

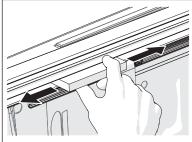

# IMPORTANT: NEVER spray any lubricant or cleaner in the rails. THIS WILL VOID THE WARRANTY.

The bearings are sealed and will not need any lubricant or spray. If the rails feel sticky, run paraffin wax along the rail.

### COVER CARE AND MAINTENANCE

Clean with mild automotive soap and water only. Do NOT use any strong chemicals or cleaners. Do not allow gasoline to come in contact with the cover.

DO NOT wax your Retrax cover. The weather-stripping on your cover may absorb soapy residue from a car wash, so we recommend wiping down the inside of your rails from time to time.

**IMPORTANT:** NEVER spray any lubricant or cleaner on the rails. THIS WILL VOID YOUR WARRANTY. The ball bearings are sealed and will not need any lubricant or spray. If the rails feel a little 'sticky', you may rub some Paraffin (candle) wax along them until they wear in.

It is recommended that you periodically check that the cover is securely attached to your truck bed. Inspect the clamps and front mounting bolts to ensure they were properly installed and have not come loose or knocked out of adjustment during operation. Covers that are used with high frequency or that are subject to the vibrations and impact from rough roadways can cause the cover to require adjustment.

### **USE**

### **OPENING AND USING THE COVER**

To use your RETRAX cover, open the lock cover and press the button at the center of the latch to pop open the handle.

### **CLOSING AND LOCKING THE COVER**


To latch your RETRAX cover anywhere along the rail, push down firmly on the end of the lock handle using both thumbs. Insert the key and make sure it locks and unlocks.

### **SECURING LOOSE CARGO**

RETRAX covers help transport loose and large pieces of cargo safely and securely; a unique feature that most tonneau covers cannot claim. To help secure any item too big to fit under the cover, latch the lock handle shut against the item to keep it in place.

### SAFETY INSTRUCTIONS

- DO NOT tow your vehicle from the rear with the cover on your vehicle. If towing from the rear is required, the cover MUST be removed from the vehicle and properly stored.
- DO NOT allow gasoline to come in contact with the cover.
- All large and heavy cargo must be secured by straps.
- NEVER allow children or pets to occupy the truck bed while the cover is closed.
- The cover is not airtight. Special care is required to keep cargo clean and dry.
- Tonneau covers won't prevent theft of contents inside the truck box.

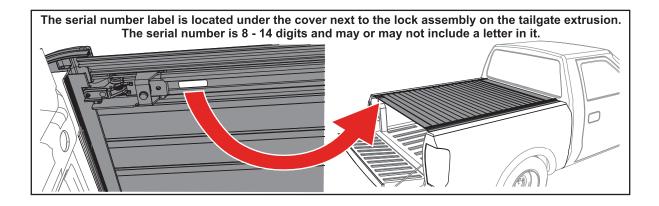

### LIMITED WARRANTY

### WARRANTY COVERAGE

This truck bed cover is warrantied against defects in materials or workmanship as follows. This warranty is void if the product has been damaged in an accident, or due to neglect, unforeseeable use, improper installation, improper servicing, or other cause not arising out of defects in material or workmanship.

**Powertrax** - The truck bed covers carries a limited warranty for **three** (3) **years** from the original date of purchase, subject to the terms below.

### WARRANTY IS NOT TRANSFERABLE

The warranty is to the initial consumer purchasing the truck bed cover and it is not transferable to a subsequent end user. Proof of purchase may be required to enforce these warranty rights.

### WARRANTY CONDITIONS

Failure to follow these care and use instructions will void the warranty:

- Clean with mild automotive soap and water only. Do not use any strong chemicals or cleaners. Lubrication of the rails or sealed ball bearings will void the warranty.
- Cargo must be secured at all points when the vehicle is in motion. Failure to adequately secure the cover or tether strap can result in damage and will void the warranty.
- Check all clamps and retention mechanisms for tightness after a week of driving following installation (or re-installation) of the cover and periodically thereafter.
- Before opening, the cover must be free of all foreign materials including snow and ice.
- DO NOT tow your vehicle from the rear with the cover on your vehicle. If towing from the rear is required, the cover MUST be removed from the vehicle and properly stored.

### WARRANTY PERFORMANCE

If all warranty conditions are met, a defective truck bed cover or hardware component will either be repaired or replaced (at our option). We reserve the right, for any warranty, to substitute a newer model or bed cover having a similar form and function, to offer a warranty discount on an entire replacement system, and/or provide remedies other than those mentioned in this document.

### WARRANTY RETURN

A Return Material Authorization number must be obtained from our Customer Service Department prior to returning any product. We may require the original item to be returned postage prepaid for final determination. Shipping charges will apply for any repair or replacement. Other than postage or shipping charges, no charge will be made for repair or replacement under this warranty.

This warranty gives you specific legal rights. As a consumer, you may also have additional rights and remedies under the laws of your state.

Register online at https://realtruck.com/retrax-warranty.

REGISTER
YOUR
<b>WARRANTY</b>
ONLINE



erial Number	
ate of Purchase	
ate of Furchase	_