




# **SPRING REEL REPLACEMENT: FOR APPLICATIONS WITH TRACK END CAP WITH OR WITHOUT BLOCK.**

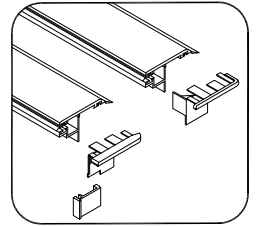



## **Parts Include:**

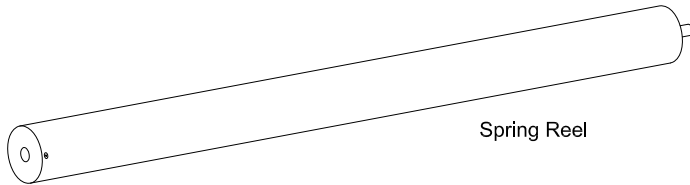

## **Tools Required:**

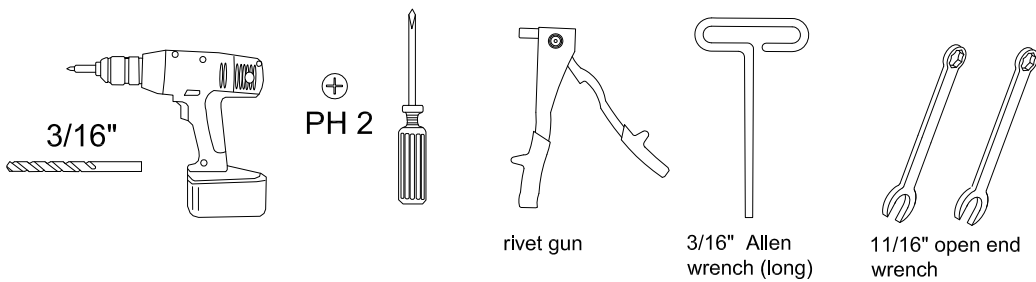


1 LHS = RHS

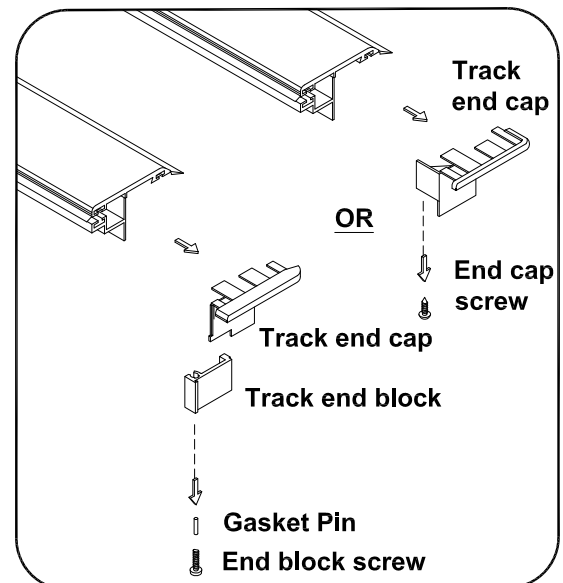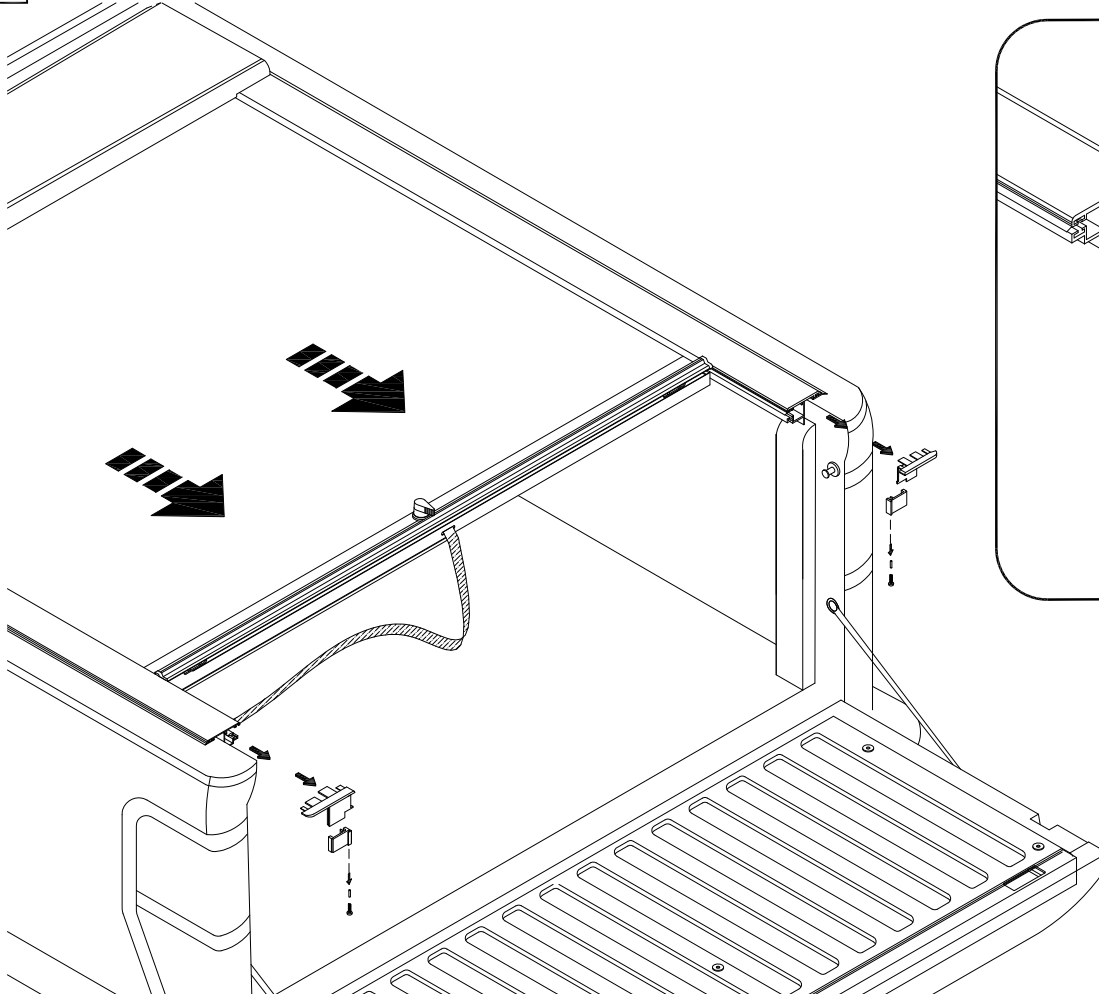


**Remove track end cap.**

2

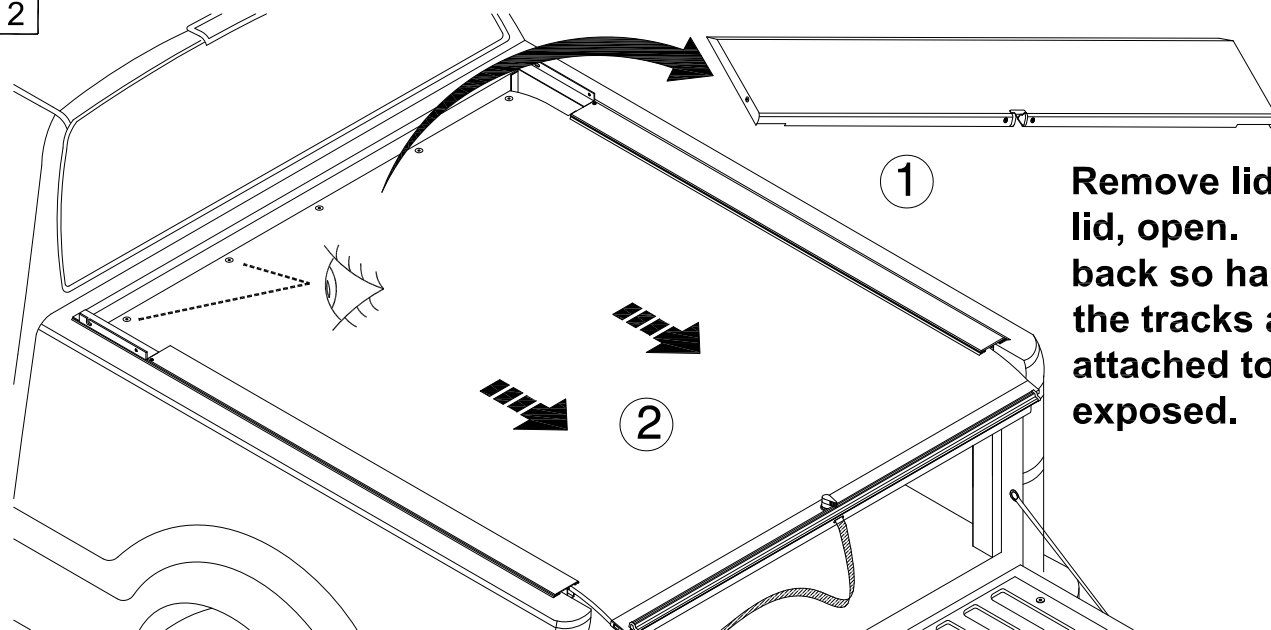


Remove lid, if a hinged lid, open. Pull cover back so handle is out of the tracks and the rivets attached to the reel are exposed.

3

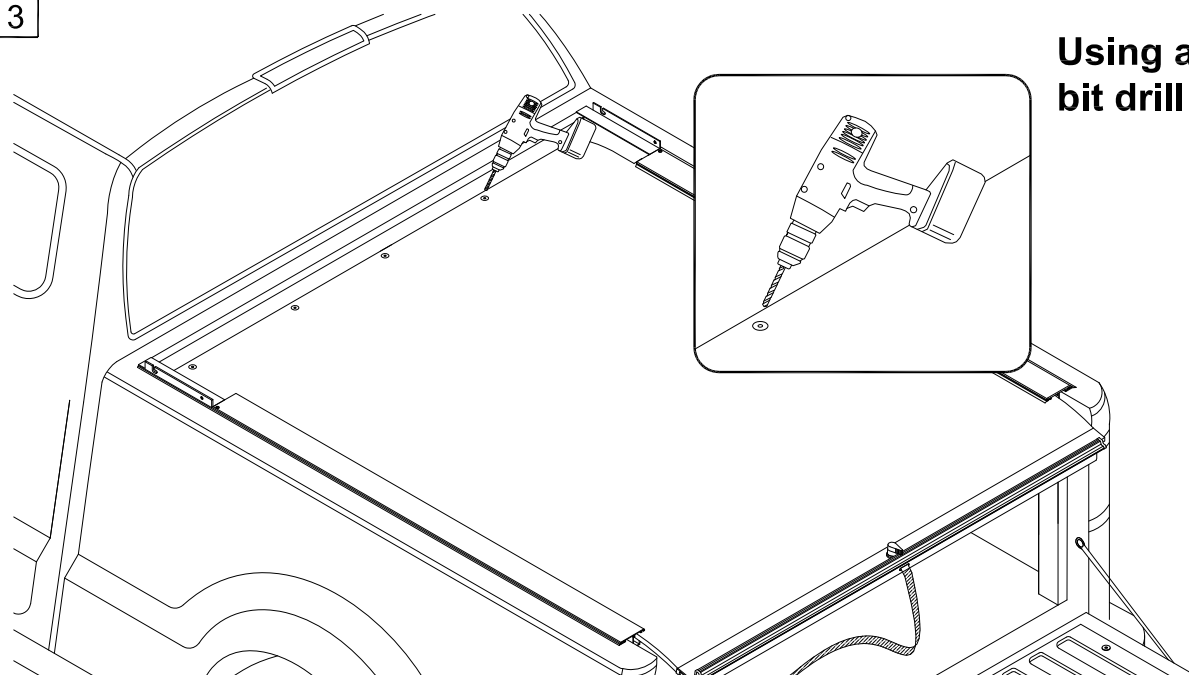


Using a drill with a 3/16" bit drill out rivets.

4

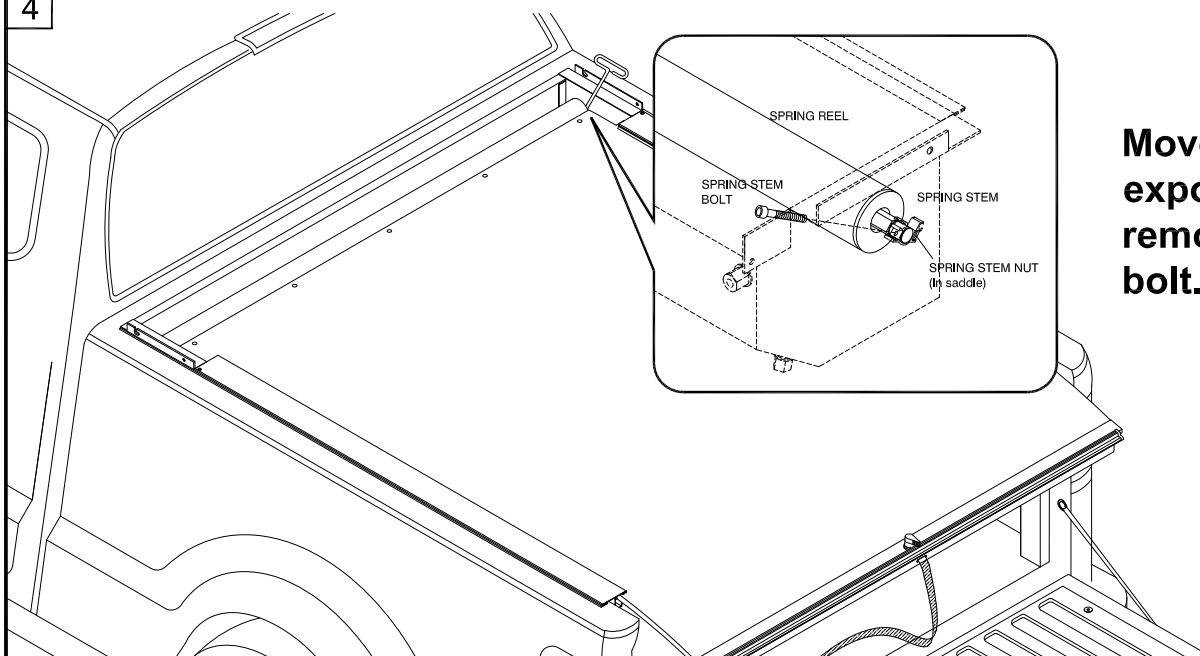


Move cover back to expose reel and remove spring stem bolt.

5

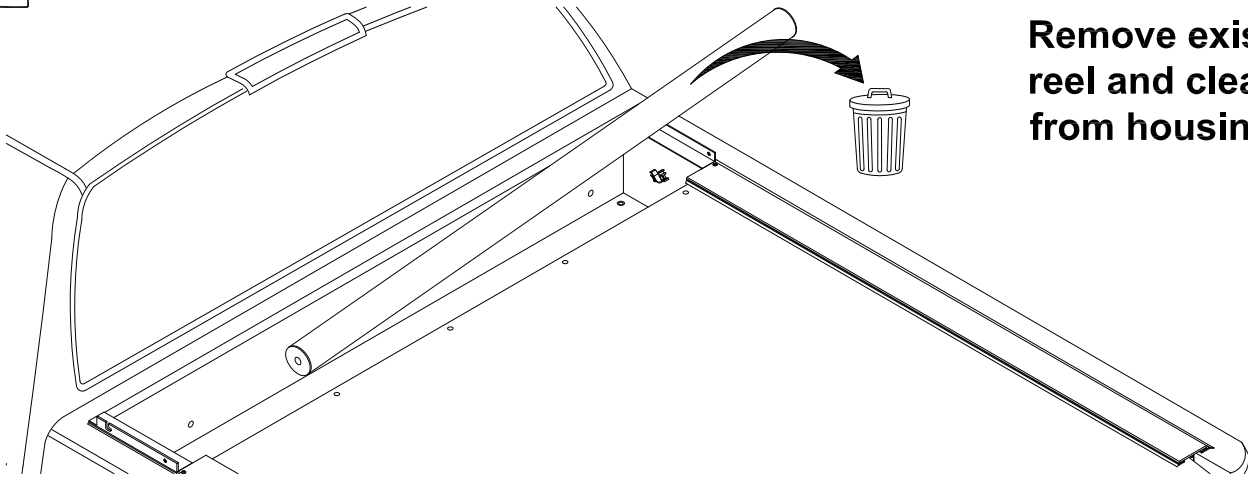


**Remove existing spring reel and clean debris from housing.**

6

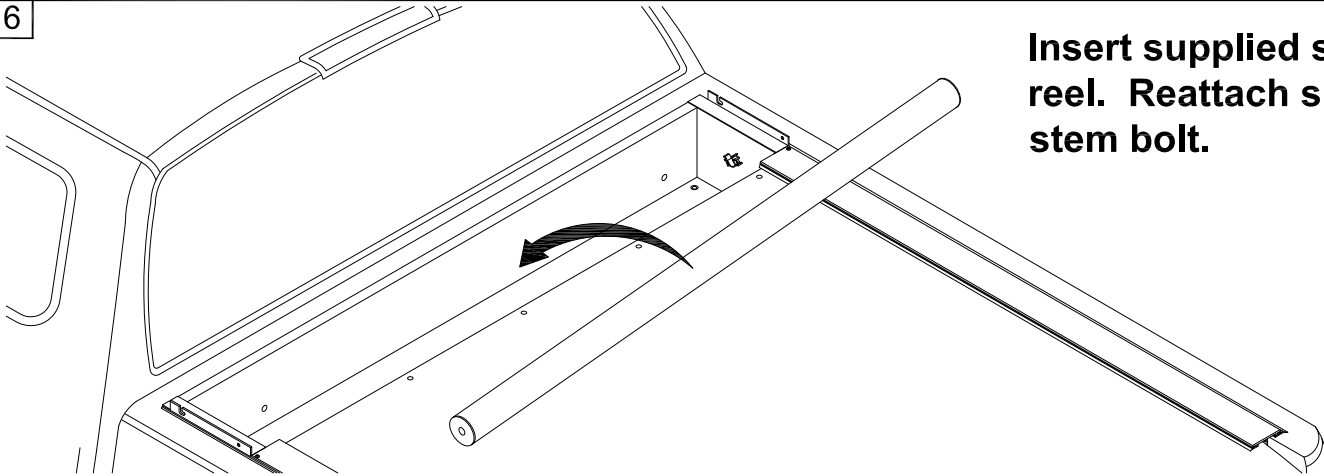


**Insert supplied spring reel. Reattach spring stem bolt.**

7

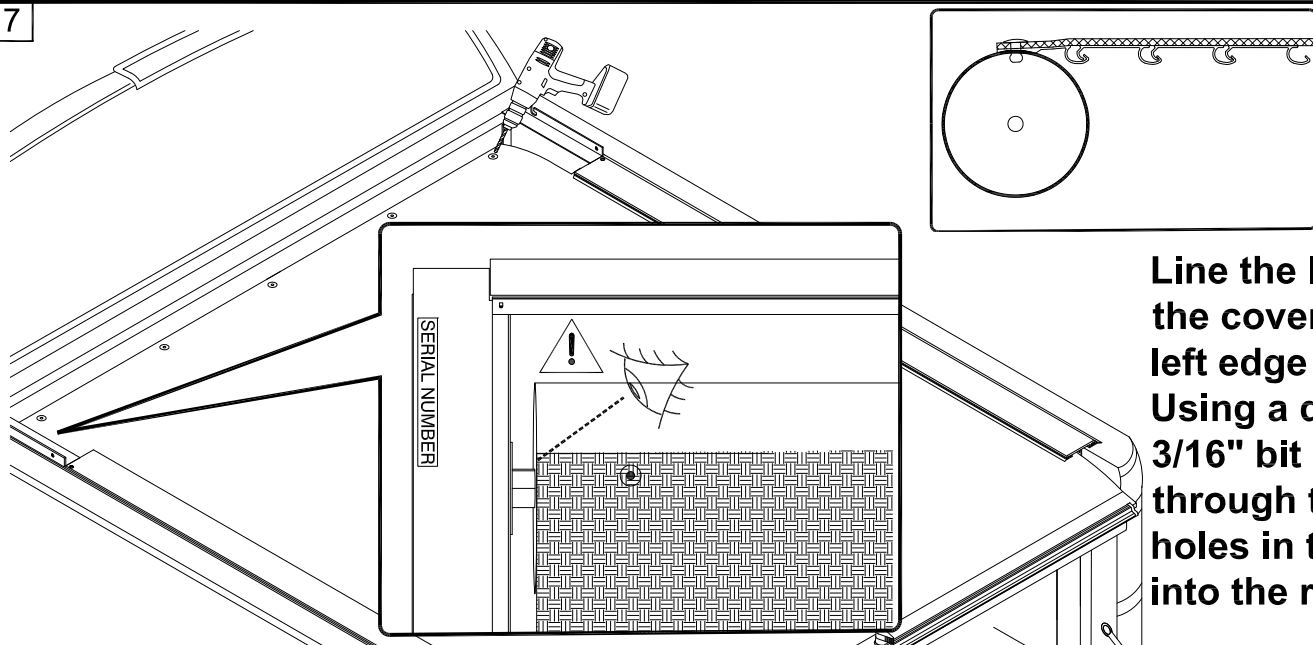


**Line the left edge of the cover with the left edge of the reel. Using a drill with a 3/16" bit drill through the same holes in the cover into the reel.**







8

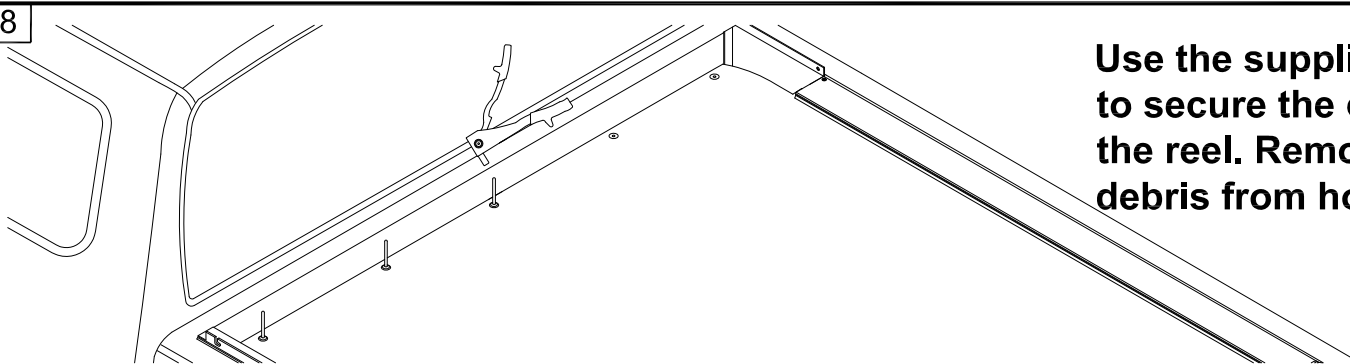

**Use the supplied rivets to secure the cover to the reel. Remove debris from housing.**

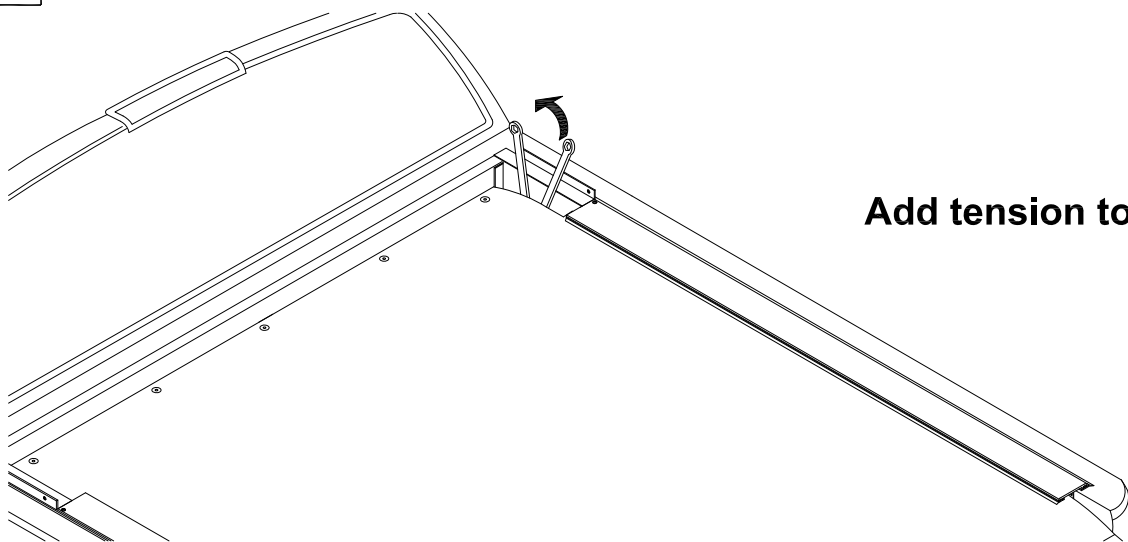


**Add tension to spring.**

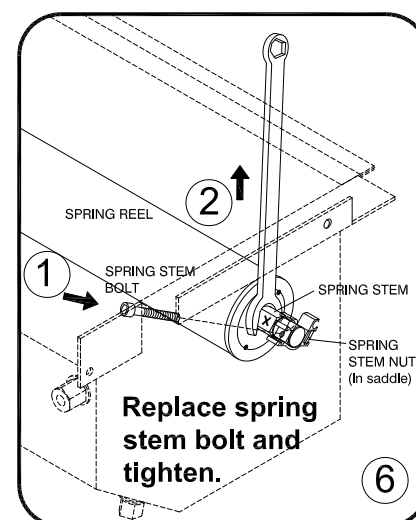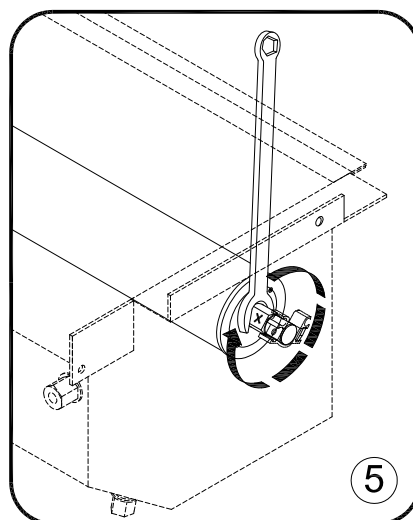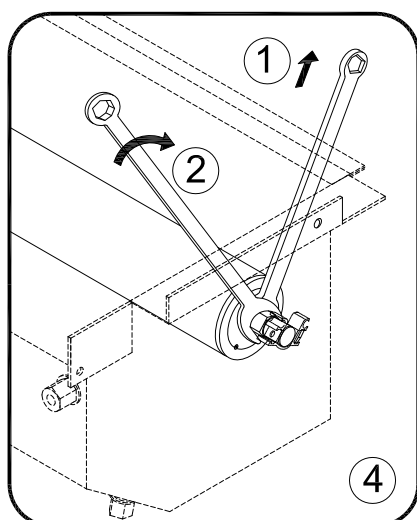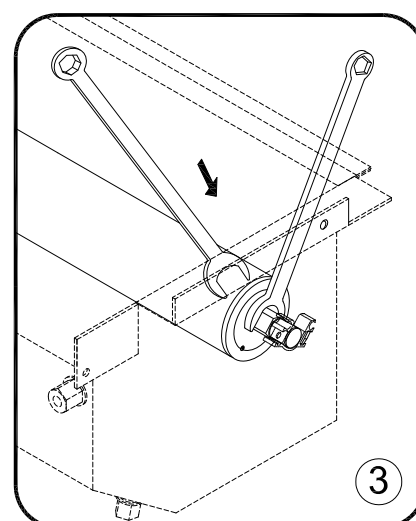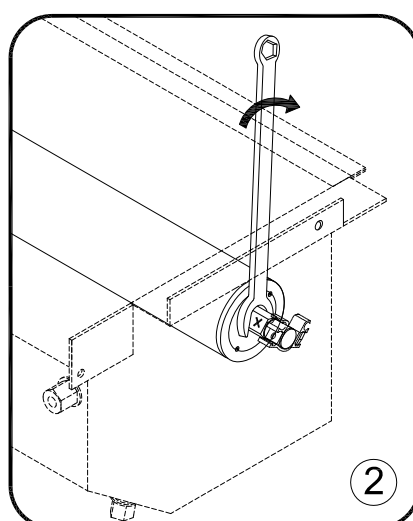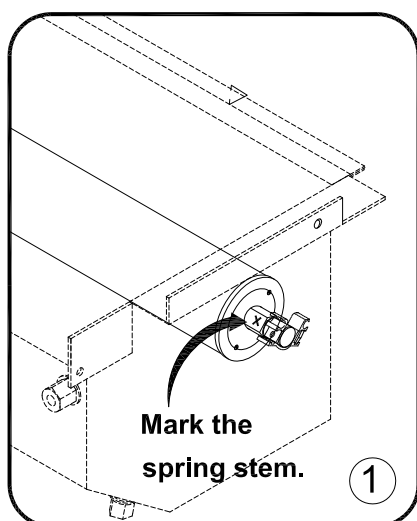

**Fully rotate spring stem (see mark): 5.5' (-) bed 14 times  
6.5' bed 16 times  
8' bed 18 times**


10

Replace lid and retract  
cover into housing.

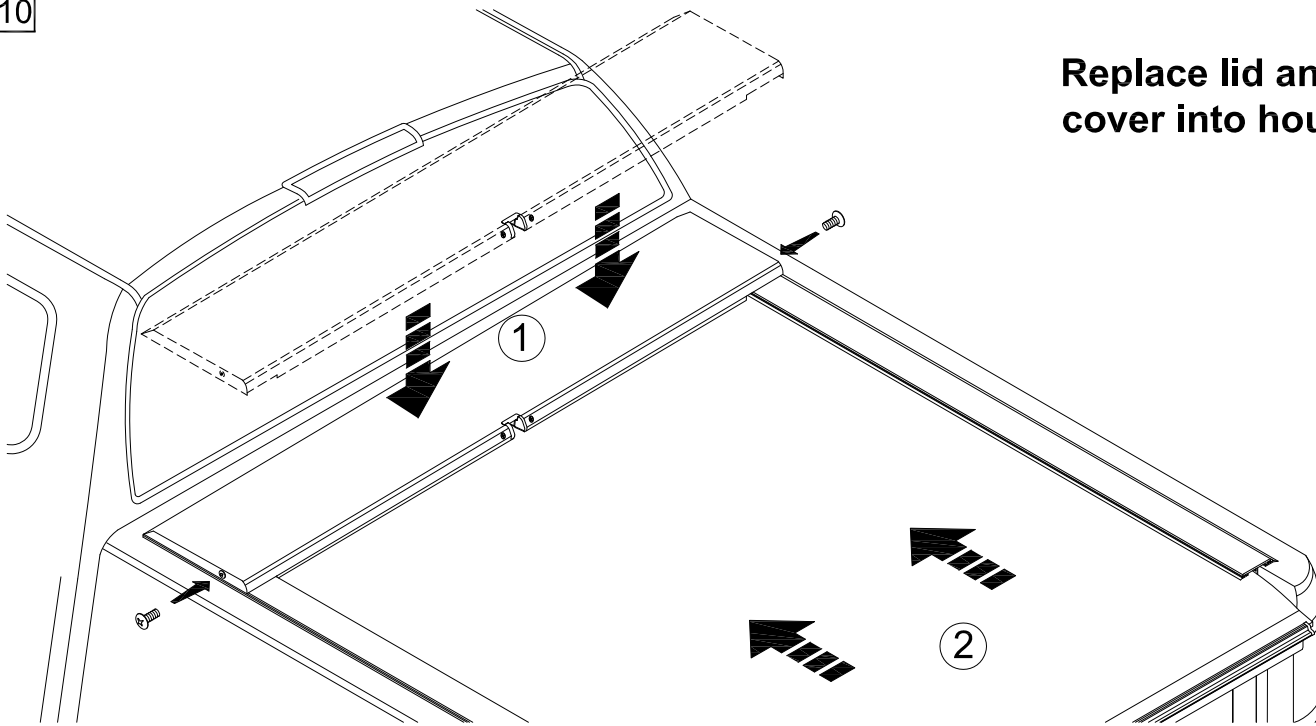

11 LHS = RHS

Replace end caps.

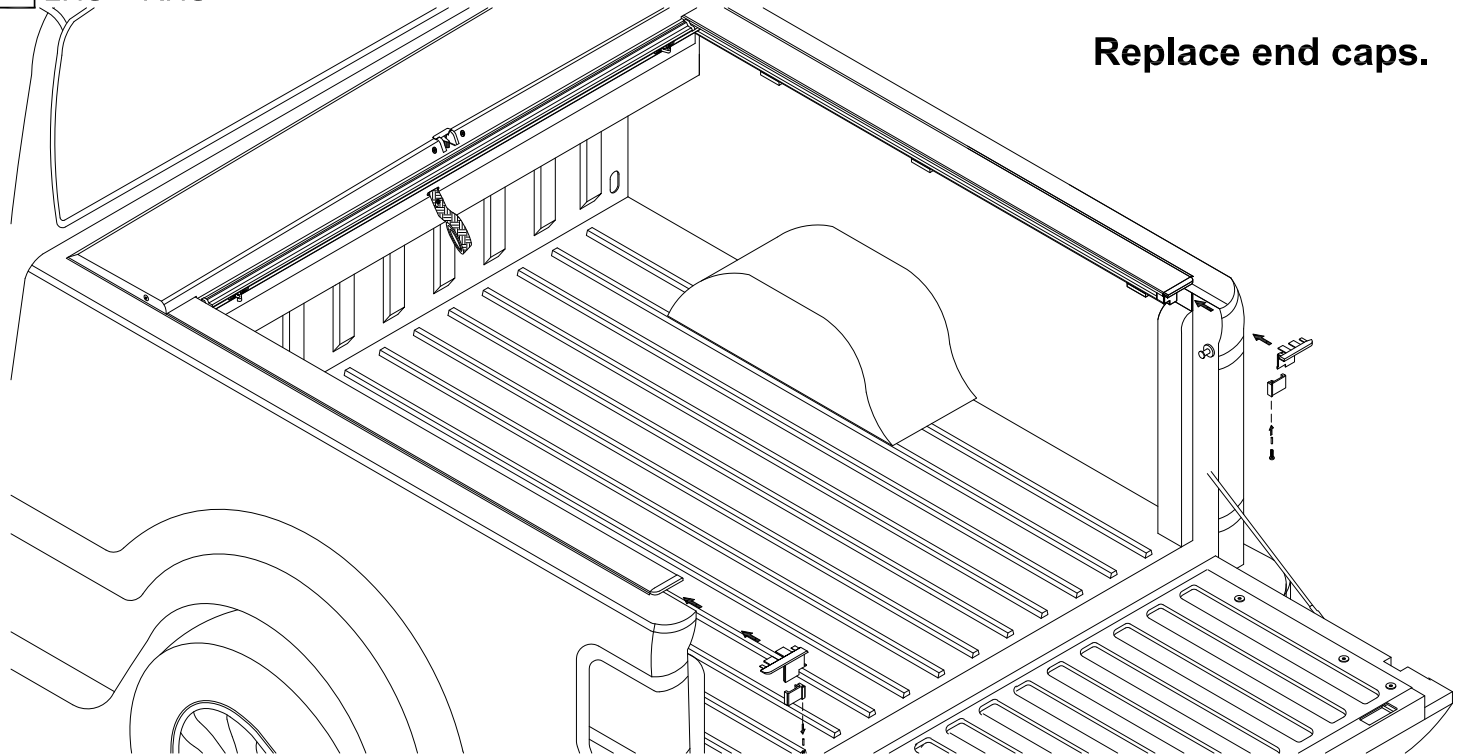

**ROLL•N•LOCK®**

Questions?

Please call Roll•N•Lock Customer Service  
at 800-952-7655 or visit [rollnlock.com](http://rollnlock.com)