




# NISSAN TITAN CLAMPING INSTALLATION INSTRUCTIONS

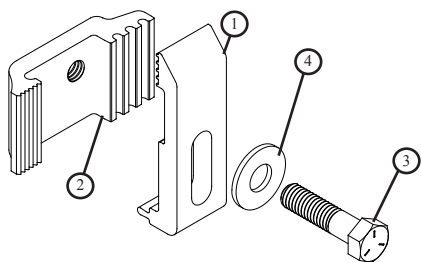

Item	Part #	Description
1.	1705569	MALE CLAMP
2.	1703481	FEMALE CLAMP
3.	1700369	CAP SCREW 3/8" X 1 3/4"
4.	1700429	FLAT WASHER 3/8"
(1705588 Clamp Assembly)		

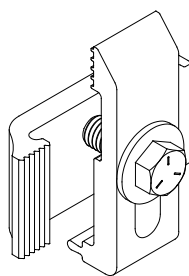


Clamp Position With  
Utility Track

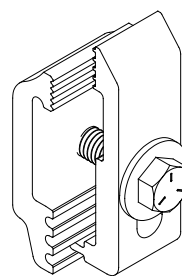


Clamp Position Without  
Utility Track

- 1 Insert female clamps, three per side, into utility tracks on Nissan bed rails.

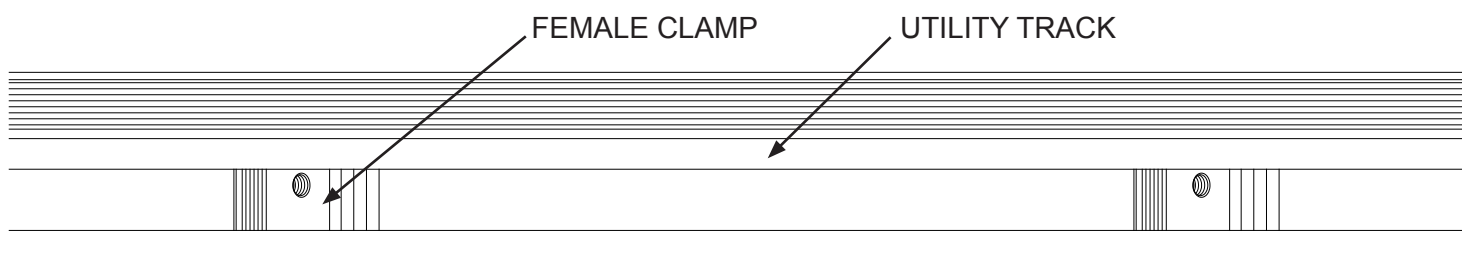

- 2 Evenly space and fasten male clamps loosely to female clamps with cap screws.

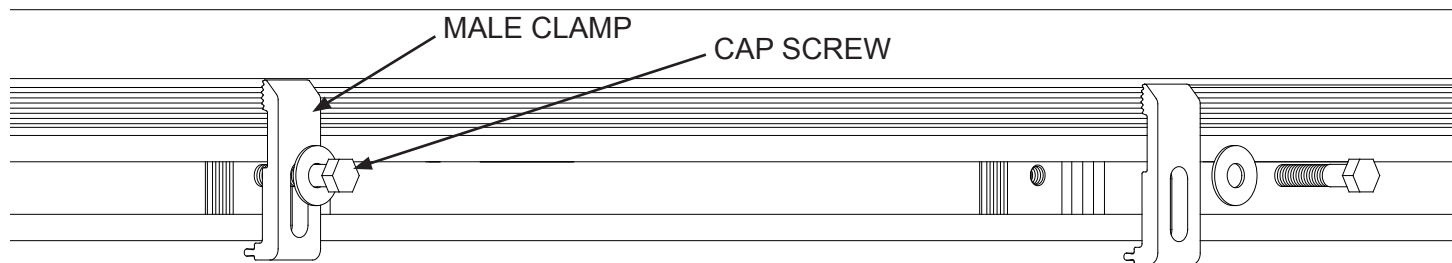

- 3 Install side rails, wedging rails between male clamp and bed rail. Refer to Owner's Manual for Side Rail placement.



## CAUTION

Tighten clamp assemblies securely on side rails before driving vehicle.

