


# HONDA RIDGELINE LO PRO INSTRUCTIONS

Item	Part #	Description
1.		Side Rail, Driver's Side
2.		Side Rail, Passenger's Side
3.	1705964	Bracket, Side Rail
4.	1702741	Pan Hd. Screw, 1/4"-20 x 3/4"
5.	1700427	Flat Washer, 1/4"
6.	1701543	Hex Nut, 1/4"-20 Nylon Lock

## TOOLS NEEDED:


- T-30 Torx wrench
- Flat Head Screw Driver
- 3/8 Drive Ratchet
- Phillips Screw Driver
- 7/16 Socket or 7/16" Box End Wrench
- Flat Head Screw Driver (Used to adjust Tension on Tension Brackets)

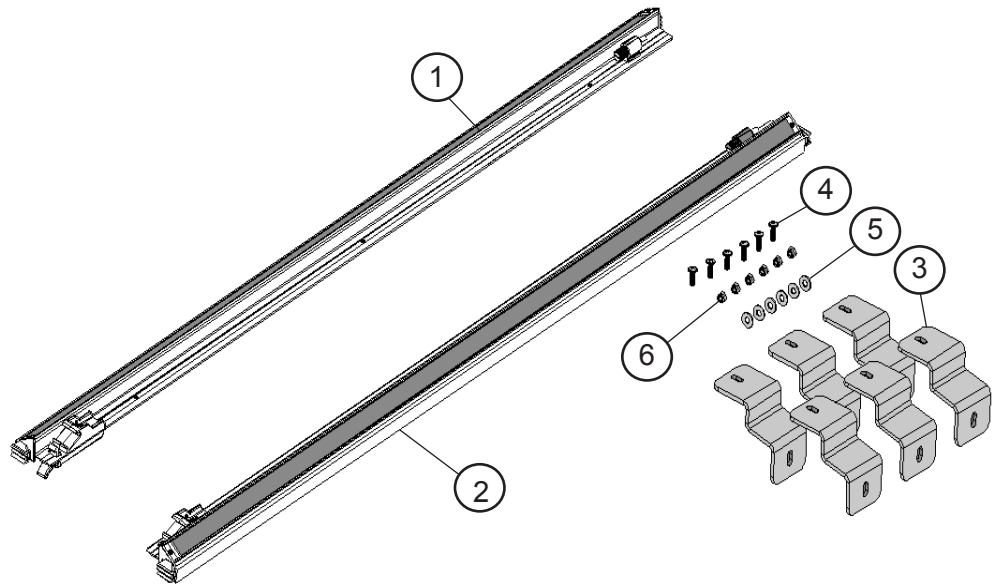

**STEP 1:** Using a T-30 torx wrench, remove the three factory installed M6 Shoulder bolts from both the driver and passenger side box as shown.




**STEP 2:** Mount brackets on driver and passenger sides using the factory installed M6 Shoulder bolts. Leave finger tight for now.

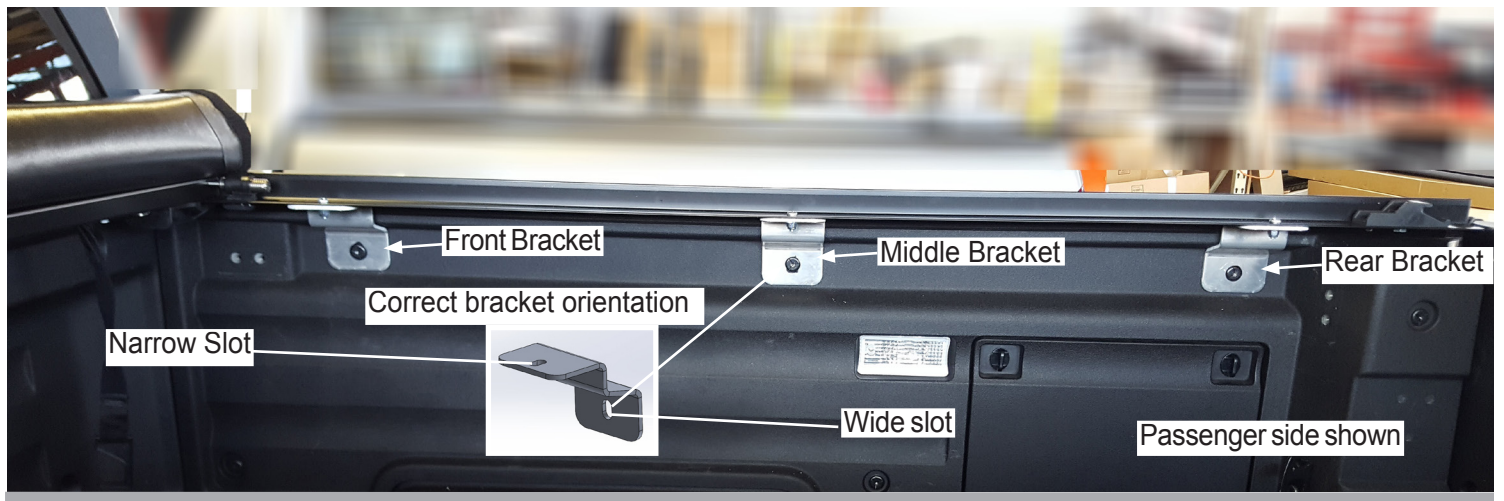


## HONDA RIDGELINE LO PRO INSTRUCTIONS

**STEP 3:** Attach driver and passenger Lo Pro rails to brackets using (#4) Pan Hd. screw 1/4" -20 x 3/4", (#5) 1/4" flat washers, and (#6) 1/4"-20 Hex Nylon lock nuts, leave these screws loose at this time also.

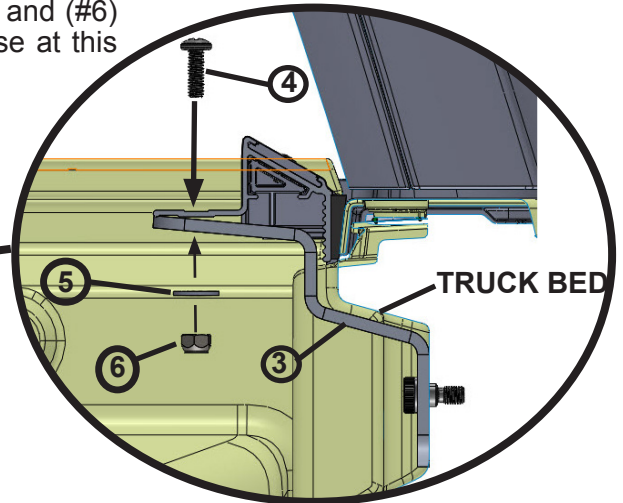


**STEP 4:** Tighten all six M6 Shoulder bolts, make sure the brackets fit tight to the truck bed. At this time, the Lo Pro rails should still be loose and able to move inward and outward slightly.

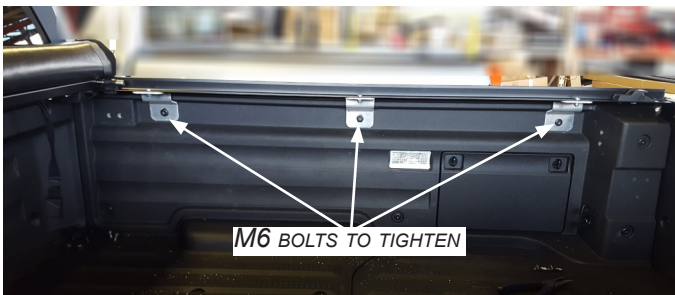

**STEP 5:** To assure adequate water sealing of the Lo Pro rails to the trucks bed rail cap, push the Lo Pro rails against the truck box and with force still applied tighten the pan head screws.



**STEP 6:** Tighten all fasteners. Repeat steps 1-5 on driver's side.

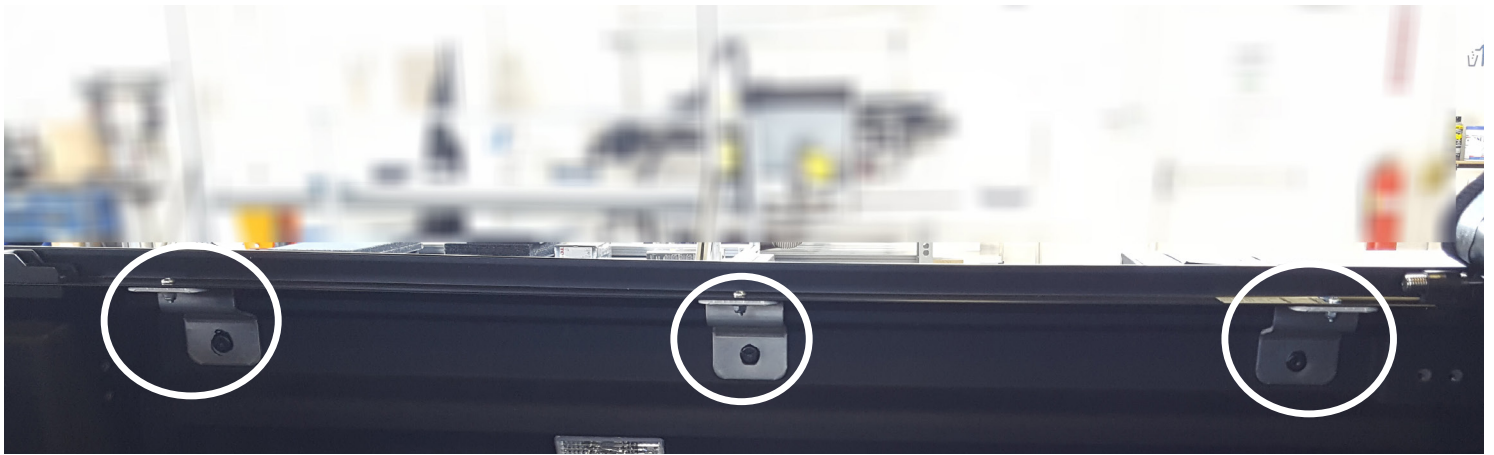

**Refer to owners manual 1118085 for futher instruction on installing your Lo Pro.**