



Installation Instructions
Rear 2" Receiver Hitch
55-86 Jeep CJ models
P/N: 11580.01

Hardware

- (1) Rear Bumper
- (8) 10mm Nuts
- (4) 12mm Bolts
- (4) 12 mm Lock Washers
- (2) Rear mounting Brackets L-R
- (16) 10mm Flat Washers
- (8) 12mm Flat Washers
- (8) 10mm Bolts
- (8) 10mm Lock Washers




Installation:

WARNING: IT IS RECOMMENDED NOT TO EXCEED ANY TONGUE WEIGHT IN EXCESS OF 200LBS

- Step (1)** Remove factory rear bumper or bumperettes and brackets if equipped.
 The rear body mount and bolt can be removed to ease installation if needed.



- Step (2)** Align inner and outer mounting holes with the rear frame cross member.
 (2 outside of frame rail, and 2 inside frame rail for each side).
 Use the 10mm bolt washer, and nut. Torque bolts to 50 ft-lbs.

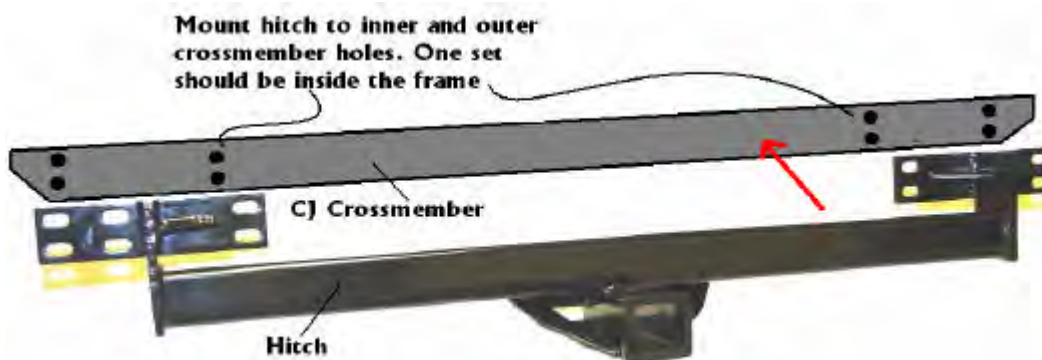

- Step (3)** Locate rear bumper onto the mounting brackets and attach through the top and bottom of the brackets with (4) 12mm bolts, flat washers, lock washers, and nuts supplied.
NOTE: two flat spacers have been supplied to be placed between bumper tab and hitch
Tighten to 50lbs torque. Location can be moved up or down if a body lift has been installed.
NOTE: If the bumper is not a Rugged Ridge product, there could be fitment problems.



460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

