




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

DASH MULTI-MOUNT PHONE KIT, JL


Components

- | | |
|--------------------------|-----|
| 1. Multi-Mount Tray | (1) |
| 2. Universal Ball Mount | (1) |
| 3. Cap Piece | (1) |
| 4. 17mm Ball Phone Mount | (1) |

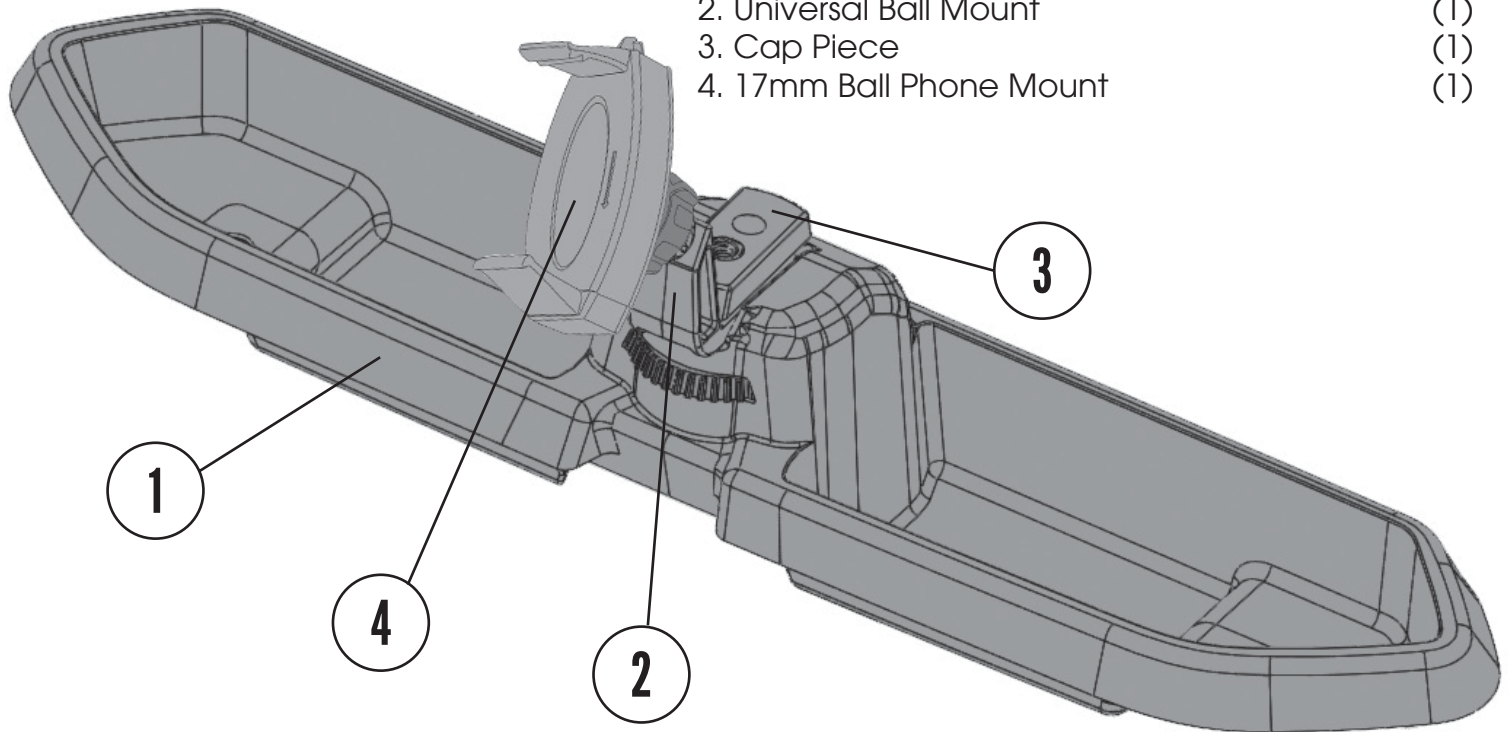


Four Configurations for Dash Multi-Mount System:


*Shown with Rugged Ridge Phone Mount (Part #13551.13)

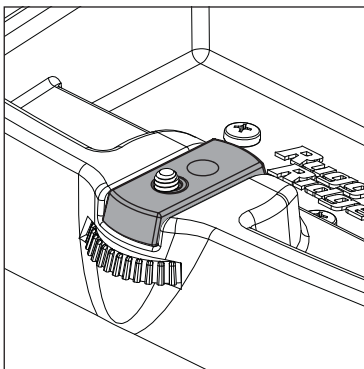


No Accessory

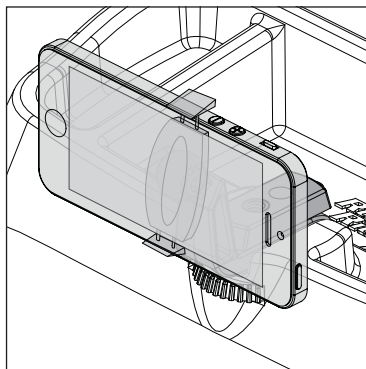

Phone/GPS
Mount Only*

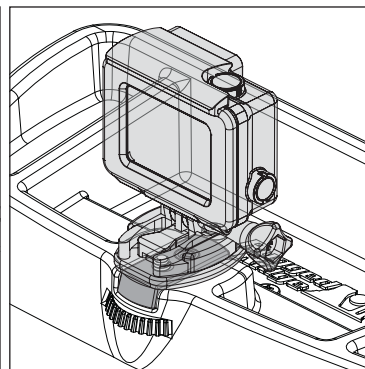

Camera/Tripod
Mount Only

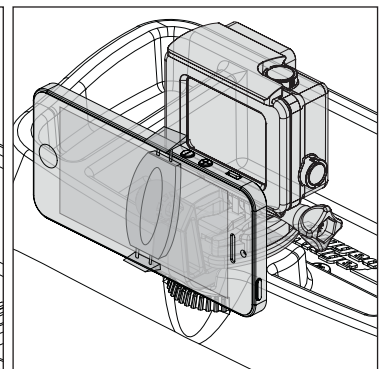

Phone and
Camera Mount*

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

DASH MULTI-MOUNT PHONE KIT, JL


Step 1

Remove interior rubber liner. May need to pry a corner to lift.

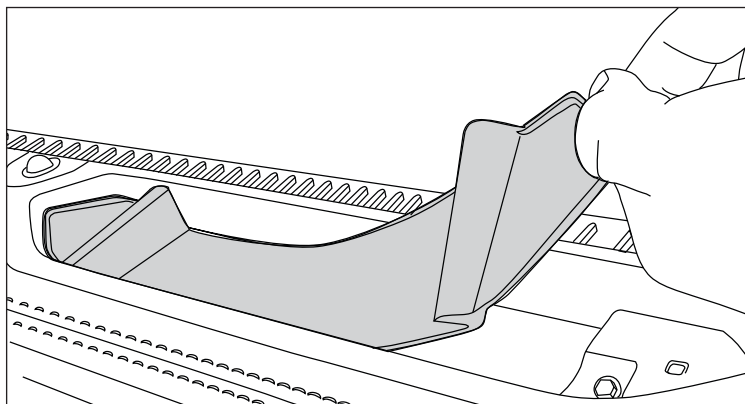


Step 2

Remove two Phillips screws from inside compartment.

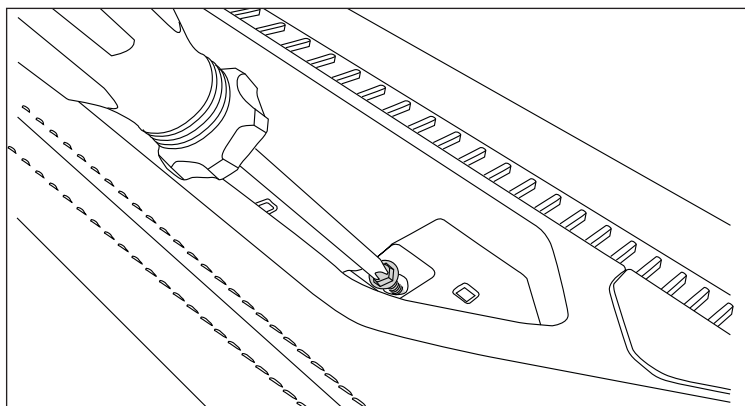


Step 3

Place Multi-Mount System into position. Assure area is completely clean before installing.

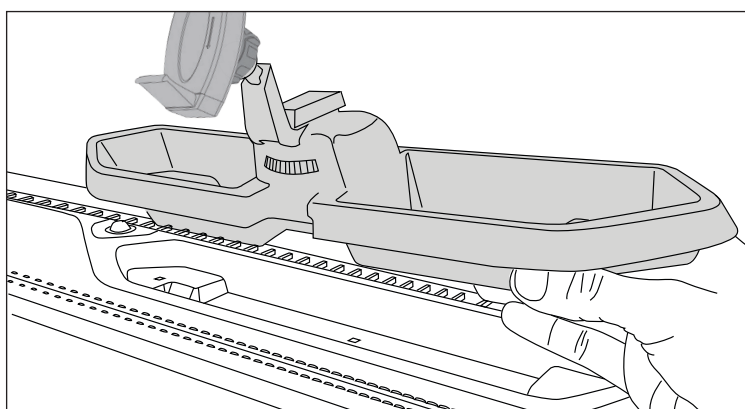

Step 4

Reinstall Phillips screws removed from step 2 through multi-mount system into the dash.

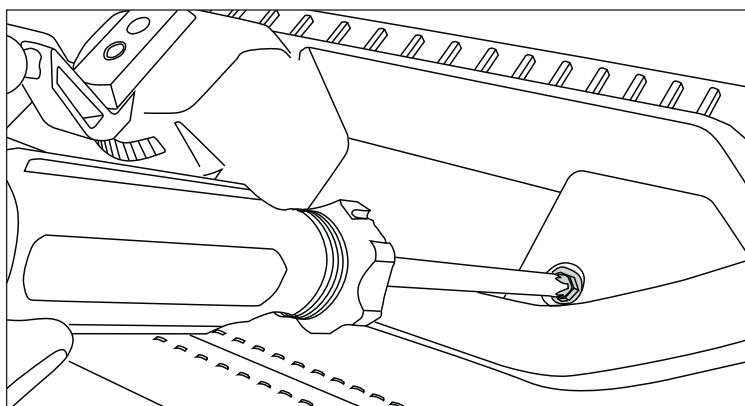




OMIX-ADA, Inc.


460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

DASH MULTI-MOUNT PHONE KIT, JL

1. Place Outer Ring over end of Ball Mount.

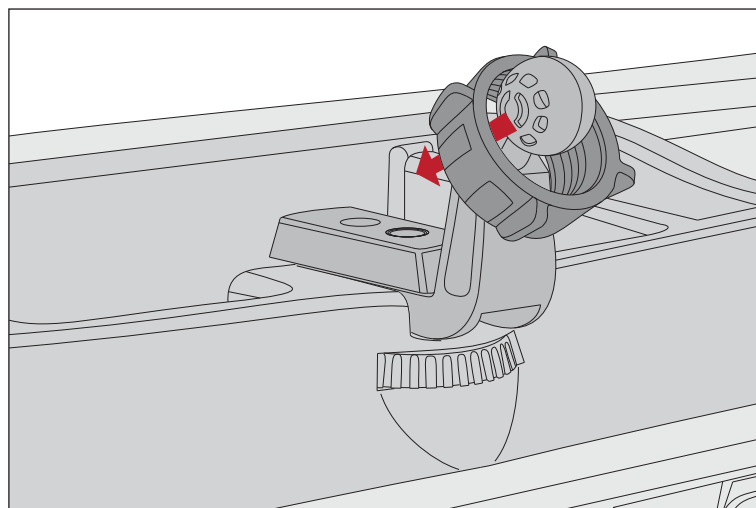

2. Press Phone Mount adapter piece into Ball Mount.

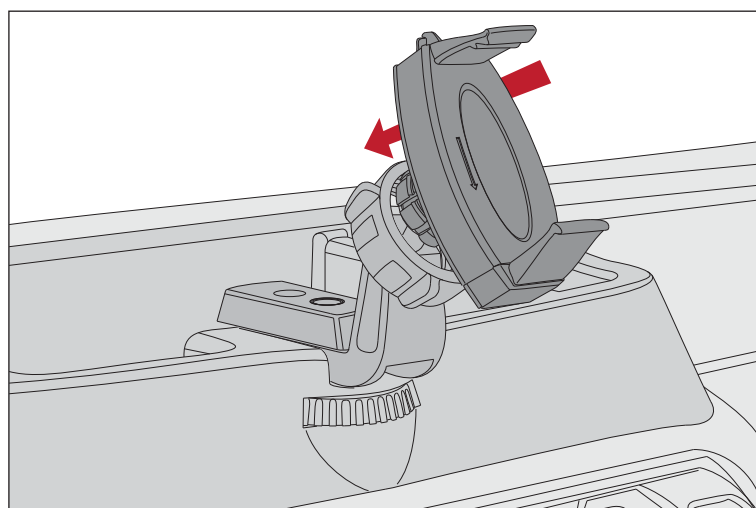

3. Pull Outer Ring over Phone Mount adapter and twist to secure.

