

(1) (1)



Part #113579.56

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 844-270-0593 | www.Omix-ADA.com

Eclipse Front Tube Door Cover, JK



Components

- 1. Mesh Cover LH
- 2. Mesh Cover RH
- 3. Loop Strip

- (1)
- 4. Adhesive Promoter
 - 5. Mesh Bag
- (1) (2)

OMIX-ADA® TECHNICAL SUPPORT PHONE: M-F 8am - 5pm EST 1-800-449-6649

FOR WARRANTY OR TECH CONCERNS EMAIL: webmaster@omixsupport.com

ATTN: STATE OF CALIFORNIA CONSUMERS

WARNING: Cancer and Reproductive Harm – www.P65Warnings.ca.gov.

Copyright © 2018 Omix-Ada®, Inc.






460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 844-270-0593 | www.Omix-ADA.com


Eclipse Front Tube Door Cover, JK

1. Prepare Loop Strips for attachment to Tube Door by cutting into smaller sections. Each Loop should be cut into the following lengths:

- (1) 5 inch section
- (2) 4 inch sections
- (1) 3 inch section
- (2) 1 inch sections

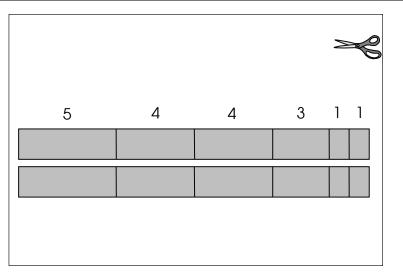

2. Clean back of tube door in area between inner bolts. Then apply adhesive promoter.

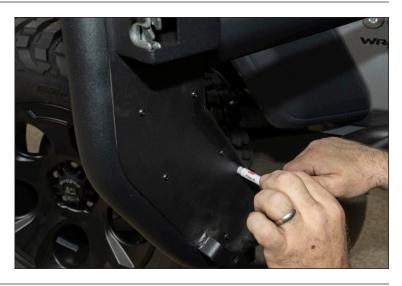

3. Attach cut Loop Strips to back of Tube Door, as shown.





460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 844-270-0593 | www.Omix-ADA.com

Eclipse Front Tube Door Cover, JK

4. Attach Mesh Cover to inside of Tube Door by aligning Hook and Loop fasteners.



5. Secure Mesh Cover by looping straps around tube. DO NOT fully tighten at this time.



6. Slide Tube Door check strap through cutout in the Mesh Cover and attach check strap to Tube Door.







460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 844-270-0593 | www.Omix-ADA.com

Eclipse Front Tube Door Cover, JK

7. Tighten all looping straps.





NOTICE When not in use, store Mesh Covers in supplied Mesh Bag.