




OMIX-ADA, Inc.

Part # 13579.76


460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Eclipse Sun Shade, Full; Gladiator


1. Unfold your new Eclipse Sun Shade and lay on top of the roll cage bars.

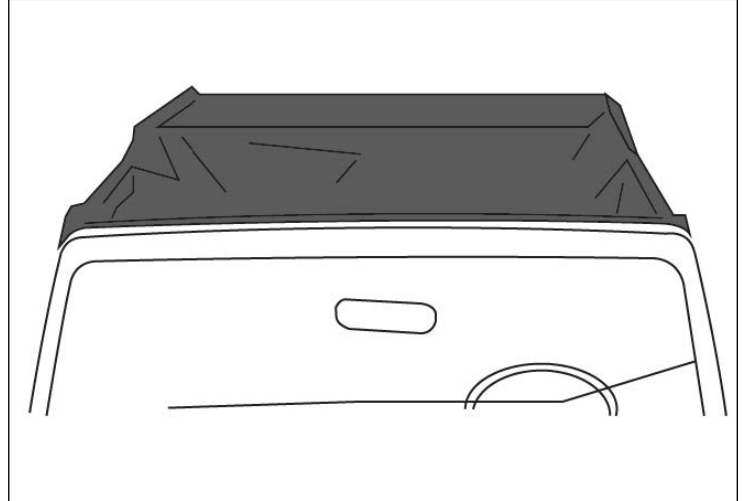

2. Tuck inside and secure with bungee straps as shown.

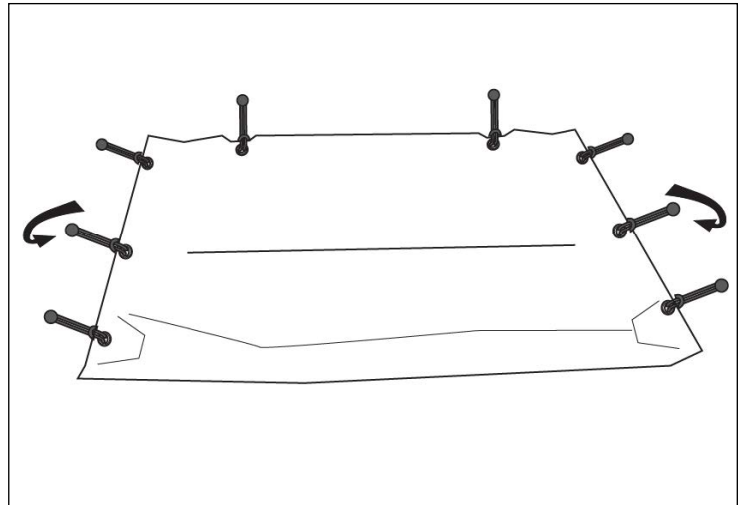

3. Secure with bungee strap around roll cage as shown.

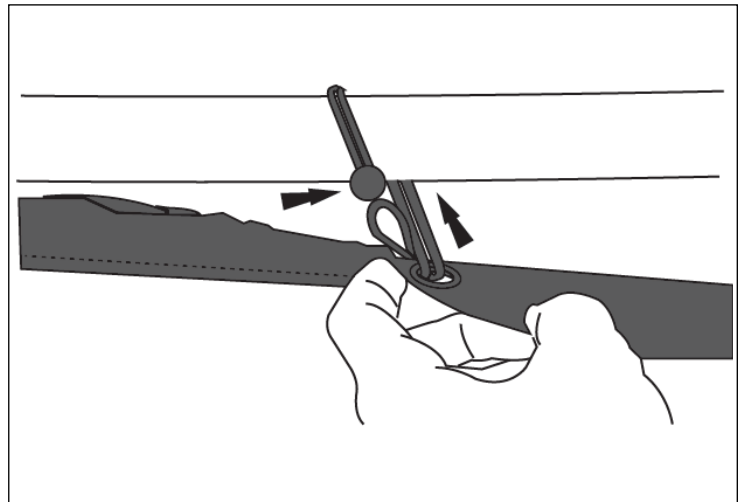





OMIX-ADA, Inc.


460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Eclipse Sun Shade, Full; Gladiator

4. Attach the small bungee to the windshield hole above the sun visor.

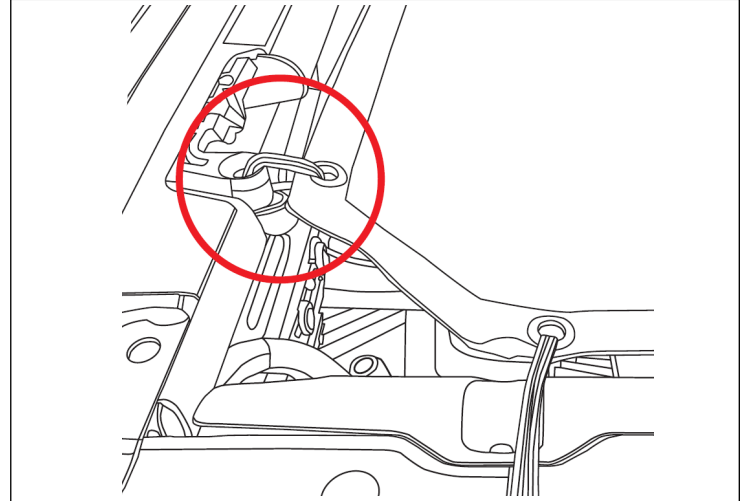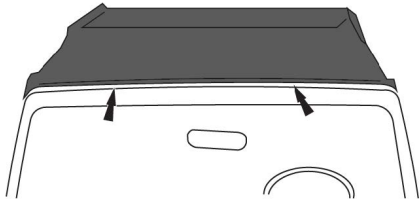

5. Tighten and adjust as needed to be centered on top of the roll cage.

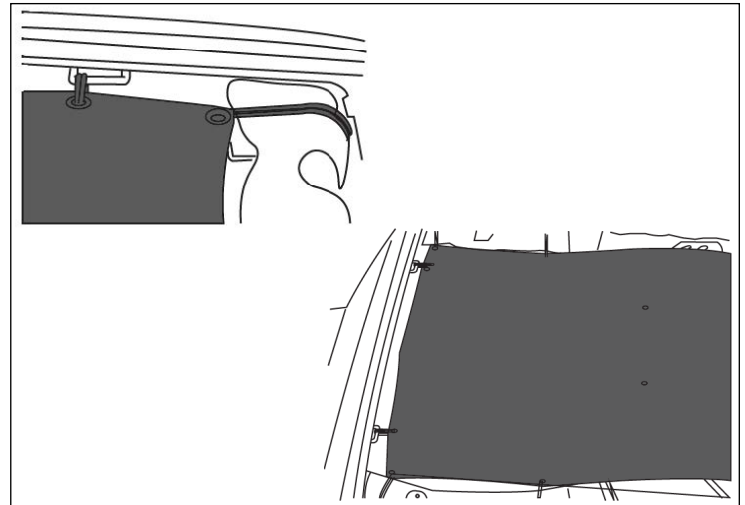

6. Pull the top all the way back and attach the rear strap to the hole in the back of the roll bar. Tighten the strap until snug.

