



OMIX-ADA, Inc.

Part# 13594.36


460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Savannah Brief Top, JT


1. Pre-Installation Requirements

For correct installation, mounting surface of part should be between 70-95° F (21-35° C) prior to installation. Remove existing hard or soft top. For OEM (original/factory) soft tops, also remove: Windshield header channel, Tube hardware, side door surrounds can be used if wanted. Brief Top works with or without door surrounds.


Unfold your new Savannah Brief Top and lay onto a flat surface.

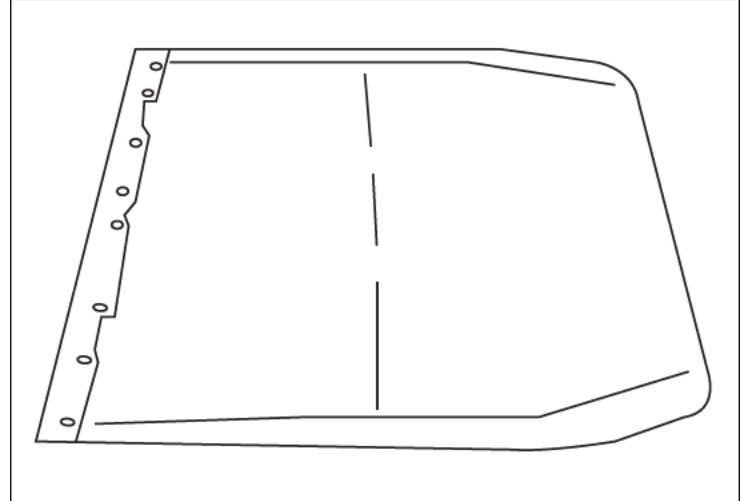

2. Lay the header channel on top of the fabric tucking inside and secure with snaps as shown.

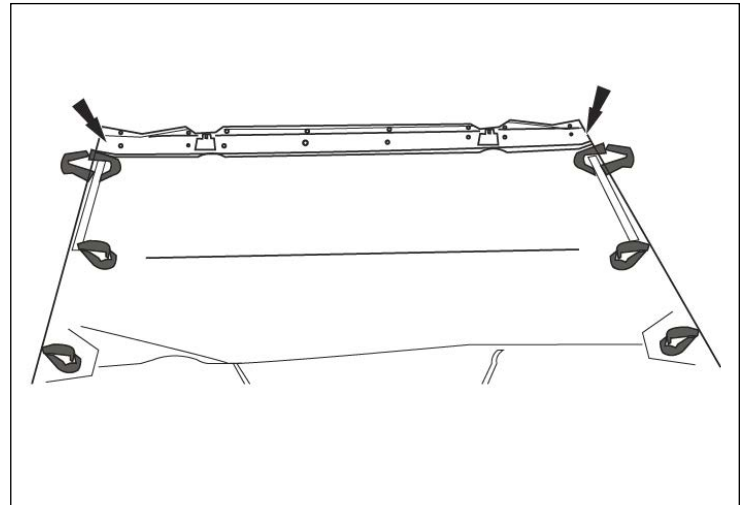

3. Secure with snaps as shown.

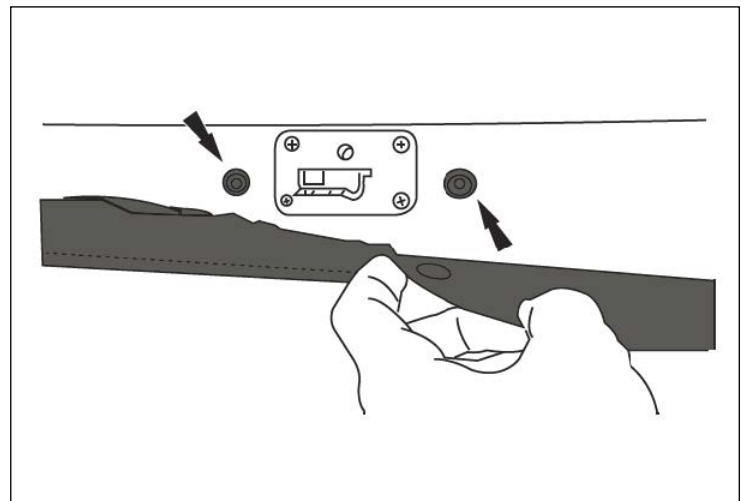




OMIX-ADA, Inc.

Part# 13594.36


460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Savannah Brief Top, JT

4. Place the top onto the vehicle. Placing header channel onto windshield front. Unfold the cover fabric then pull over sound bar and roll cage, working toward the rear of the vehicle.

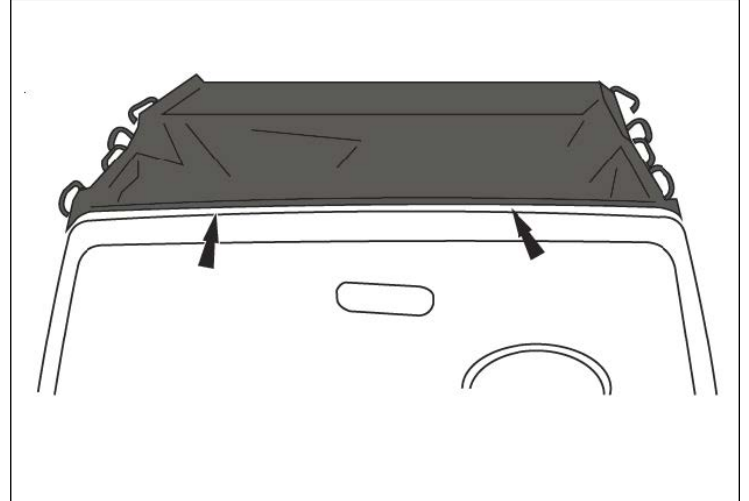

5. Attach the windshield header to the windshield using the bolt and curved washer provided.

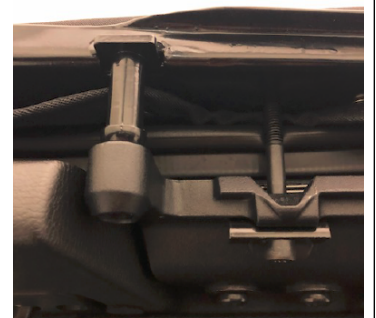

6. Pull the top all the way back and attach the rear strap to the hole in the back of the roll bar. Tighten the strap until snug.






OMIX-ADA, Inc.

Part# 13594.36

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Savannah Brief Top, JT

7. Open all doors. Attach the hook and loop straps around the roll bar to secure the brief to the vehicle. Attach the two middle straps together behind the window pillar as shown in the picture.

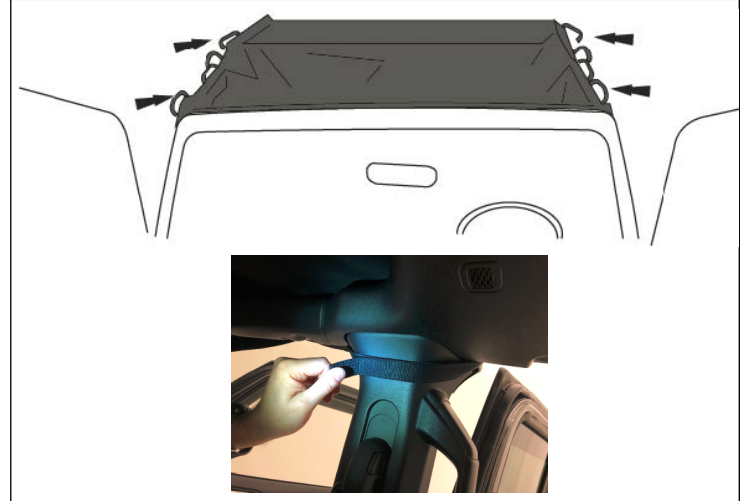

Care and Cleaning

Wash only with mild soap & dry with a clean cloth.

Do not use cleaning solvents of any kind.