



MODEL SPECIFIC GUIDE

D-Ring Hinge Version

Model 1011 Chevy Silverado / GMC Sierra Std/Ext/Crew Cab
8' Long Bed 1999-2007 *(will not fit 2007 new body style)*




Note: If your truck is equipped with a spoiler style tailgate piece, you will need to replace it with a standard smooth style tailgate piece like the photo to the left.

MODEL SPECIFIC GUIDE D-Ring Hinge Version

Model 1011 Chevy Silverado / GMC Sierra 8' Long Bed 1999-2007

RE: Step 2 on the Quick Start Guide


Measurement for the rear mounting bracket is 70 3/4" from the back side of the bulkhead to the front edge of the bracket.

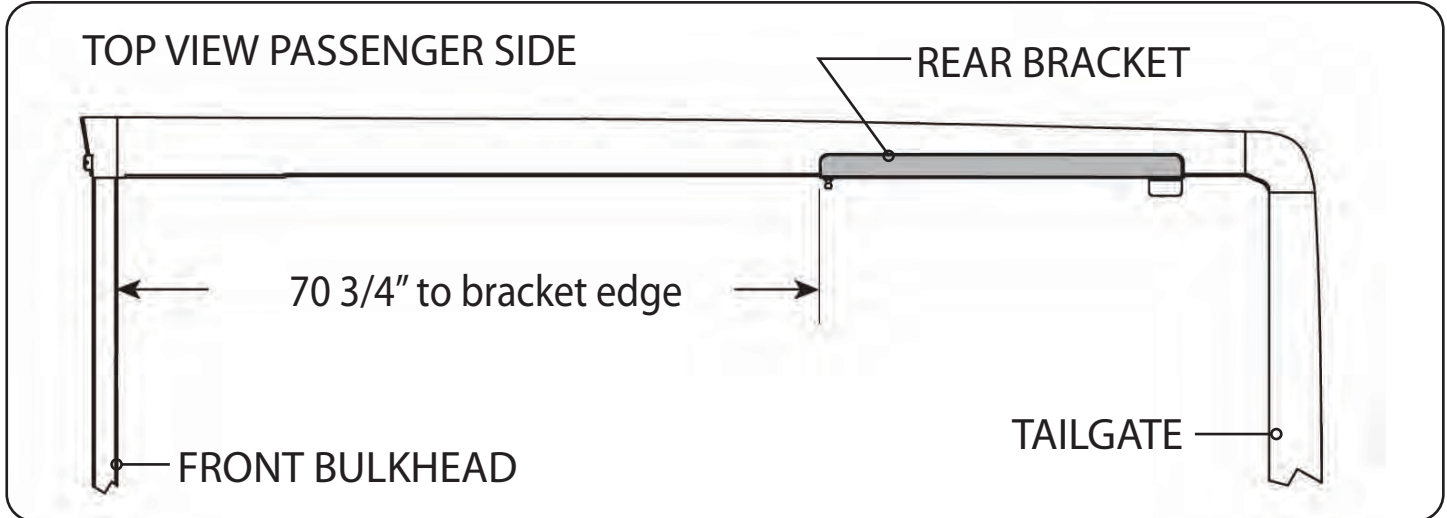

RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is 1/8" gap overhang from the front edge of the bracket to the front edge of the bulkhead.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

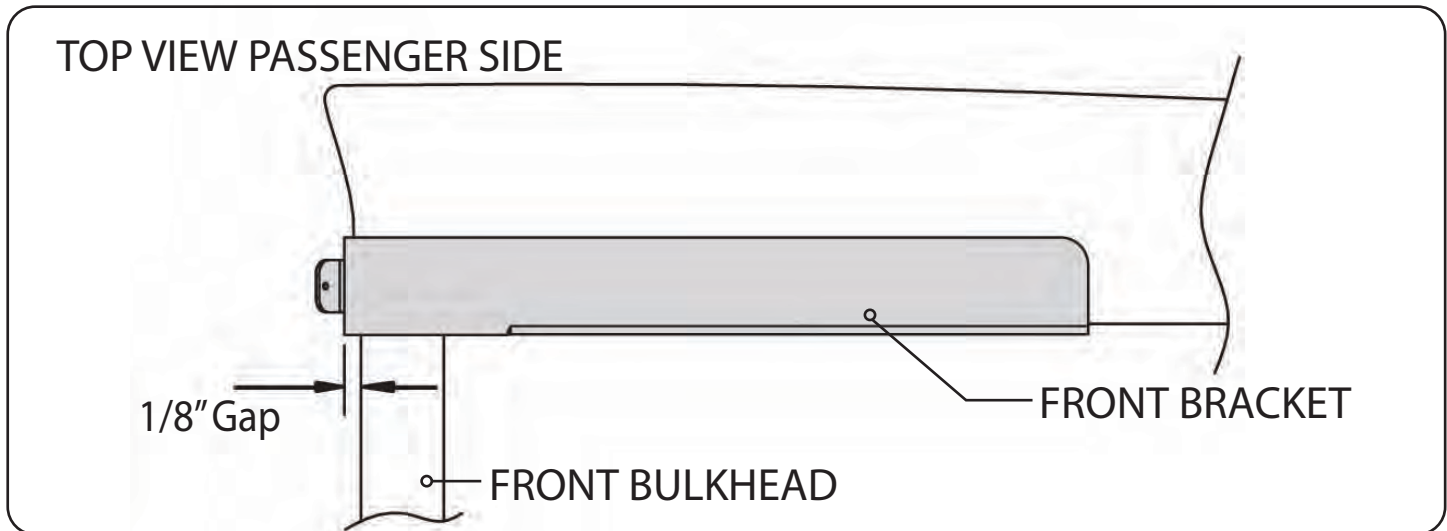

UnderCover, Inc.
P.O. Box 620
Rogersville, MO 65742
(417) 753-8000
(866) 900-8800

www.undercoverinfo.com
sales@undercoverinfo.com