



# MODEL SPECIFIC GUIDE

## Hidden Hinge Version

**Model 2123 Ford F250/F350/F-450 Std/Ext/Crew Cab**  
**8' Long Bed 2008-Current** *(with tailgate step)*




Note: This Cover will work with a tailgate step.



## MODEL SPECIFIC GUIDE Hidden Hinge Version Model 2123 Ford F-250/F-350/F-450 8' Long Bed 2008-Current

### RE: Step 2 on the Quick Start Guide


Measurement for the rear mounting bracket is 71 3/8" from the back side of the bulkhead to the front edge of the bracket.

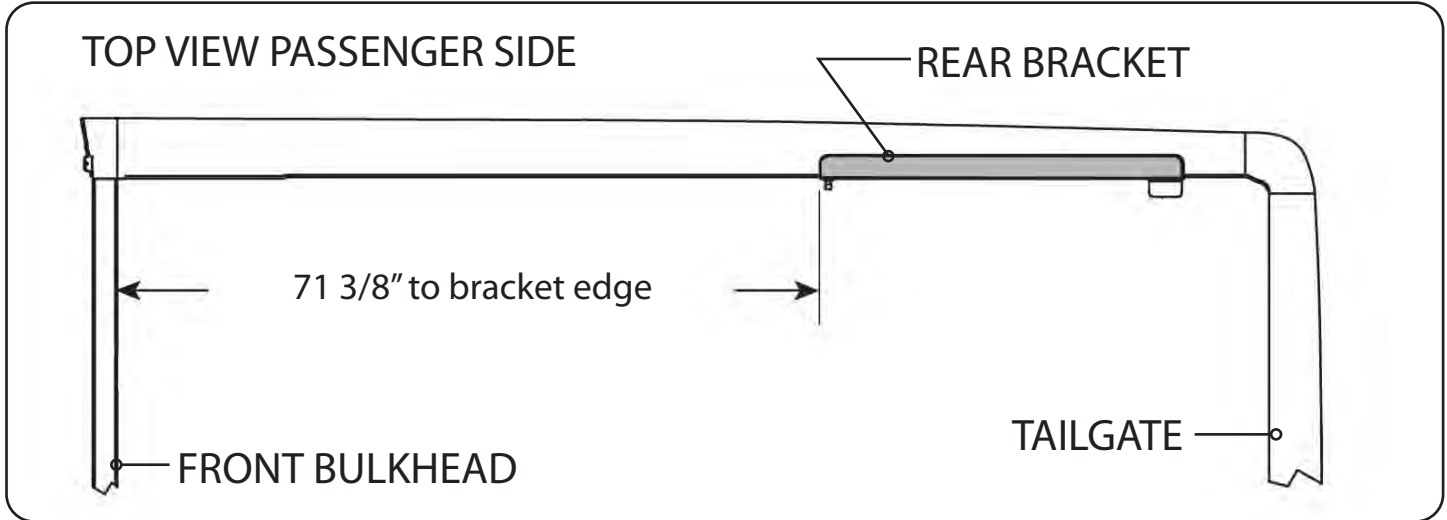

### RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is 17 1/4" from the back side of the bulkhead to the end of the bracket.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

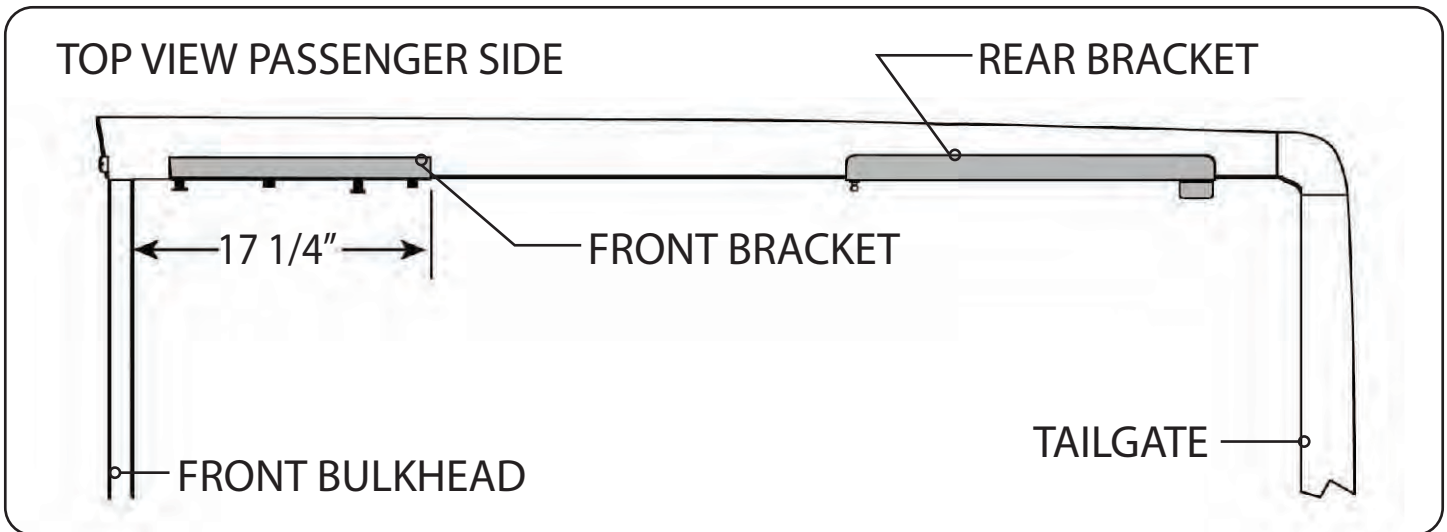

UnderCover, Inc.  
P.O. Box 620  
Rogersville, MO 65742  
(417) 753-8000  
(866) 900-8800

[www.undercoverinfo.com](http://www.undercoverinfo.com)  
[sales@undercoverinfo.com](mailto:sales@undercoverinfo.com)

© 2010 UnderCover, Inc.  
All rights reserved.