



# MODEL SPECIFIC GUIDE

## D-Ring Hinge Version

**Model 3050 Dodge Dakota Quad Cab  
5.5' Short Bed 2005-Current**



Form # AS3050II  
Created March 2012


For Warranty Issues, Contact UnderCover Directly  
(866) 900-8800 [www.undercoverinfo.com](http://www.undercoverinfo.com)



## MODEL SPECIFIC GUIDE D-Ring Hinge Version Model 3050 Dodge Dakota 5.5' Short Bed 2005-Current

### RE: Step 2 on the Quick Start Guide


Measurement for the rear mounting bracket is 37 1/4" from the back side of the bulkhead to the front edge of the bracket.

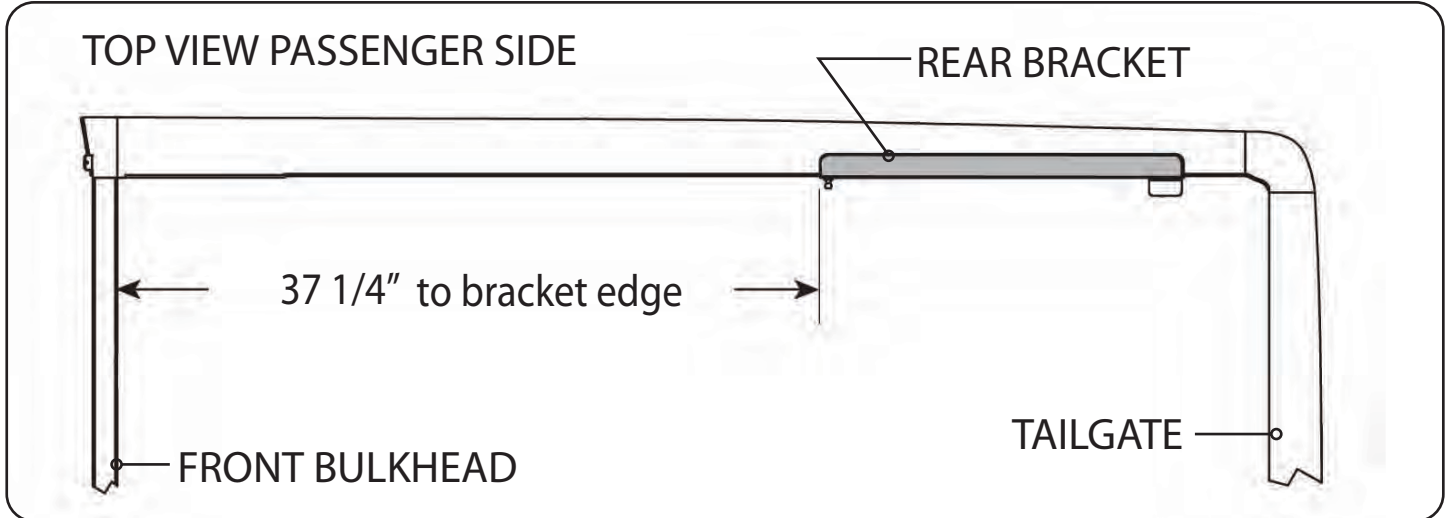

### RE: Step 3 on the Quick Start Guide

Mount the front edge of the front mounting bracket flush to the front edge of the bulkhead.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

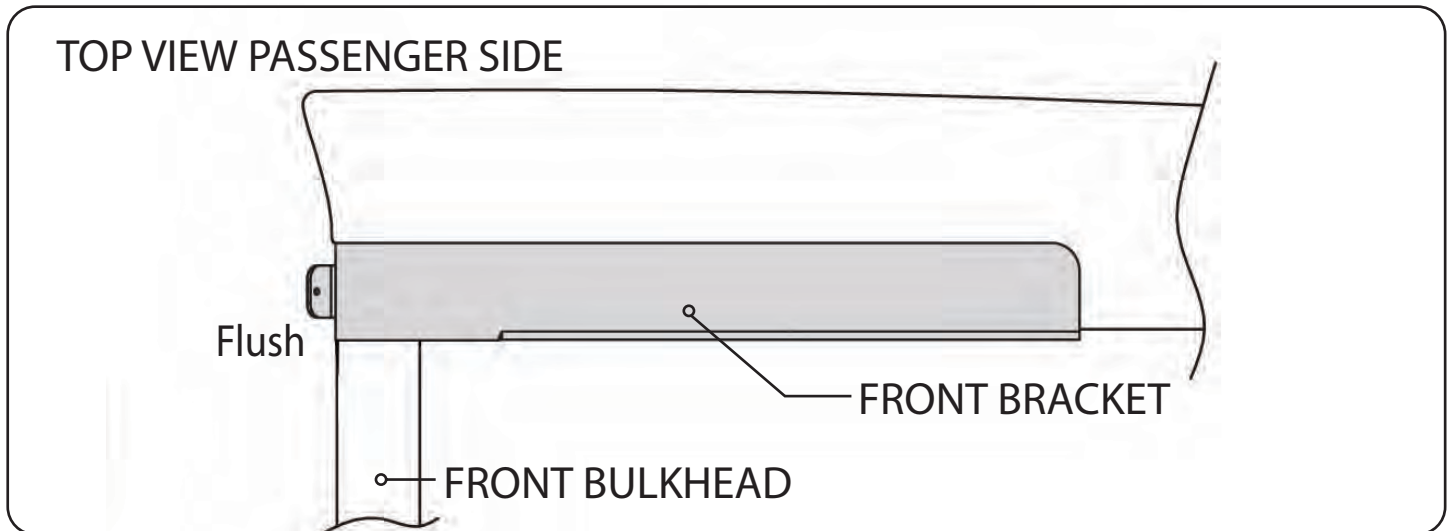

UnderCover, Inc.  
P.O. Box 620  
Rogersville, MO 65742  
(417) 753-8000  
(866) 900-8800

[www.undercoverinfo.com](http://www.undercoverinfo.com)  
[sales@undercoverinfo.com](mailto:sales@undercoverinfo.com)

© 2010 UnderCover, Inc.  
All rights reserved.