5/21/2012







INSTALLATION INSTRUCTIONS FOR PART NO. D24099

2009-12 DODGE RAM QUAD CAB P/U 2/4WD

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

### QTY PART DESCRIPTION

- 24 3/8" X 1 ¼" HEX BOLTS
- 42 3/8" FLAT WASHERS
- 30 3/8" LOCK WASHERS
- 18 3/8" HEX NUTS

## **QTY PART DESCRIPTION**


- 6 4105TP T-PLATE
- 6 D06 SIDE STEP MOUNTING BRACKETS
- 1 D24099P PASSENGER SIDE STEP
- 1 D24099D DRIVER SIDE STEP

# INSTALLATION INSTRUCTIONS

### READ THE INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN THE INSTALLATION

**STEP 1.** THIS INSTALLATION USES (3) MOUNTING BRACKETS PER SIDE. BEGIN BY INSTALLING THE SIDE STEP MOUNTING BRACKETS ON THE PASSENGER SIDE OF THE VEHICLE. LOCATE THE (2) HEXAGON SHAPED AND OBLONG HOLE IN THE BODY ROCKER PANEL AT THE FRONT OF THE CAB AND REMOVE THE TAPE COVERING THE OBLONG HOLE. INSERT (1) OF THE T-PLATES THROUGH THE OBLONG HOLE IN THE ROCKER PANEL AND POSITION THE PLATE INSIDE THE ROCKER PANEL AS SHOWN. **PHOTO #1** 




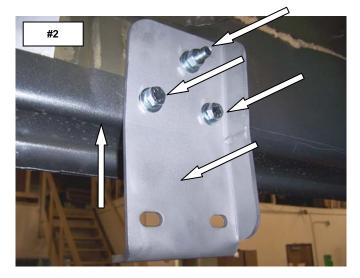

**STEP 2.** ATTACH ONE OF THE MOUNTING BRACKETS TO THE BODY PANEL USING THE T-PLATE (2) 3/8" X 1 ¼" HEX BOLTS, (3) 3/8" FLAT WASHERS, (3) 3/8" LOCK WASHERS AND (1) 3/8" HEX NUT. HAND TIGHTEN. REPEAT THE ABOVE PROCEDURE TO INSTALL THE CENTER AND REAR MOUNTING BRACKETS. **PHOTO'S #2 & #3** 

#### 5/21/2012

**STEP 3.** ATTACH THE PASSENGER SIDE STEP TO EACH OF THE MOUNTING BRACKETS USING (2) 3/8" X 1 1/4" HEX BOLTS, (4) FLAT WASHERS, (2) LOCK WASHERS AND (2) HEX NUTS. **PHOTO #4** 

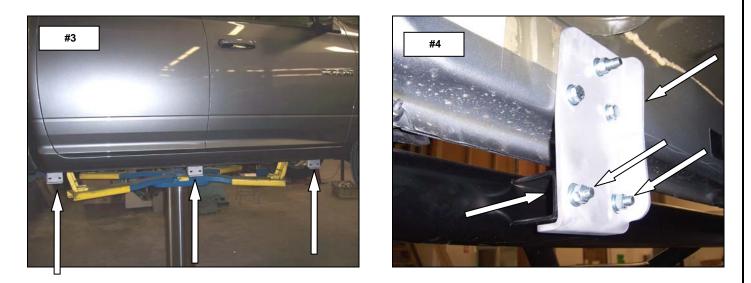

**STEP 4.** ALIGN THE SIDE STEP WITH THE VEHICLE AND TIGHTEN ALL MOUNTING BRACKET AND SIDE STEP NUTS AND BOLTS. **REPEAT THE ABOVE PROCESS TO INSTALL THE DRIVER SIDE BRACKETS AND SIDE STEP.** 



Please do not return this product to place of purchase.

If you have defective, missing or damaged parts or need assistance, please contact Go Rhino Products for fast, friendly customer service at: 1-888-427-4466 or email: <u>warranty@gorhino.com</u>

#### 5/21/2012

Warranty: Go Rhino! Products® warrants its products to be free from defects in materials and workmanship. This limited warranty extends for 5 years/50,000 miles (whichever comes first) for black, 5 years/50,000 miles (whichever comes first) for chrome and a limited lifetime for polished stainless from the date of purchase for parts purchased after April 2004. Warranty claims must be accompanied with original invoice and photos. It is the customer's responsibility to protect the finish with regular applications of a nonabrasive polish that is compatible with the product's finish. This warranty covers the cost of the product only and does not include the cost of removal, installation or shipping. This warranty is void if the product shows signs of alteration, misuse, mishandling, improper care, neglect, improper application, and/or damages improper installation. This warranty provides a one-time replacement on workmanship if all of the above conditions are met.

Liability: Go Rhino! Products® Grille and Brush Guards are designed to enhance the styling of the vehicle only; they are not intended as collision protection bumpers. Go Rhino! Products'® liability is limited to the repair or replacement of the defective part(s) made by GoRhino! products®. The item(s) will be subjected to inspection by Go Rhino! Products®. Part(s) that in our opinion were damaged by incorrect fitting, neglect or improper use will not be replaced or repaired. Go Rhino! Products® reserves the right to change specifications, terms, conditions and prices of items shown in this catalog without notice.