



Equipped with AEM® Dryflow™ Filter
No Oil Required!

INSTALLATION INSTRUCTIONS

PART NUMBER: 21-8018

2006	HUMMER	H3	L5-3.5L	C.A.R.B. E.O. # D-392-29
2004-2006	CHEVROLET	Colorado	L5-3.5L	C.A.R.B. E.O. # D-392-27
2004-2006	GMC	Canyon	L5-3.5L	C.A.R.B. E.O. # D-392-27

* **NOTE:** Legal in California only for racing vehicles which may never be used upon a highway

PARTS LIST

Description	Qty.	Part Number
Air Filter Assy. 3.00 X 9" Dry Ele.	1	21-2039DK
Inlet Pipe	1	2-80181
Heat Shield	1	20-8019
Hose, Adapter 3.00/3.25x3" Blk.	1	5-320
Hose; 1/2"ID X 12"L	1	5-5012
Mount, Rubber 1" X 8mm	1	1228560
Cap, Press Reg.	1	8-107
Connector, Plastic 5/16" Straig.	1	8-148
Hose; 5/16ID X 8"L	1	5-2008
Bolt, Hex M8-1.25 X 20mm	2	1-2034
Washer, 8mm Soft Mount	4	559960
Nut, M8 Hex Serrated	3	444.460.08
1/2" Bnd. Hose Clamp, 2.56"-3.50"	1	9448
1/2" Bnd. Hose Clamp, 2.90"-3.75"	2	9452
Hose Clamp, 1"	2	99024.032
Edge Trim, 23"	1	8-4023

Read and understand these instructions **BEFORE** attempting to install this product. Failure to follow installation instructions and not using the provided hardware may damage the intake tube, throttle body and engine.

1. Preparing Vehicle

- a. Make sure vehicle is parked on level surface.
- b. Set parking brake.
- c. If engine has run in the past two hours, let it cool down.
- d. Disconnect negative battery terminal.
- e. Do not discard stock components after removal of the factory system.


2. Removal of stock system




a. Factory air box system installed.



b. Unplug the wire harness from the Mass Air Flow (MAF) sensor. Remove the two screws retaining the MAF sensor and carefully remove the MAF sensor.

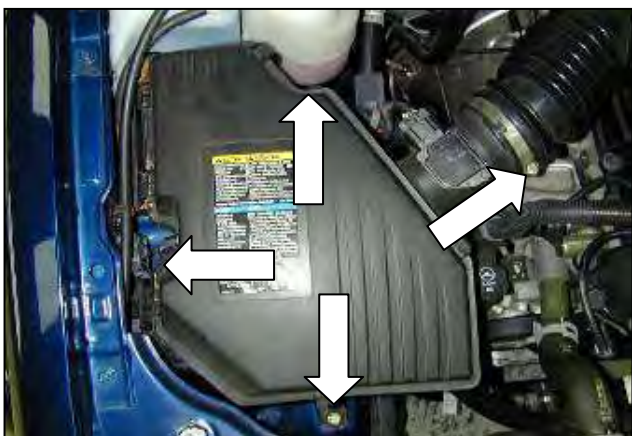

c. Loosen the hose clamp on the stock air box. Remove the air box by removing the two bolts and the nut securing it. Lift air box out of vehicle.

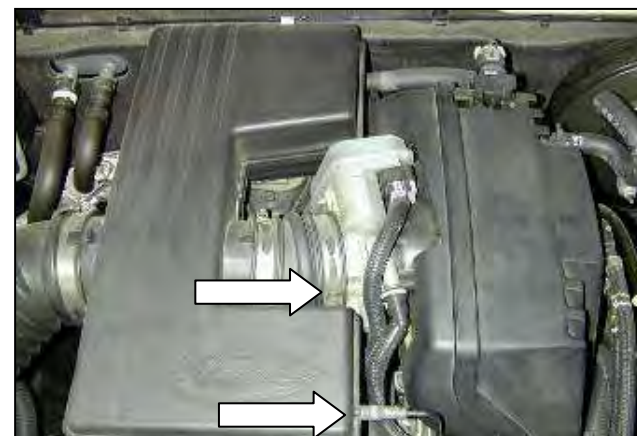

d. Loosen the hose clamp on the throttle body attached to the stock intake resonator. Unplug the small breather hose connected to the front of the resonator. On 2006 and new trucks the small breather hose is not present.



e. Remove the two bolts on the air resonator. Lift the resonator up and remove the breather hose from the valve cover. Remove the small breather hose from the front of the resonator and remove the resonator.



f. Factory air box system removed.

3. Installation of AEM® intake system.

- a. When installing the intake system, do not completely tighten the hose clamps or mounting hardware until instructed to do so.



b. Install the supplied rubber mount on to the AEM® heat shield using one each of the supplied washers and locknuts.



c. Install the AEM® heat shield using the two supplied bolts and washers and the original air box mounting nut. Install rubber edge trim to the top of the heat shield.



d. Install the MAF Sensor using the original mounting screws. Use caution to avoid damaging the o-ring.



e. Install the reducing coupler on the end of the intake pipe using the #48 hose clamp.



f. Slide the bracket side of the pipe through the heat shield hole. Align the coupler with the throttle body and secure using the #52 hose clamp.



g. Align the intake pipe bracket with the rubber mount on the heat shield. Use the supplied washer and nylok nut to partially secure.



h. Check to be sure that the AEM® air filter is clear from and debris. Attach the air filter to the end of the AEM® intake pipe as shown.



i. Attach the supplied 1/2" hose between the intake pipe and the valve cover as shown. Trim to fit and secure using the supplied hose clamps.



j. Insert the supplied plastic barb fitting into the end of the small breather hose removed in step 2d. Attach the supplied 5/16" hose between the plastic barb fitting and the intake pipe. For the 2006 and newer trucks refer to step 3k.



k. For 2006 and newer trucks you will need to plug off the smaller nipple located in the front of the pipe.



I. Position the AEM® intake for best fitment. Be sure that the pipe or any other component is not in contact with any part of the vehicle. Tighten the hose clamps at the throttle body. Tighten the nut on the mounting bracket. Re-adjust pipe if necessary. Re-connect the MAF wire harness.



Factory air box system installed



AEM® intake system installed

4. Reassemble Vehicle

- a. Position the inlet pipes for the best fitment. Be sure that the pipes or any other components do not contact any part of the vehicle. Tighten the rubber mount, all bolts, and hose clamps.
- b. Check for proper hood clearance. Re-adjust pipes if necessary and re-tighten them.
- c. Inspect the engine bay for any loose tools and check that all fasteners that were moved or removed are properly tightened.
- d. Reconnect negative battery terminals and start engine. Let the vehicle idle for 3 minutes. Perform a final inspection before driving the vehicle.

5. CARB Sticker Placement

- a. The C.A.R.B. exemption sticker, (attached), must be visible under the hood so that an emissions inspector can see it when the vehicle is required to be tested for emissions. California requires testing every two years, other states may vary.

6. Service and Maintenance

- a. It is recommended that you service your AEM® Dryflow™ filter every 20,000 miles for optimum performance. Use AEM Dryflow cleaning kit part # 21-110.
- b. Use aluminum polish to clean your polished AEM® intake tube.
- c. Use window cleaner to clean your powder coated AEM® intake tube. **(NOTE: DO NOT USE aluminum polish on powder coated AEM intake tubes).**

For technical inquiries
e-mail us at
sales@aemintakes.com
or
call us at
800.992.3000

AEM Air Intake System Warranty Policy

AEM® warrants that its intake systems will last for the life of your vehicle. AEM will not honor this warranty due to mechanical damage (i.e. improper installation or fitment), damage from misuse, accidents or flying debris. AEM will not warrant its powder coating if the finish has been cleaned with a hydrocarbon-based solvent. The powder coating should only be cleaned with a mild soap and water solution. Proof of purchase of both the vehicle and AEM intake system is required for redemption of a warranty claim.

This warranty is limited to the repair or replacement of the AEM part. In no event shall this warranty exceed the original purchase price of the AEM part nor shall AEM be responsible for special, incidental or consequential damages or cost incurred due to the failure of this product. Warranty claims to AEM must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is nontransferable. Improper use or installation, use for racing, accident, abuse, unauthorized repairs or alterations voids this warranty. AEM disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by AEM. Warranty returns will only be accepted by AEM when accompanied by a valid Return Merchandise Authorization (RMA) number. Credit for defective products will be issued pending inspection. Product must be received by AEM within 30 days of the date RMA is issued.

If you have a warranty issue, please call (800) 992-3000 and our customer service department will assist you. A proof of purchase is required for all AEM warranty claims.