




Water Sport Carrier Installation Instructions

Package Contents:

- (4) Water sport saddles
- (4) T-bolts
- (4) Nylon washers
- (4) Daisy Dials
- (2) Tension Lock Straps


1.

Ideally, kayaks should be supported at the bulkheads. If possible, position the crossbars accordingly.

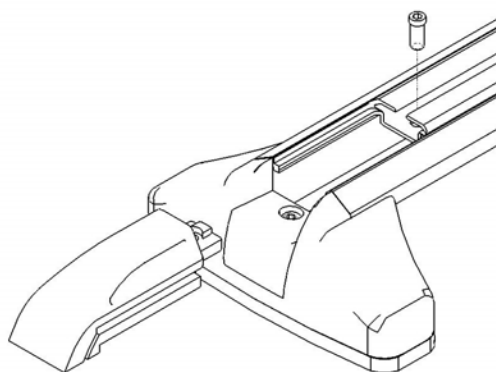


Remove the end cap from the crossbar bar by loosening the narrow shoulder hex screw.

2.

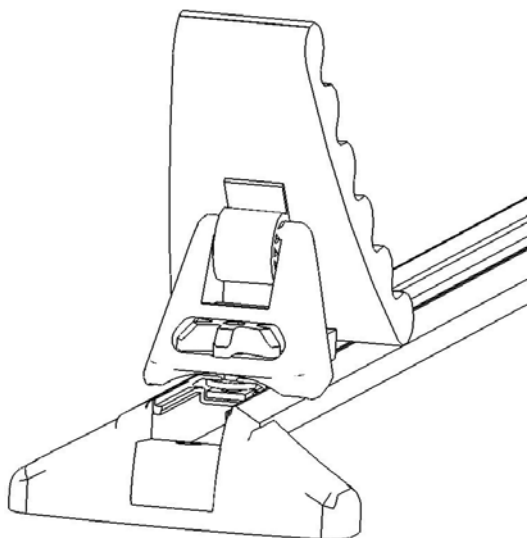

Align the tab on the front of the water sport saddle so that it slides into the channel. Loosen the daisy dial on the water sport saddle so that the nylon washer rests inside the channel on the crossbar.

3.

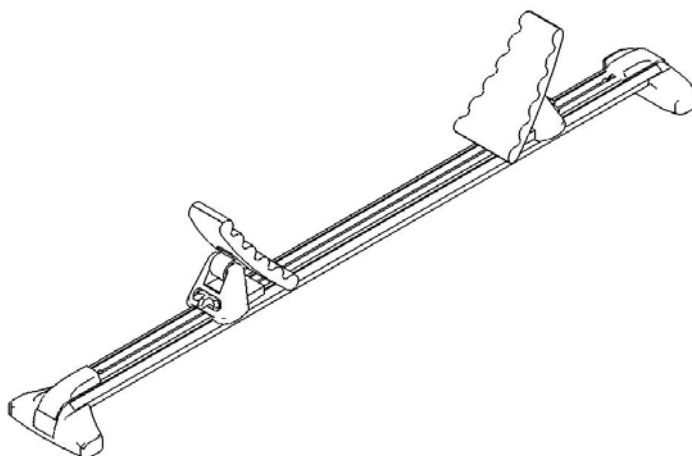


Slide two water sport saddles into the crossbar. The water sport saddles should be orientated such that they face each other. Replace the end cap after the water sport saddles are in place.

Position the empty kayak, hull down, between the watersports saddles. Be certain the water sport saddles are snug against the *sides* of the kayak. Adjust steepness of water sport saddles as needed.

Turn the daisy dial clockwise to tighten the water sport saddles against the crossbar. Tighten until water sport saddles are snug. Do not over tighten.


4.

To secure, bring free end of strap over kayak, thread through water sport saddles, twist strap twice beneath kayak, and thread through the opposite water sport saddle.

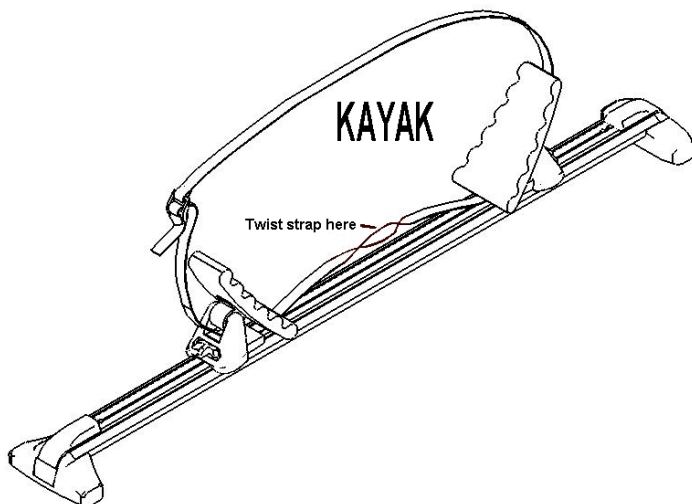


5.

Thread end of strap through the buckle as shown below.

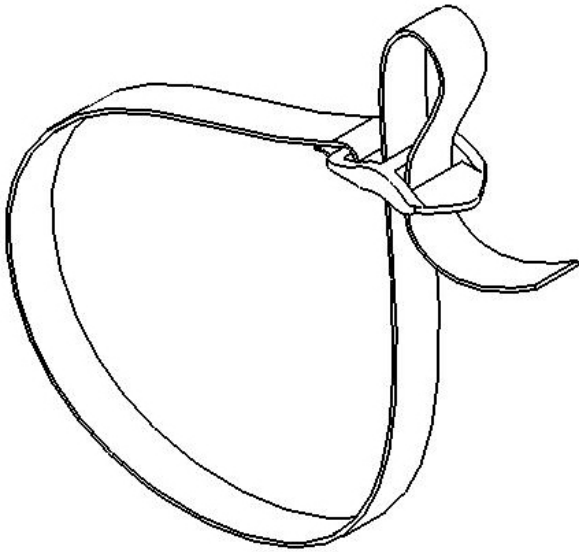

6.

Pull strap tight and knot all straps against buckle.

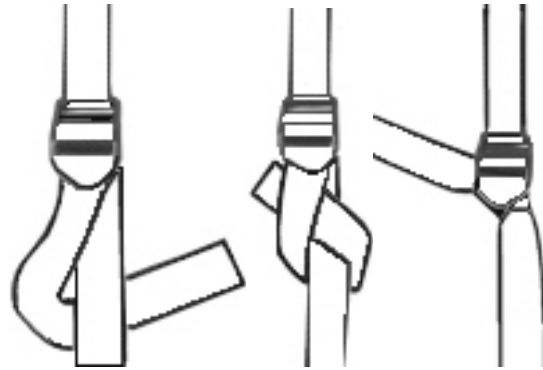

Note: Load must be secured to both cross members and from front and rear of load to bumper area.

7.

Check your installation. Be certain:

Load is secured with tie down straps to both crossbars and from front and rear of load to bumper area.

Daisy dials are tight and water sport saddles are secure to crossbar.

Load is evenly distributed on crossbars. For maximum weight limitations, follow recommendations of vehicle manufacture and rack manufacturer.

The entire system including the attachment of crossbars to vehicle is stable and secure.

PRO RAC GUIDELINES

Please review the instructions and warranty carefully. Assembly and installation are the purchaser's responsibility and beyond ProRac's control. Therefore, ProRac exclusively limits its warranty to the repair or replacement of a defective ProRac product for up to three years from retail purchase. Warranty excludes damage to your vehicle, cargo, or any person or property during assembly, installation, and use.

- ◆ Do not carry more than 150 pounds (68KG) of combined cargo and accessories on ProRac crossbars. ProRac crossbars do not increase gutter or roof strength. ProRac cannot warranty loads that exceed this limit.
- ◆ Do not use ProRac crossbars and accessories for purposes other than those for which they were designed. Do not exceed their carrying capacity. Failure to follow these guidelines or the product instructions will void the warranty.
- ◆ Make sure all knobs, bolts, screws, straps, and locks are firmly attached, tightened, and locked before every trip. All fasteners must be periodically inspected for signs of wear, corrosion, and fatigue. Check your load at stops during long trips to ensure continued fastening security.
- ◆ Check all local and state laws governing projection of objects beyond the width and length of vehicle. Be aware of the width and height of your cargo since low-clearance branches, bridges, and parking garages can affect the load. Never drive with any lock, knob, or rack in an open or unlocked position. All long loads such as, but not limited to, sailboards, surfboards, kayaks, canoes, and lumber must be tied down front and rear to the bumpers or tow hooks of the vehicle.
- ◆ Remove your rack and accessories when they are not in use and before entering automatic car washes.
- ◆ All locks must be turned and moved periodically to ensure smooth operation. Use graphite or similar dry lubricant. Locks are designed to deter vandalism and theft. Remove valuable gear if your vehicle is unattended. Replacement keys are available only through your ProRac dealer.
- ◆ All cargo will affect the vehicle's driving behavior. For your safety, adapt your speed to the conditions of the road and load being carried. Obey all posted speed limits and traffic cautions.
- ◆ Due to their wind resistance, do not carry disks or wheels with covers on the ProRac bike carrier.
- ◆ Consult your ProRac dealer if you have questions regarding the operation and limits of ProRac products. Review all instructions and warranty information carefully.

© 2005 ProRac Systems, Inc.

FGAT874-IS
Revised 5-16-05

ProRac Systems Inc.
7109 31st Avenue North
Minneapolis, MN 55427-2848

Toll Free: 1-800-217-7133
Phone: 763-546-5620
Fax: 763-546-0933
WWW.PRORAC.COM