

# INSTALLATION INSTRUCTIONS BLACK MODULAR GRILLE GUARD FOR TOYOTA RAV4 2019-2020 PART # 17A093904MA

## **Before Installation**

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

#### Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
1	1	GRILLE GUARD	2	1	LEFT BRUSH GUARD
3	1	RIGHT BRUSH GUARD	4	1	BRACKET (L)
(5)	1	BRACKET (R)	6	1	SUPPORT BRACKET (L)
7	1	SUPPORT BRACKET (R)	8	2	PLATE BOLT
9	6	HEX BOLT M10*35	(10)	8	SPRING WASHER D10


Page 2 of 5

		BLAC	CK MODULAR GRILLE GUARD FOR TOYOTA RAV4 2019		
11)	14		12	8	
		LARGE WASHER D10			HEX NUT M10
13	1	ALLEN WRENCH S=5	14	12	LARGE WASHER D8
15	6	TYPE 1 HEX LOCK NUT M8 WITH NON-METALLIC INSERT	16	6	HEX SOCKET BUTTON HEAD SCREW M8

## InstallationSteps


# Installation Figure:

Step 1: Mount support bracket L&R 6 7 on the mounting point in the hood of the car, (Figure 1) . Do not fully tighten the bolts at this step.

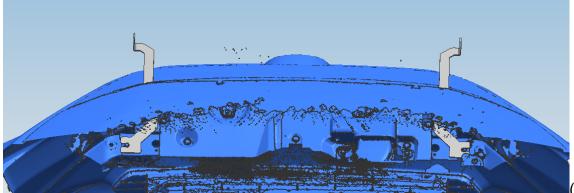


(Figure 1)

Step 2: Mount bracket L&R ④ ⑤ in the bottom of the frame with plate bolt ⑧, hex bolt m10\*35 ⑨, spring washer d10 ⑩, large washer d10 ⑪ and hex nut m10 ⑫. Do not fully tighten the bolts at this step.

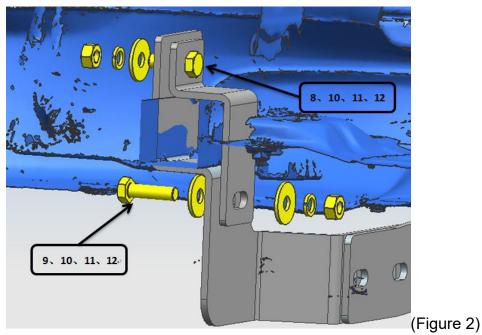


Step 3: Install guile guard ①, brush guard L&R ② ③ and support bracket L&R ⑥ ⑦ with allen wrench S=5 ①, large washer D8 ②, type 1 hex lock nut m8 with non-metallic insert ① and hex socket button head screw M8 ⑥, (Figure 3). Connect guile guard and brackets with hex bolt m10\*35 ⑤, spring washer d10 ①, large washer d10 ① and hex nut m10 ②, (Figure 4).

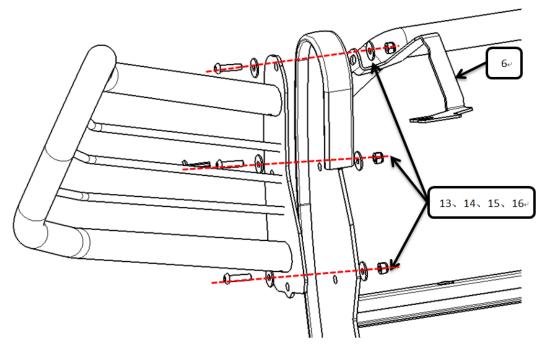

(Figure 3)


Page 4 of 5

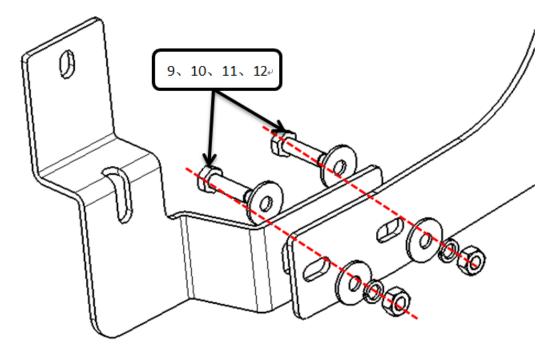

(Figure 4)

Step 4: Adjust the grille guard to perfect position and fully tighten all the hardware.

Step 5: Installation finished, pick up all tools.

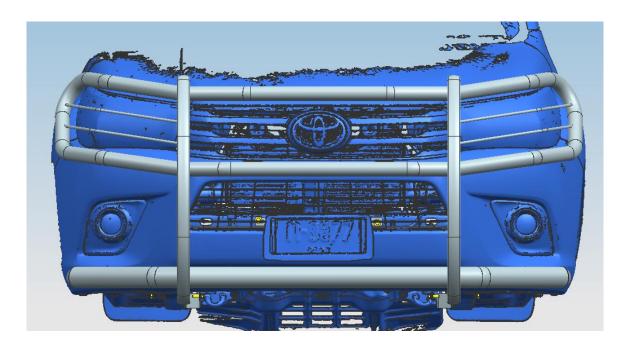

●NOTE: Any damages and losses caused by improper installation and application, goes beyond our quality warranty.