


CGS Installation Instructions

Please direct all installation questions to CGS Motorsports at (909) 444-5536. DO NOT call the retailer in which you purchased your CGS System.



Thank you for choosing a CGS Catback Exhaust System™ to power your vehicle. These instructions will take you through the installation of your new catback exhaust system.

Kit includes:

Qty. Description Part#
 1 Headpipe 300-1022
 1 CGS Muffler 82501
 4 2 1/2" Clamps
 1 turn up pipe 300-1023
 1 exit pipe 300-1024
 1 3 1/2" Stainless Steel Tip 93525

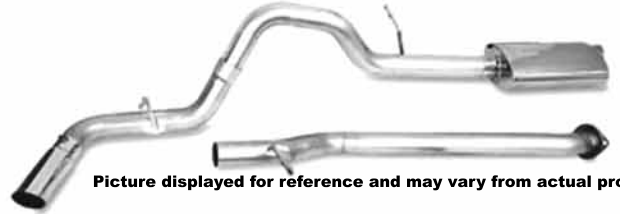

Picture displayed for reference and may vary from actual product

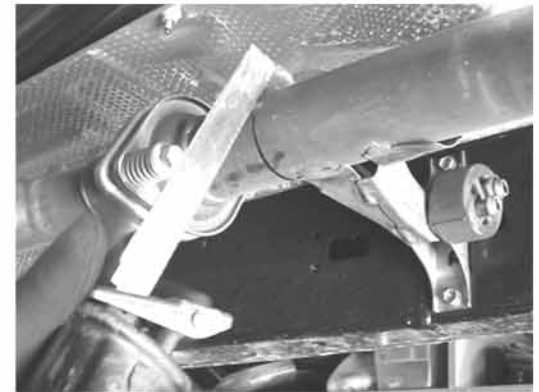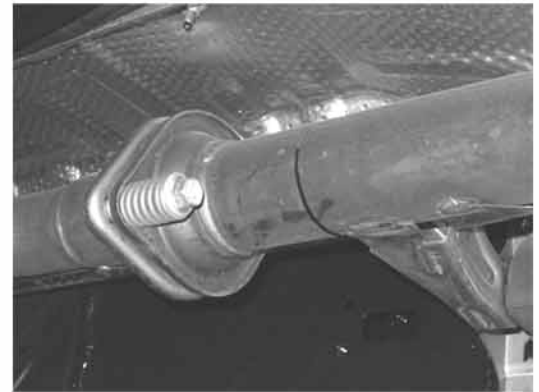

1) Remove stock exhaust system

Start by removing the stock Exhaust System. First measure back 3" from the flange and mark, next you will need to cut the stock headpipe and remove. Then slide the complete system carefully towards the rear off of the rubber hangers. Remove the system from under the truck.

2) Installing your catback exhaust system

Make sure that all existing rubber Hangers are still in place. Install the headpipe over the stock pipe and secure with a clamp but do not tighten. Then insert the bracket from the headpipe into the rubber hanger. Proceed to install muffler onto headpipe. Install the *turn up pipe* onto the muffler. Next the exit pipe will install and insert the bracket into the rubber hanger. Once the exhaust system is positioned and lined up correctly, install clamps at all connections. Install the stainless steel tip and tighten bolts.

3) Final checklist

Once completed, check to make sure all the clamps and bolts have been securely fastened. That's it, a simple install with a lot of results. **Congratulations!** You just installed more horsepower to your truck by allowing it to breathe easier with a CGS Catback Exhaust System™.

Thank you again and enjoy your new CGS Catback Exhaust System™.

