



Silver Bullet

Throttle Body Spacer

PN 46-34001


Important!

This kit includes the parts for several different installations; please verify the parts list and read all instruction steps before you begin installation.

Make: General Motors Trucks and SUV

Model	Year	Engine	Model	Year	Engine
Escalade/ESV/EXT	99-06	5.3/6.0L	Denali	03-07	6.0L
Avalanche	02-06	5.3/6.0L	Sierra "Classic"	99-07	4.8/5.3/6.0
Silverado "Classic"	99-07	4.8/5.3/6.0	Yukon	99-06	4.8/5.3/6.0
SSR	03-04	5.3L	Yukon Denali	03-06	6.0L
Suburban	99-06	5.3/6.0L	Yukon XL	02-06	5.3/6.0L
Tahoe	99-06	4.8/5.3L	H2/HUT	03-07	6.0L

1. Loosen and remove the engine sight cover if equipped. Unbolt throttle cable bracket from intake manifold if equipped. Loosen and remove the air inlet tube from throttle body.
2. Loosen the three nuts securing the throttle body to intake manifold. Using a 4mm 6-pt socket, remove the throttle body studs from intake manifold.
3. Install a gasket, the aFe Silver Bullet throttle body spacer (AIR IN engraving side faces the throttle body), and another gasket and throttle body onto intake manifold. Using the washers and 55mm long bolts secure the throttle body to intake manifold. Tighten the bolts to 10 Nm (89 lb/in).
4. If equipped with throttle cables, attach the extender brackets to the intake manifold using the 6mm countersink screws. Now attach the throttle cable bracket to the new extenders.
5. Reinstall the air inlet tube onto the throttle body. Reinstall engine sight cover if equipped.

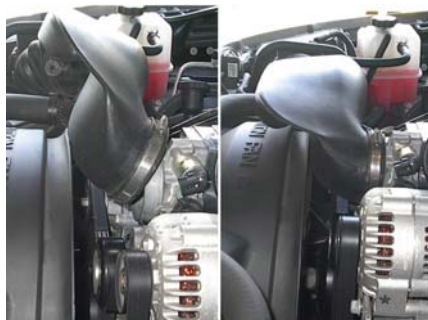

Parts List

- 1 aFe Silver Bullet Spacer
- 1 Gasket
- 4 6mm x 55mm bolts
- 4 6mm lock washers
- 2 6mm countersink screws
- 2 6mm extender brackets

advanced FLOW engineering

252 Granite Street, Corona, CA 92879

Support: 951-493-7100

www.aFePower.com