

Accessories List

1. Fury Series Front Grille




Installation Steps

1. Install the previous snap joint in the snap joint mounting base of new front face.



2. Install the front fender in the car.

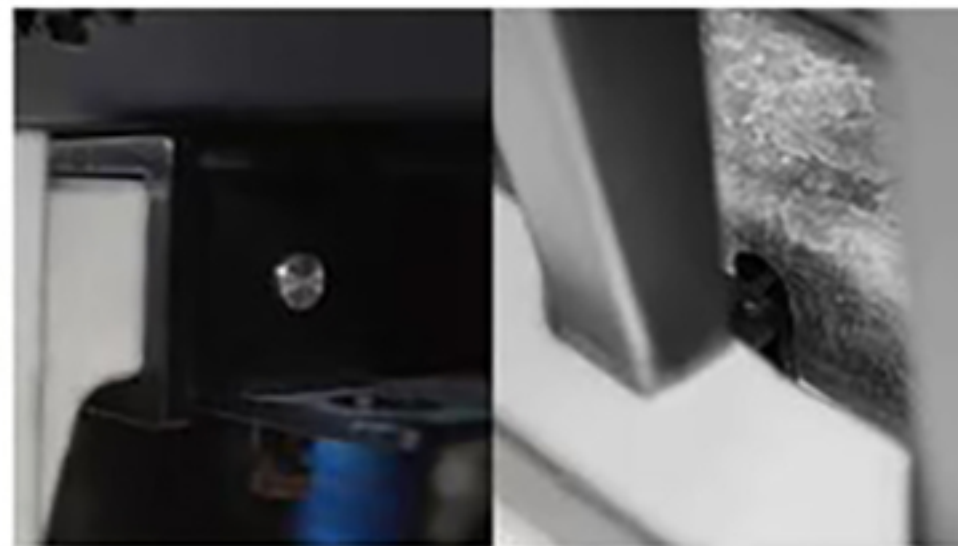

3. Install plastic snap joint (including six hole sites, both in upward side and lateral).



4. After finishing installation, insert the fixed pin.



5. Picture of installation accomplishment.

