


RB-0701-BK

BRACKET KIT

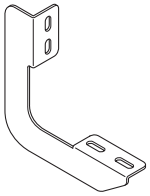





Components:




Mount Bracket - Qty 4


Hardware:

- | | |
|---|--|
|  M8 Flange Nut
Qty 8 |  M8 Lock Washers
Qty 8 |
|  M8 Flat Washer
Qty 8 |  M8 Hex Head Nut
Qty 8 |

Tools Required:



RATCHET



TORQUE WRENCH



17MM SOCKET



14MM SOCKET

Torque Specifications:


For Rocker Panel Mount Installations
M8 through M12 bolts and nuts are set to 15-20 ft lbs.

Note: When installing the brackets and bars, all hardware must be left loose until all the items are attached.

1. Remove all contents from the package and check stainless steel tubes for any damage. Also, verify that all components and hardware listed above are included before you begin installation.

2. Read installation manual and installation drawing completely. Understand all brackets and bolts before installation.

3. Begin installation on the driver's side. Align **Brackets** as shown.

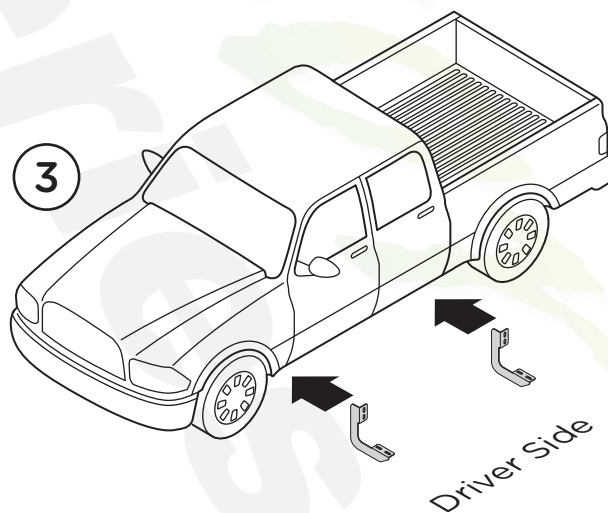

4. Align the Front and Rear Driver's Side Brackets with existing bolts located on the rocker panel of the vehicle.

5. Secure the Front and Rear Driver's Side Brackets to the rocker panel by fastening two (2) M8 Flange Nuts to existing bolts per bracket.

