

INSTALLATION INSTRUCTIONS

⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

APPLICATIONS

Make	Model
Honda	Element



WIRING LOCATION GUIDE

SUVs, MINI & FULL-SIZED VANS (S)

Representative vehicle shown below

S8 - Under rear floor panel

CUSTOM WIRING CONNECTOR

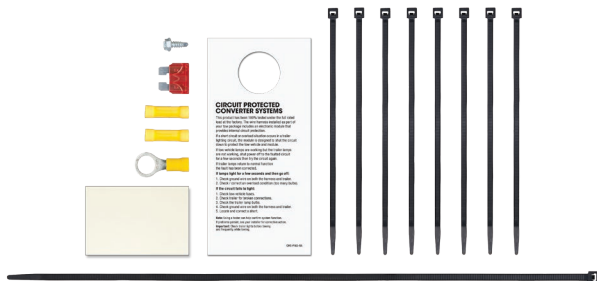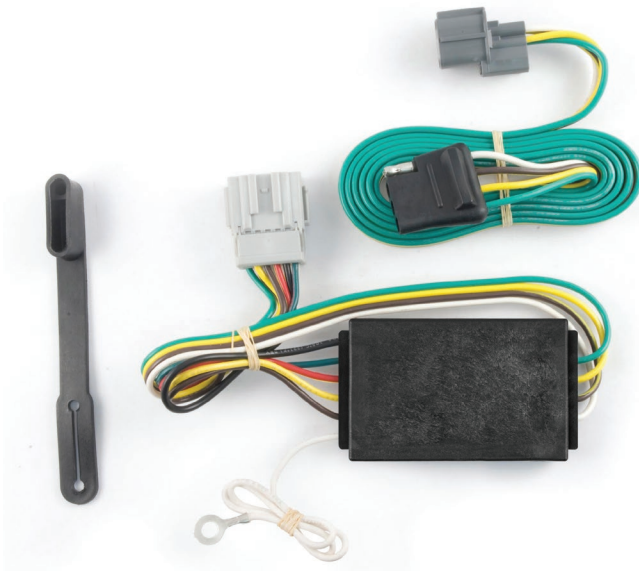

NOTICE

All steps must be followed to ensure the wiring connector will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

TOOLS NEEDED

None

⚠ WARNING

The battery connection must be fuse-protected, 10-amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side

Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Open the driver-side door and remove the access panel under the steering wheel by turning the locking knobs 90 degrees counter-clockwise (A). Locate the vehicle wiring harness it will be to the left of the steering column taped to another harness (B).

Step 2

Insert the custom wiring harness 10-pin connector with the black converter attached into the vehicle wiring harness connector. Make sure the connectors are fully inserted with locking tabs in place.

Step 3

Locate a flat spot inside the vehicle, under the dash. Adhere the black converter box using the provided double-sided tape.

Step 4

Open the vehicle tailgate and remove the cargo nets and the cargo area floor cover to access the spare tire area (C).

Step 5

On the driver side, locate the vehicle wiring harness. It will be mounted on the rear scuff panel (D). Remove the protective cover (E). Insert the custom wiring harness into the vehicle harness. Make sure the connectors are fully inserted with locking tabs in place (F).

Step 6

When in use, route the 4-flat to the center of the vehicle and out of the trunk. When not in use, roll up and store in a convenient, out of the way location inside the trunk. Secure any loose wires with the provided cable ties.

Step 7

Reinstall all items removed during install. Install the provided 4-flat dust cover to help prevent corrosion.

