


S5216

08-10 FORD F250/F350, 5.4L/6.2L/6.8L (V10), CREW CAB LONG BOX AND SHORT BOX, EXTENDED CAB LONG BOX

MBRP
INC.
PERFORMANCE EXHAUST

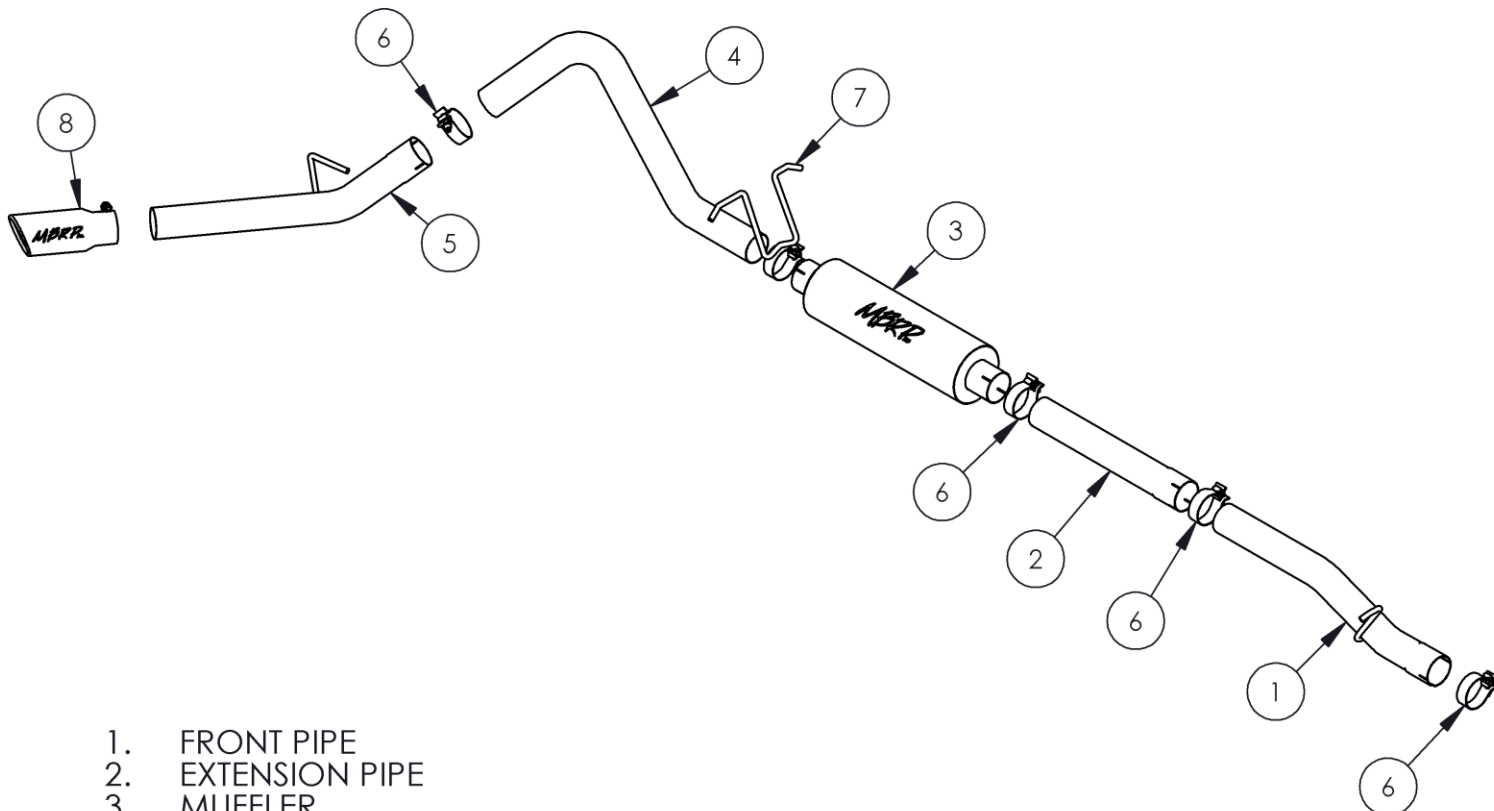

1. FRONT PIPE
2. EXTENSION PIPE
3. MUFFLER
4. OVER AXLE PIPE
5. TAIL PIPE
6. 3" BAND CLAMP (4 PCS)
7. 3" HANGER BAND CLAMP
8. EXHAUST TIP

NOTE: SADDLE CLAMPS ARE USED IN ALUMINIZED SYSTEMS

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

Removal of Stock System:



Figure 1

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.

2. Loosen the clamp located rearward of the “Y” pipe and flange.
Refer to Figures 1.



Figure 2

3. Remove the hangers from the rubber insulators and remove the exhaust from the vehicle. If a hoist or hydraulic lift is not being used the tail pipe may need to be cut to clear the rear axle. **Refer to Figures 2 & 3.**



Figure 3

Installation of MBRP Inc. Performance Exhaust:

1. Install the **Front Pipe** to the vehicle using one of the **3” Clamps** provided. Attach the **Front Pipe** hanger to the existing rubber isolator.
Refer to Figure 4.



Figure 4



Figure 5

2. Slide a **3" Clamp** over the **Front Pipe** and install the **Extension Pipe** over the **Front Pipe**.

Note: The **Extension Pipe** is only required for the Crew Cab Long Box (174.2" Wheelbase)



Figure 6

3. Slide a **3" Clamp** over the **Extension Pipe** and install the **Muffler** onto the **Extension Pipe**. Install the **3" Hanger Clamp** loosely to outlet of the **Muffler** placing the hangers into the existing rubber isolators. **Refer to Figures 5 & 6.**

4. Loosely install the **Over Axle Pipe** connecting it to the **Muffler** outlet using the **3" Hanger Clamp**. **Refer to Figure 7.**



Figure 7

5. Attach the expanded end of the **Tail Pipe** and connect it to the **Over Axle Pipe** using the remaining **3" Clamp**. Slide the **Tail Pipe** hanger into the factory rubber isolator. **Refer to Figure 8.**

6. Install and adjust the **Exhaust Tip** to suit. Using a 17mm wrench tighten the lock bolt on the **Exhaust Tip**. **Refer to Figure 9.**



Figure 8

7. Align the exhaust as required. Starting at the front of the exhaust tighten all clamps and connections.

8. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines or any wiring. If any interference is detected relocate or adjust.

Congratulations! You are ready to begin experiencing the improved power, sound and driving excitement of your MBRP Inc. performance exhaust system.
We know you will enjoy your purchase.



Figure 9