


INSTRUCTION MANUAL CAT BACK STAINLESS SINGLE EXHAUST NISSAN FRONTIER 3.3L 4DR 2WD CREWCAB, SHORT & LONG BED PART# 612207

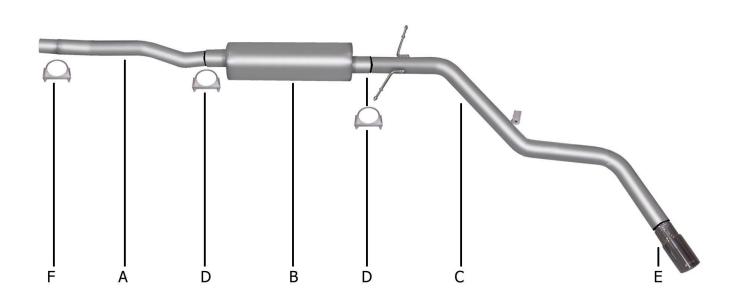

ITEM	PART # QU	ANTITY	DESCRIPTION
A	669-700532S	1	STAINLESS HEADPIPE
В	788200S	1	STAINLESS SUPERFLOW MUFFLER
С	481-700370S	1	2.5" STAINLESS TAILPIPE
D	5757	2	2.5" CLAMP
E	500361	1	3" STAINLESS TIP
F	5756	1	2-1/4" CLAMP

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 528-3044, Monday through Friday, 8:00 AM to 5:00 PM.

EXHAUST INSTALLATION # 612207

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACKSTANDS WHEN UNDER THE VEHICLE, SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES. **DO NOT WORK WITH HOT PIPES!!!**

SUGGESTED TOOLS:

9/16" SOCKET, 1/2" WRENCH, HACKSAW, JACKSTANDS, WD-40, HI TEMP GASKET SEALER



LAY OUT THE GIBSON EXHAUST ON THE FLOOR AND COMPARE PART NUMBERS WITH THE MANUAL. LEAVE ALL FACTORY GROMMETS IN PLACE. FOR EASIER REMOVAL OF GROMMETS AND HANGERS USE WD-40 ON THEM.



INSTALL THE MUFFLER ONTO THE HEADPIPE 1" TO 2". THE INLET OF THE MUFFLER WILL HAVE THE INSIDE LOUVERS FACING FORWARD, USE CLAMP **#D TO SECURE** MUFFLER TO THE HEADPIPE. OUTLET SHOULD BE AT THE 9 O'CLOCK POSITION. DO NOT TIGHTEN. MUFFLER INLET IS LOOKING INTO LOUVERS.



TO REMOVE YOUR STOCK EXHAUST REMOVE IT FROM THE CLAMP LOCATED JUST IN FRONT OF YOUR STOCK MUFFLER.



SLIP THE OVER AXLE
TAILPIPE #C INTO THE
OUTLET OF THE MUFFLER
1" TO 2". CONNECT REAR
HANGER WITH FACTORY
BOLT. INSERT WELDED
HANGER INTO RUBBER
GROMMET. USE CLAMP
#D TO SECURE TAILPIPE
TO THE MUFFLER. DO
NOT TIGHTEN.



SLIDE HEADPIPE # A ONTO YOUR FACTORY PIPE 1-1/2" TO 2". USE CLAMP # F TO SECURE. DO NOT TIGHTEN.



NEXT INSTALL YOUR STAINLESS STEEL TIP TO YOUR DESIRED LOOK. USE A STAINLESS OR ALUMINUM CLEANER TO POLISH TIP. NOW TIGHTEN ALL CLAMPS STARTING FROM THE FRONT AND WORKING BACK.