


INSTALLATION INSTRUCTIONS CAT BACK STAINLESS SUPER TRUCK EXHAUST

DODGE RAM 1500 TRUCK 4.7L QUAD CAB & STANDARD CAB, SHORT BED STANDARD CAB, LONG BED

PART # 66551

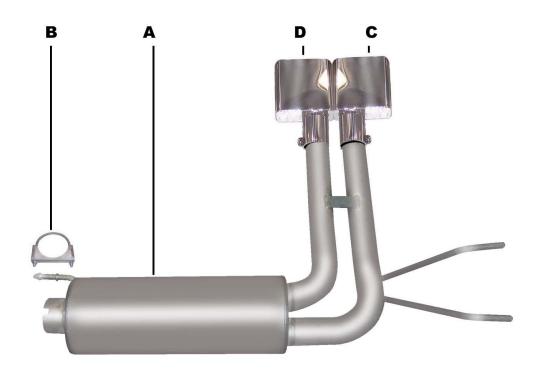

| ITEM | PART # | QUANTITY | DESCRIPTION |
|------|--------------|----------|----------------------------|
| Α | 1036-700813S | 1 | STAINLESS MUFFLER ASSEMBLY |
| В | OHD300 | 1 | 3" CLAMP |
| С | 500366 | 1 | SUPER TRUCK TIP |
| D | 500365 | 1 | SUPER TRUCK TIP |

INSTALLATION INSTRUCTIONS # 66551 CAREFULLY READ INSTRUCTIONS BEFORE STARTING INSTALLATION.

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16" 15mm wrenches & sockets, WD-40, hacksaw, jack stands.

Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.



1. To remove the stock exhaust remove it from in front of the stock muffler. Disengage the welded hangers using WD-40 from the OEM rubber grommets. Do not damage or remove the rubber grommets as you will re-use them to mount your new system. Now, cut off tailpipe and remove exhaust.



3. Insert welded hangers into rubber grommets.



2. Insert muffler assembly #A into headpipe head pipe and attach with clamp #B. DO NOT TIGHTEN Use a jack stand to support the muffler assembly.



4. Install stainless steel tips. Clamp down. When you have everything in place, firmly tighten all bolts and clamps down securely. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tip from discoloration. Inspect all fasteners after 25-50 miles of operation and re-tighten as necessary