







SNAP VINYL TONNEAU COVER INSTALLATION INSTRUCTIONS WARRANTY AND PRODUCT USE AND CARE

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION OF PRODUCT. IMPORTANT INFORMATION IS PROVIDED THROUGHOUT THE INSTRUCTION SHEET THAT YOU SHOULD BE AWARE OF PRIOR TO INSTALLATION.

INSTALLATION INSTRUCTIONS





Place the vinyl cover on top of the truck cab with the top side facing the cab and the front rail resting on the truck bed front rail cap.

Place the tonneau cover side rails onto truck bed side rails, making sure that "side" labels face away from the truck box. Insert the side rails into the front rail's plastic corners and attach by tightening the thumbscrews.

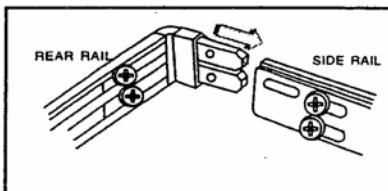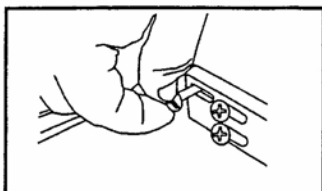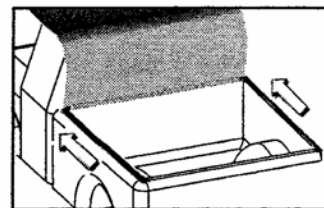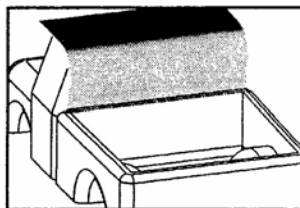

Remove the thumbscrews from the rear rail plastic corners, and while holding the rear rail with the rear rail label facing away from the truck bed, insert the rear rail corners into the two side rails. Reinsert the thumbscrews through the hole in the metal plate that lines up with the threaded hole in the rear rail corner. Hand tighten until secure. NOTE: Do not overtighten as this will interfere with the designed movement of the patented Sure-Fit System.

Locate the bows and bow end clips, and slide a bow end clip on both ends of each bow. Each bow is marked with its position and the side rails are marked with those positions as well. Place one end into the inside of the side rail channel at the corresponding position, then move to the other side of the vehicle and place the bow end clip into the channel. Repeat for each bow.

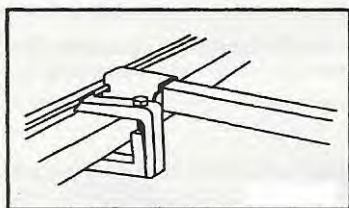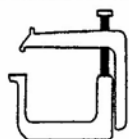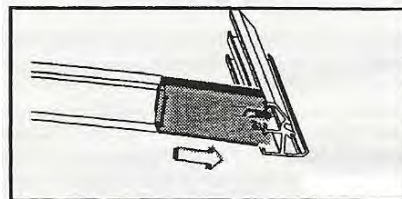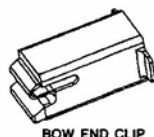



Attach the provided c-clamps by loosening them up so that they fit under the side rail of the truck bed at the locations labeled on the side rails. Place the lip of the clamp into the side rail channel and tighten the top mounted hex head bolt until secure. NOTE: Overtightening of the clamps may cause damage to the truck bed and/or tonneau side rails. Torque to 40 in./lbs.

Starting at the truck cab snap one snap and then move to other side and do the same. Repeat until all the cover is secured on both sides, then fasten snaps on the rear rail.

When opening cover, begin at one of the rear corners and continue to unsnap.

To remove the rear rail, loosen both side rail thumbscrews near the tailgate. Gently pull the rear rail from the side rails.

NEVER remove the Phillips head screws that secure the Sure-Fit System.

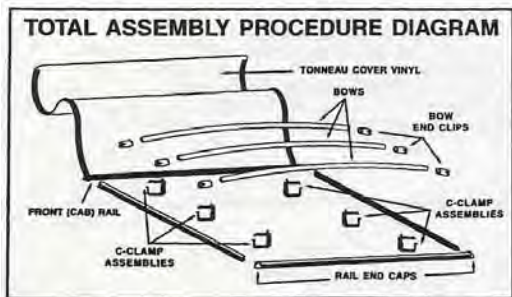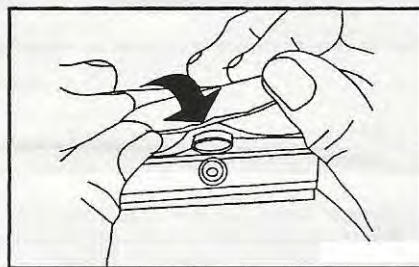


Special Note:

Depending on the model of truck, each cover has been engineered for the proper number of bows and clamps. The correct positioning and number of components are labeled on the side rails of your tonneau cover.

***** IF THE VEHICLE HAS AN OVER-THE-RAIL BEDLINER – ONLY ALLOW A PROFESSIONAL CERTIFIED INSTALLER TO PERFORM THE INITIAL INSTALLATION --- MODIFICATION TO THE BEDLINER IS REQUIRED *****

SPECIAL INSTRUCTIONS FOR VEHICLES WITH OUT-RAIL TRUCKS

If the bed rails of your truck extend outward from the bed (pertains to vehicles made and distributed outside of the United States) instead of inward (typical of a U. S. made truck), refer to the instructions below before initiating the installation.

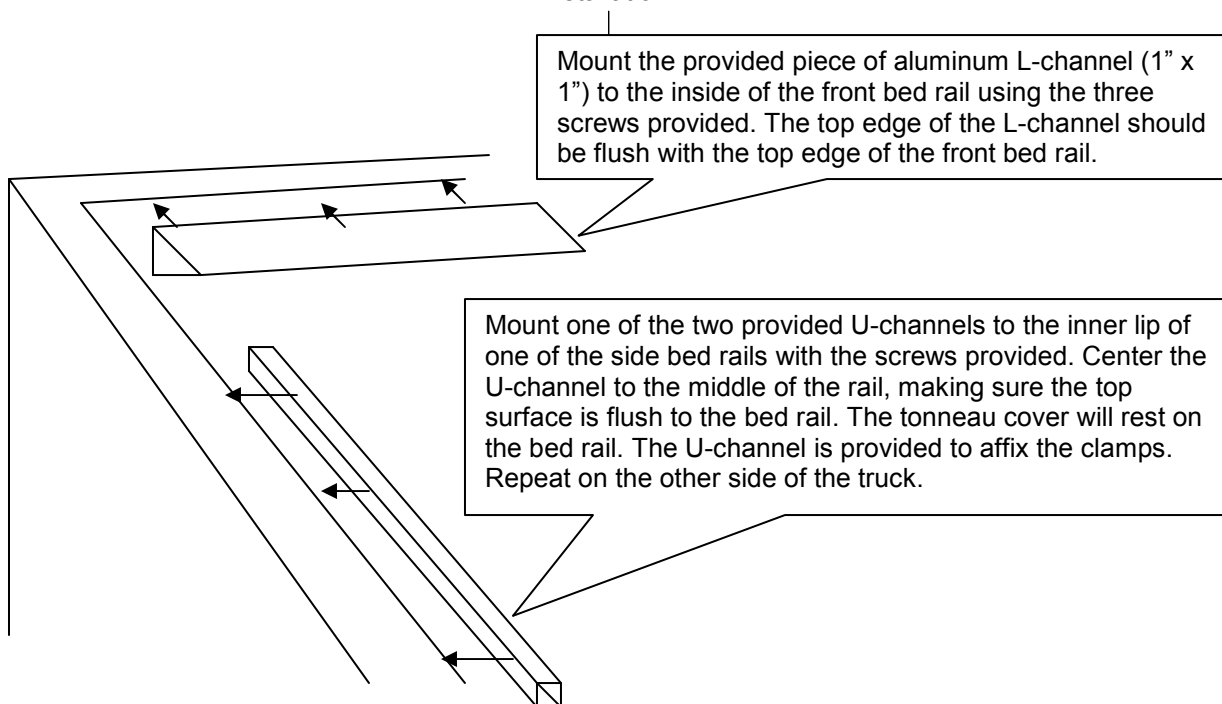

LIMITED WARRANTY

Advantage Truck Accessories, Inc. warrants this product, to the original purchaser, to be free of defects in materials and workmanship, for the following period(s): seven (7) years on the vinyl material and limited lifetime for the balance of the components in the cover.

The warranty is limited to the repair or replacement of the product in whole or in part at the discretion of Advantage Truck Accessories. The warranty does not cover damages to the product caused by collision, improper use, commercial use, theft, vandalism, or loss of product. Warranty is void if vehicle is operated without all four clamps secured firmly or if the vehicle is operated with the cover in the open position without the retaining straps fastened.

Only use warm water to clean the tonneau cover. Use of any other products will void this warranty.

Any claim for warranty coverage requires you to contact the reseller that you purchased the Sure-Fit from for resolution. This instruction/warranty form and your sales receipt are required when a warranty claim is requested.

Date of Purchase: _____

Part Number: _____

Name of Purchaser _____

Reseller Name: _____

Year, Make and Model of Vehicle _____