
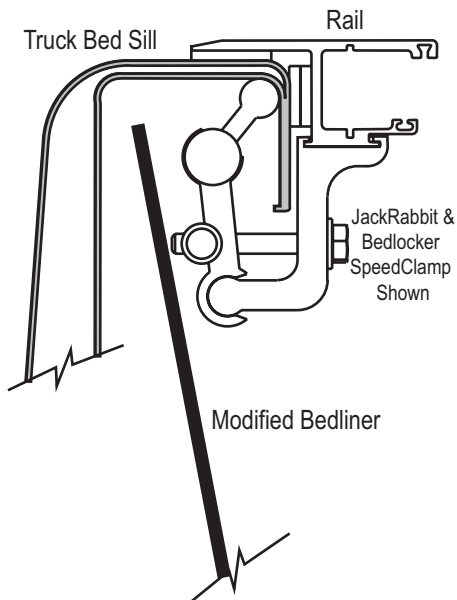


Pace Edwards - Bedliner Modification

In most cases with over the sill bedliners, the portion that covers the sill will need to be trimmed or removed to accommodate a Pace Edwards cover. A notch for the canister at the front of the truck bed may need to be removed as well. Areas that need to be trimmed or removed will depend on what cover you are installing.

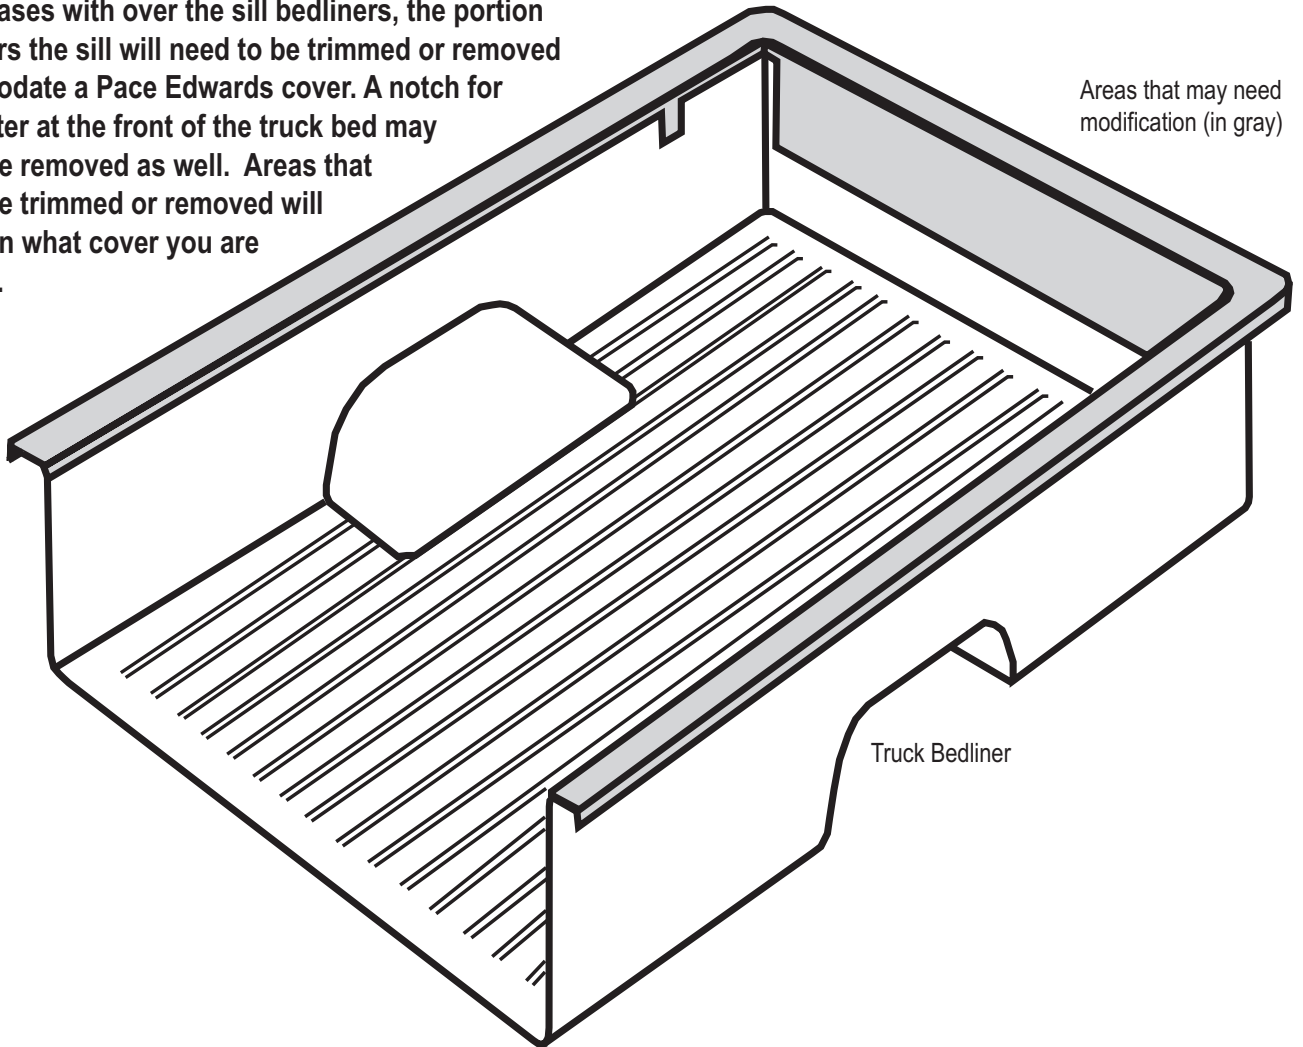

The Pace Edwards Rails lay flat on the bed sill and the clamps clamp to the bed sill, this makes it necessary for the bedliner to be pushed to the backside of the sill.

Thank you for choosing products by...



2400 Commercial Blvd, Centralia, WA 98531
(360) 736-9991 (main) ♦ (360) 736-9992 (fax)
(800) 338-3697 (toll-free)