

# #1043 RETRAX™ ASSEMBLY AND INSTALLATION INSTRUCTIONS

## Insert for 2007+ GM/Chevy with Cargo Management Rail System

**Step 1:** Remove front corner piece and front rail of the Cargo Manager rail system. **PHOTO 1**

**Step 2:** Remove both side rails from the truck, follow option 1 or 2 below to modify side rails so that the RETRAX cover can fit into the truck bed.

**OPTION 1:** Cut 12" off of front of each Cargo Manager Side Rail. **PHOTO 2**


**OPTION 2:** Trim 5/16" (minimum) off of inside edges of Cargo Manager Side Rails for 12" from front of rail **PHOTO 3**

**Step 3:** Reinstall Cargo Manager Side Rails, continue with RETRAX installation according to instruction manual. Clamps may have to be put on in 2 pieces to fit above Side Rails.

**PHOTO 1**— Front Rail and Corner piece removal



**PHOTO 2**— Option 1 for side rail modification.

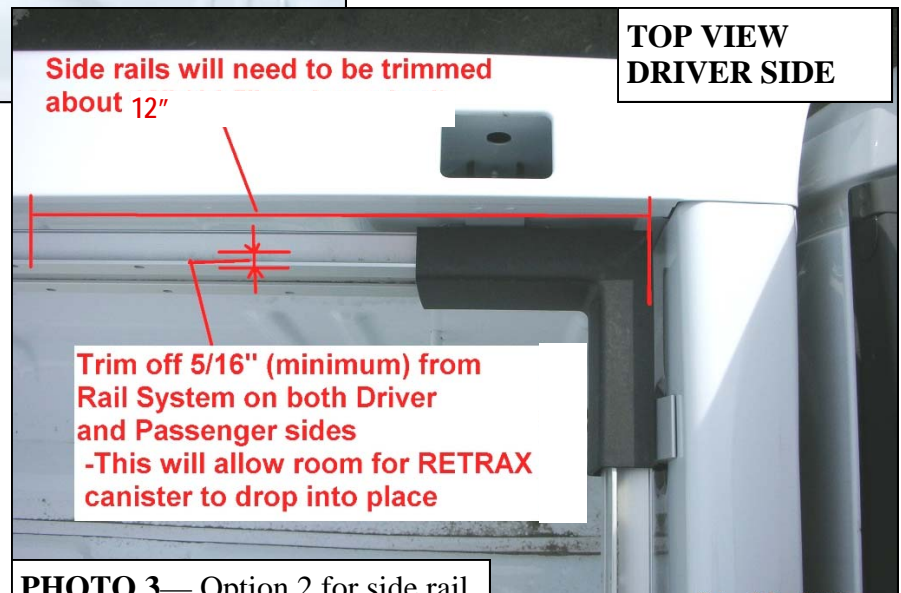

**PHOTO 3**— Option 2 for side rail modification.