

Congratulations on your purchase of a high quality PUTCO product.

Should you need any application or technical assistance feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m.- 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

PUTCO Inc. - Story City, Iowa 50248

Please read all instructions before beginning installation and be sure to check to see that all parts and hardware are included.

Parts List	
Description	Qty
LED Dayliner	1
Scotch Lock Inline Tap	2
Alcohol Prep Pad	1


Tools Needed for Installation
Wire Cutters
Electrical Crimping Tool
Wire Strippers
Non-Abrasive Towel
10mm Socket
Ratchet
Screw Driver

Step 1: Verify kit contents.

ASSEMBLY NOTE: *Ensure there are no moving parts that may cause damage to the cord.*

Step 2: Remove screws from the top panel to gain access to the plastic insert.

Step 3: Remove plastic insert and replace with the LED Dayliner, run wire through one of the factory openings located behind DayLiner. If desired, one can drill a 3/16" hole behind the DayLiner to route the wire through the bumper.

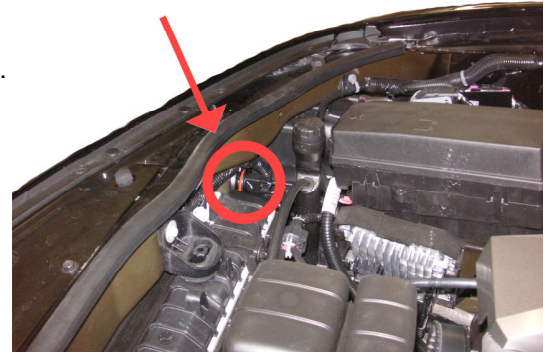

Step 4: Make sure the wire to the LED Dayliner is accessible before replacing and tightening the screws. *Figure 1*

Step 5: Locate the parking light (Figure 1).

(NOTE: Passenger side shown.)

Step 6: Twist the harness counterclockwise to disengage the locking mechanism before pulling out the parking light (Figure 2).

(NOTE: You will have extra wire from the Putco Dayliner light so remove any excess wire that is not needed.)



Step 7: Remove the electrical tape from the plastic housing (Figure 3).



Figure 3

Step 8: Pull back the black plastic housing to access the wiring (Figure 4).

(Note: If your wire colors differ you will need to use a voltage reader to identify the parking lights positive (+) wire and ground (-) wire.)

(CAUTION: DO NOT CUT THE WIRES IN HALF!!!)

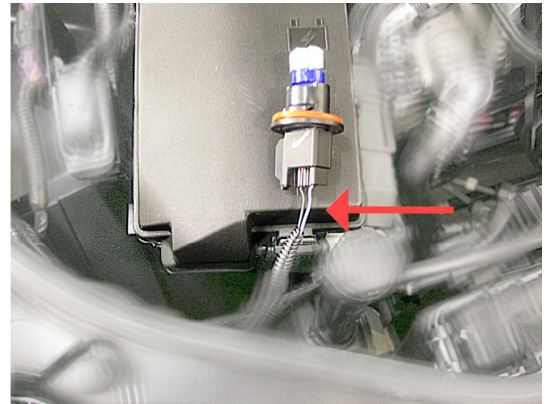


Figure 4

Step 9: Attach the Putco Red (+) wire to the Factory Brown w/Blue Tracer (+) wire and the Putco Black (-) wire to the Factory Black (-) wire using the supplied scotch locks and your electrical crimping tool.

Step 10: Reattach the parking light.

Step 11: Verify everything is connected securely and turn the vehicle lights on to test the LED DayLiner .

(NOTE: Your Putco LED DayLiner will only operate when the vehicle is on.)

Note: If your lights do not turn on verify the connection between the Factory and Putco wiring is secured properly.

INSTRUCTION # 280602 – JUNE 2012

LIMITED WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. Black products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.