

1501-0581

07-13 CHEVY/GMC

Silverado/Sierra Reg Cab 4" OE SS Oval (Rocker Panel Mount)

Components List:

- 2 – Stainless steel oval step bars
- 2 – Front Bracket – Driver & Passenger Side
- 2 – Rear Bracket – Driver & Passenger Side
- 4 – Rubber gasket

Parts List:

- 8 – M8X 30 mm Hex Head Bolt
- 12 – M8 Lock Washers
- 12 – M8 Flat Washers
- 4 – M8 Hex Nut
- 4 – M8 U-Nut
- 8 – M10X30 Button Head Bolt
- 8 – M10 Lock Washers
- 8 – M10 Flat Washers

Installation Instruction:

1. Remove all contents from the received box and check stainless steel tube for any dent. Also verify all brackets and bolts against the parts list.
2. Read installation manual and installation drawing completely. Understand all brackets and bolts before installation.
3. Install brackets as shown. (See Figure 1.)
4. Place driver side step bar on brackets. Each step bar is marked driver and passenger.
5. Assemble with M10 button head bolts and M10 washers. 2 bolts per bracket, 4 bolts per bar (**see Fig 2**). Hand tighten.
6. Repeat installation for passenger side

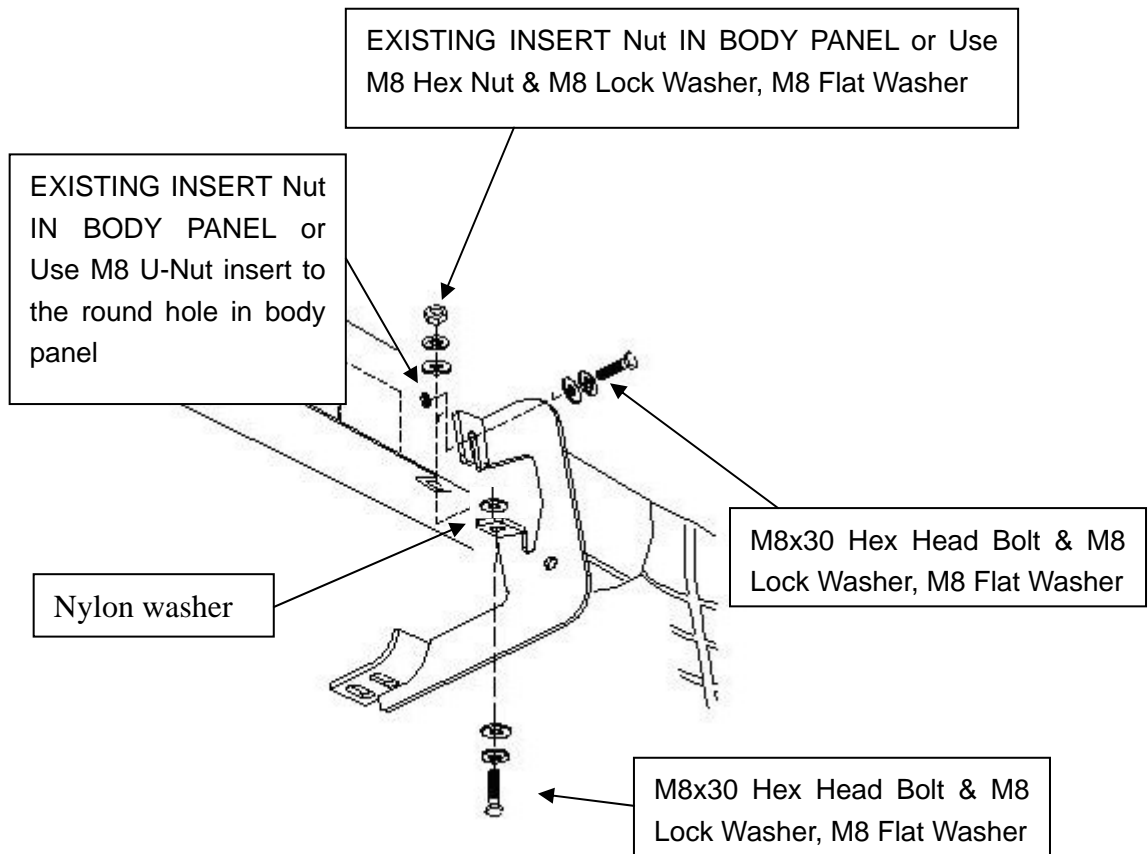


Figure 1. Driver Side – Brackets

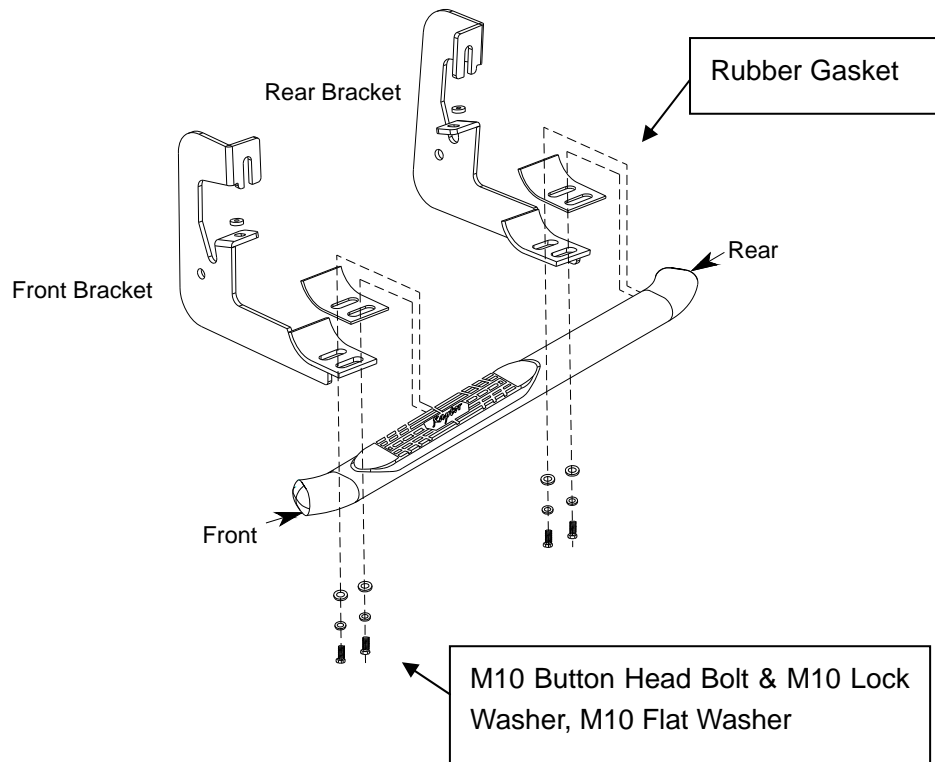


Figure 2. Installation View of Driver Bracket & Bar