

CLAMP-ON TRUCK BED TIE DOWNS



For the best engineered truck accessories cruise on over to our web site. A truck lovers' favorite "truck stop"

CARGO CLEATS™

They clamp on!

*No stake
holes needed.*



**NO DRILLING
NO DAMAGE
TO TRUCK**

500 Pound Load Rating!




**WINNER OF THE
DAIMLERCHRYSLER
DESIGN EXCELLENCE
AWARD**



*You choose
the position
on side of
your truck bed
for optimal
tie-down
security.*

USE WITH
ROPE OR
HOOKS

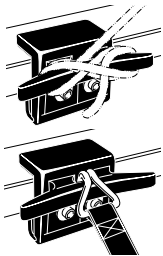

ENGINEERED TO BE SUPERIOR:

- CargoCleats™ quickly clamp to most any location on your truck bed's side for the optimal tie down location.
- No holes. No drilling. No damage. Won't harm paint.
- Use with rope, hooks, stretch cords, and ratchets.
- No stake holes needed.
- Versatile CargoCleats™ provides quick and easy tie-downs using the time tested nautical cleat.
- Extremely strong glass filled polymer and zinc plated bolts assure a long durable life.
- They're strong. Cargo Cleats™ have a solid 500 pound load rating.
- Can be used on full size trucks with most Extang tonnos installed.
- Use extra Cargo Cleats™ for larger items and add more as you need them. Sold in pairs.
- Comes with instructions on rope tying and how to load truck beds properly.
- Limited Lifetime Warranty.



AMERICA'S BEST DESIGNED TRUCK ACCESSORIES

CARGO CLEATS™

A truck lovers' best truck stop:
www.extang.com

NO DAMAGE, CLAMP-ON VERSATILE TIE-DOWNS

Versatile CargoCleats™ provide quick and easy tie downs using the time tested nautical cleat design. They quickly clamp to most any location on your truck bed's side for the best tie down position.

Extremely strong glass filled polymer with zinc plated bolts assure a long durable life. A very useful and "must have" accessory.

Use extra Cargo Cleats for larger items and add more as you need them. They also make an excellent gift idea and are sold in pairs.




**NO DRILLING
NO DAMAGE
TO TRUCK**




Easily adjust on bed side for optimal tie-down position. It's your choice!

Cargo Cleats clamp on with no tools, no damage.


Can be used with Extang Tonnos installed (on most full size trucks)

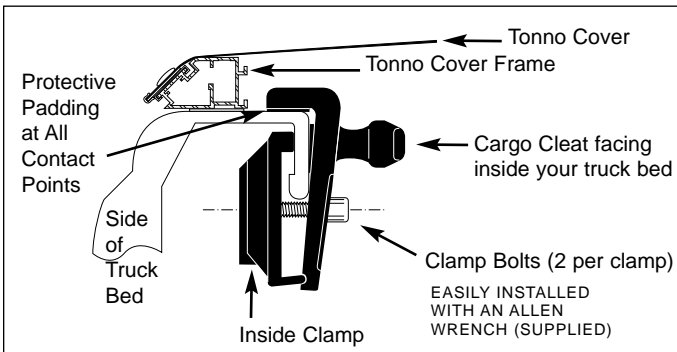

How to tie a secure nautical knot:

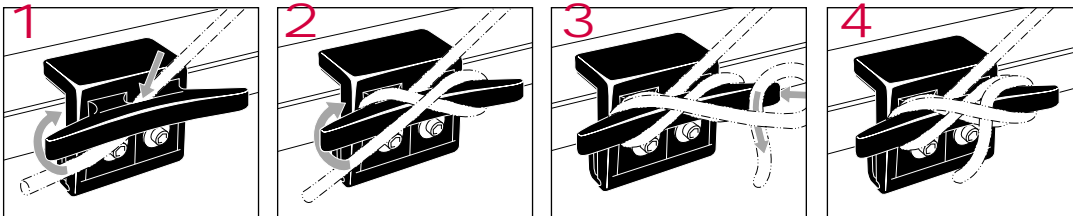

How to load your truck bed safely:

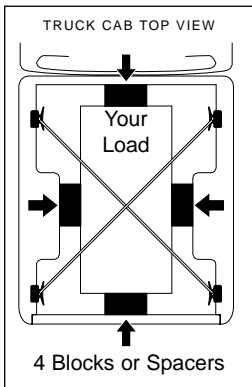


Maximum load limit 500 pounds lateral.

Always block loads to prevent shifting (as shown here).

Use with hooks:

Designed to be used with hook straps, stretch bands or rope.

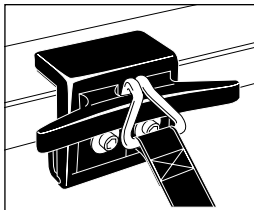

IMPORTANT: All weight bearing rope or hooks **MUST** be in the **CENTER** hole as shown above and below.



EXTANG CORP.
1901 ELLSWORTH
ANN ARBOR, MI 48108 USA
VOICE: 734-677-0444
FAX: 734-677-8409
EMAIL: INFO@EXTANG.COM
VISIT: WWW.EXTANG.COM
800-877-2588