

INSTALLATION INSTRUCTIONS

51524 APPLICATIONS

Make	Model
Ford	Expedition - Max

TOOLS NEEDED

Ratchet	10mm socket
Ratchet extension	Panel trim removal tool


NOTICE

All steps must be followed to ensure the CURT brake control harness will function properly. Once installed, test for proper function by following the brake control unit instruction manual.

LOCATION GUIDE

Representative vehicle shown below

BH4 - Behind storage pocket, above ashtray

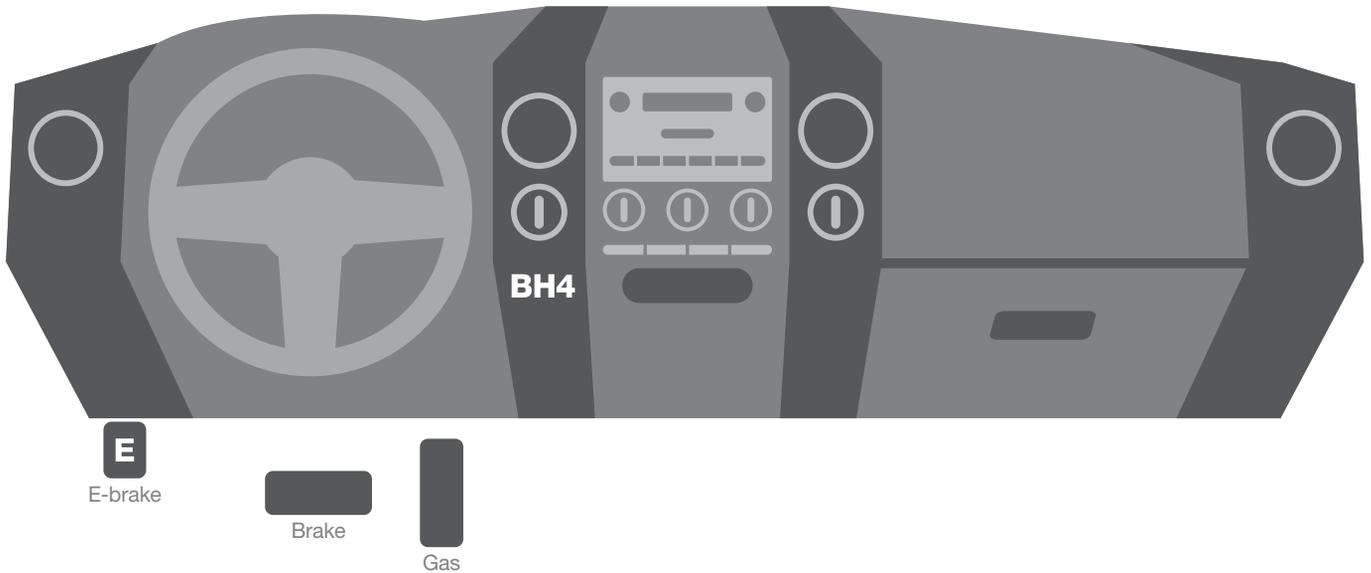

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Locate the lower dash to both the left and right of the steering wheel. Pull toward the rear of the vehicle and down to remove the lower dash (A), taking care not to damage the lower dash.

Step 2

Under the removed lower dash, located the four 10mm bolts that are securing the metal bracket panel in place (B). Remove the bolts and the metal bracket panel.

Step 3

Locate the grey vehicle brake control harness connector just inside the left center of the dash (C), attached to the back of the dash pocket (D). The connector will mate to the connector on the CURT brake control harness.

Step 4

Carefully pull the housing towards the removed panels and insert the connector on the CURT brake control harness into the vehicle connector. Make sure the connector is fully inserted with locking tabs in place.

Step 5

Reinstall all removed items during the install. Run the brake control end down to the floor.

Step 6

Route the brake control harness along the back of the dash and out the bottom to the brake control unit.

Step 7

Insert the brake control harness black connector into the brake control quick plug connector. Secure the brake control harness with the provided cable ties, avoiding any pinch points.

Step 8

Complete the installation using the brake control instructions. Mount the unit as directed and perform test procedures as instructed in the brake control instruction manual.

