



INSTALLATION INSTRUCTION

S/S Side Step FOR AUDI Q7 2006-2009












ITEM NO: RAUQ7




ATTENTION

1. Please read this installation instruction before installing this part.
When install it, please pay attention to protecting your vehicles.

2. When you use it, please check this parts at a fix time-lapse, such as one month or two month.

PARTS LIST

No	Name	Photo	Qty	Remarks	No	Name	Photo	Qty	Remarks
①	Step board		2	lateral symmetry	②	Mount bracket		2	lateral symmetry
③	Mount bracket		2	lateral symmetry	④	"T"bolt		8	M10X35
⑤	Flat washer		8	M10	⑥	Lock Washer		8	M10
⑦	Nut		8	M10	⑧	bolt		8	M6X25
⑨	Flat washer		8	M6	⑩	Lock Washer		8	M6
⑪	Nut		8	M6					

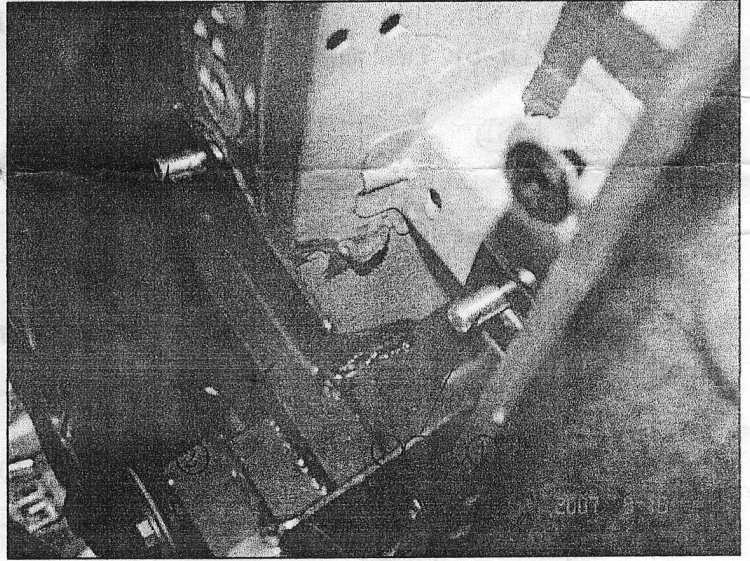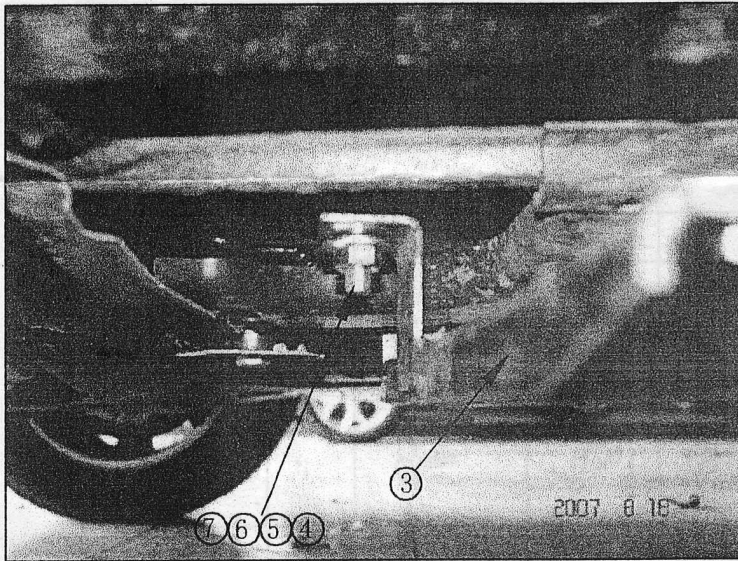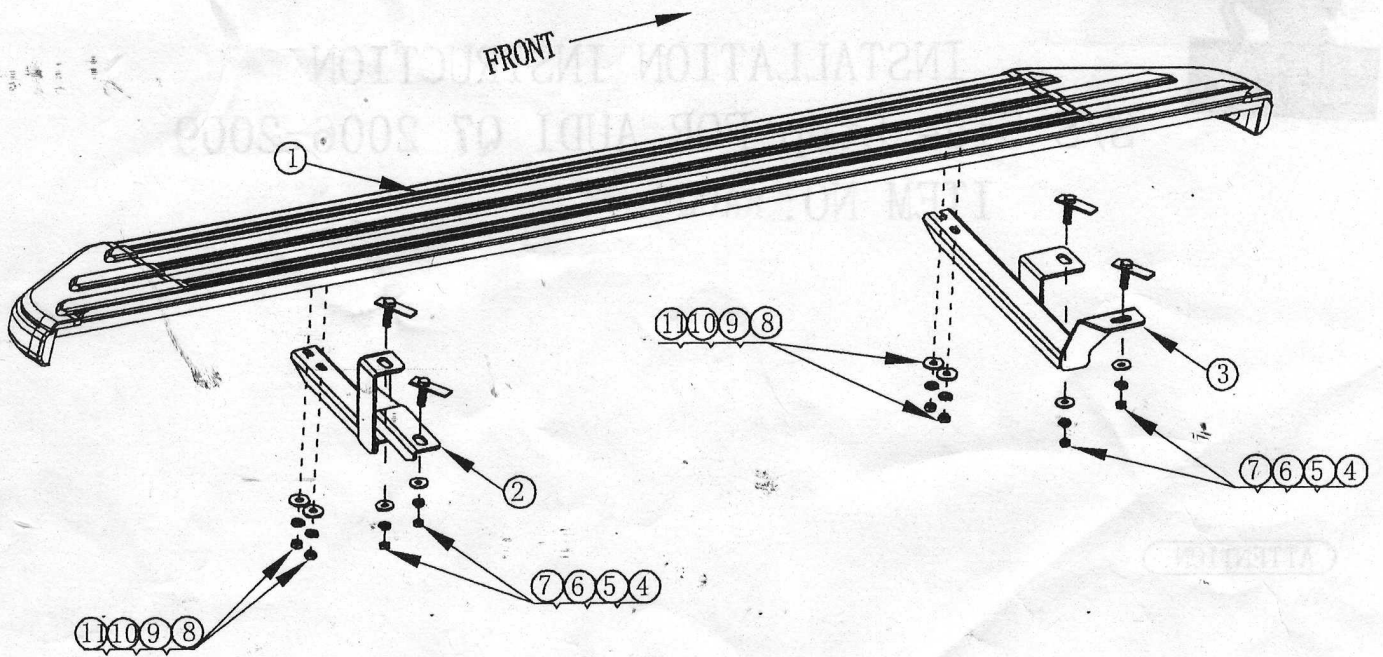

INSTALLATION STEPS:

STEP 1. Check the parts in the box carefully if match above list .

STEP 2. Pls prepare the tools for installation, follow as: 12-14wrench、14-17wrench.

STEP 3. Put the mount bracket(2) on the car bottom of the car, with M10X35" T" bolt(4), and tighten it.

STEP 4. Put the mount bracket(3) on the car bottom of the car, with M10X35" T" bolt(4), and tighten it.

STEP 5. Connect the side bar(1) and the mout bracket(2、3), and tighten it with M6X25 bolt(8).