
Installation Instruction

Name: Rear Guard

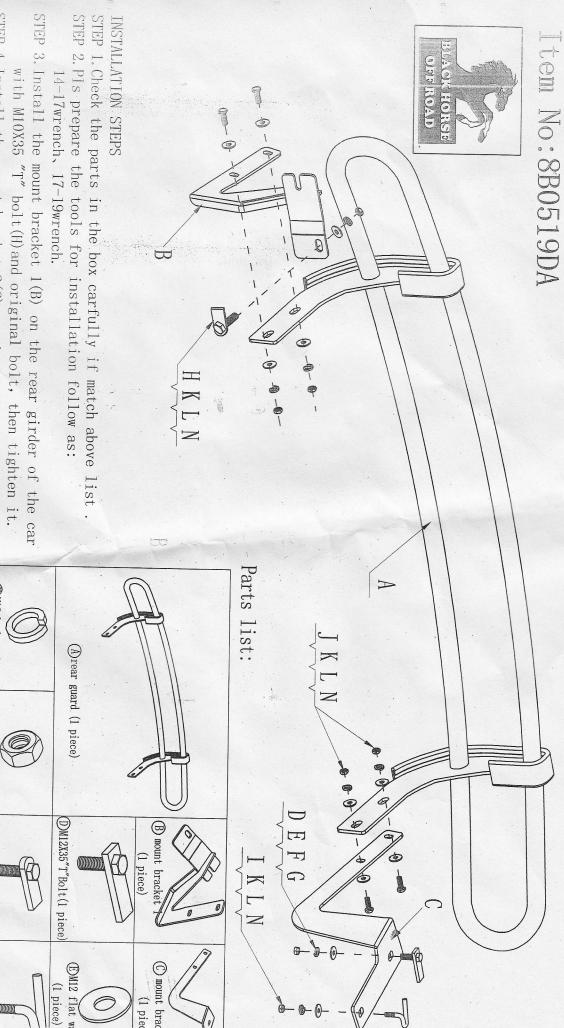

STEP 5. Install the rear guard(A) on the mout bracket 1(B), mout

bracket 2(C) with M10X25 hex head bolt(J), then tighten it.

STEP 4. Install the mount bracket 2(C) on the rear girder of the car

with M12X35 "T" bolt(D) and M10 taper Bolt(I), then tighten in

©M12 Lock washer (1 piece)

GM12 nut(1 piece)

(H)M10X35"T"Bolt(1 piece)

(I)M10 taper B

(1 piec

(1 piece)

OM10X25 hex head bolt(4 pieces)

(K)M10 flat washer

DM10 Lock washer (6 pieces)

NM10 nut(6 pi

0

(10 pieces)