



**TEL ☐ 1-866-XANATOS**

## **INSTALLATION INSTRUCTIONS**



**PART#: 8D116701SS\8D116701A**

**REAR BUMPER GUARD FOR NISSAN ROGUE 08-09 (Single Tube)**



**PARTS LIST:**

1	Rear Bumper Guard	6	12-1.25mm x 40mm Hex Head Bolts (fine thread)
1	Driver/Left Frame Bracket	4	12-1.75mm x 35mm Hex Head Bolts
1	Passenger/Right Frame Bracket	10	12mm Lock Washers
1	Driver/Left Bumper Guard Bracket	14	12mm ID x37mm OD x 3mm Flat Washers
1	Passenger/Right Bumper Guard Bracket	4	12mm Hex Nuts
		4	8-1.25mmx 20mm Hex Head Bolts
		4	8mm Lock Washers
		4	8mm ID x 16mm OD x 1.6mm Flat Washers

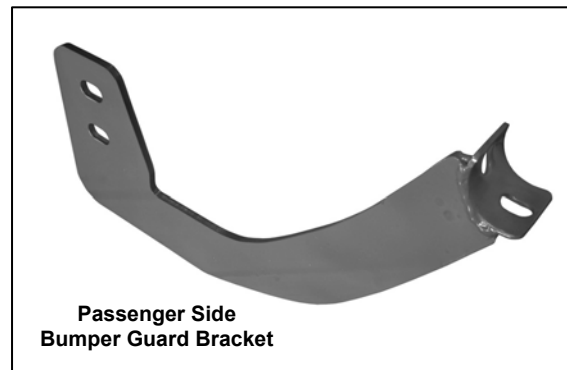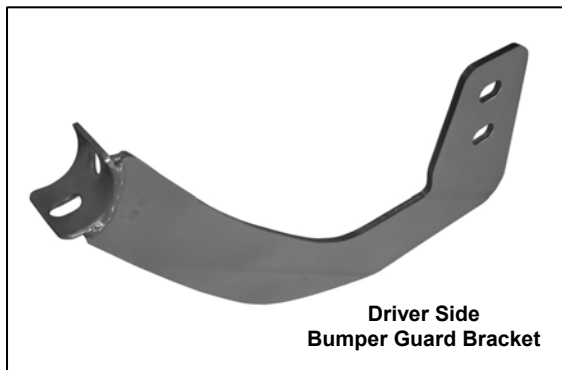



**PROCEDURE:**

1. **REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
2. **IMPORTANT!** *Due to the driver side mounting location of the Frame Bracket being too close to the muffler, before starting the installation make sure the muffler is not hot.*
3. Remove the factory tie down bracket located on the rear of passenger side frame rail (**Figure 1**); you will not be re-installing it back onto the vehicle.
4. There are two threaded holes in the bottom rear of each frame rail, one in the driver and two in the passenger inner side rear end frame rails. Position driver side Frame Bracket on the frame rail and line up all three holes (**Figure 2**).
5. Partially hang driver side Frame Bracket from frame rail using the included (3) 12-1.25mm x 40mm Hex Head Bolts (fine thread), (3) 12mm lock Washers, and (3) 12mm Flat Washers (**Figure 3 & 4**).
6. Attach driver side Bumper Guard Bracket to already installed Frame Bracket using the included (2) 12mm x 35mm Hex Head Bolts, (2) 12mm Lock Washers, (2) 12mm Hex Nuts, and (4) 12mm Flat Washers (**Figure 5**). Do not tighten at this time
7. Repeat steps 4-6 for passenger side.
8. Position Bumper Guard onto Mounting Brackets and attach it using the included (4) 8mm x 20mm Hex Head Bolts, (4) 8mm Lock Washers, and (4) 8mm Flat Washers (**Figure 6**).
9. Adjust Rear Bumper Guard properly; and then tighten all hardware at this time.
10. Do periodic inspections to the installation to make sure that all hardware is secure and tight.


**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

**For gloss black finishes:** Mild soap may be used to clean the product.

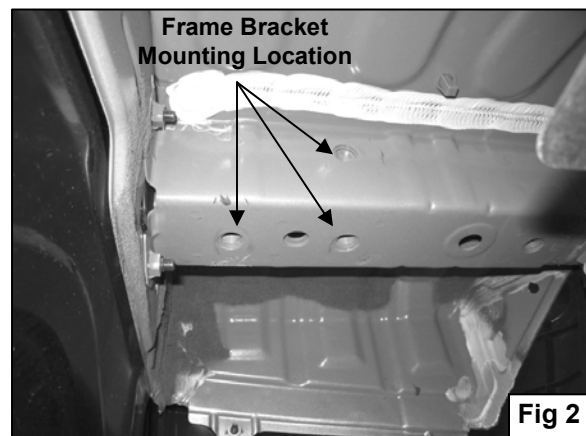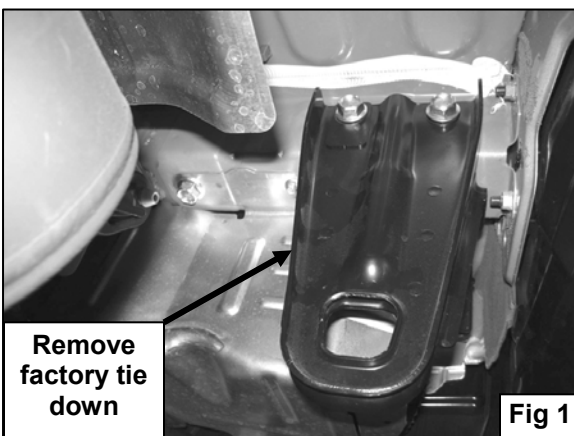

REAR BUMPER GUARD FOR NISSAN ROGUE 08-09 (Single Tube)  
**(Driver Side Installation Shown)**

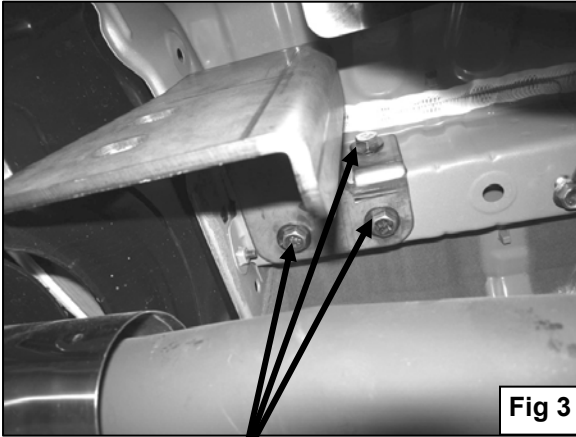


**Fig 3**

12-1.25mm x 40mm Hex Head Bolts  
(fine thread)  
12mm Lock Washers  
12mm Flat Washers




**Fig 4**

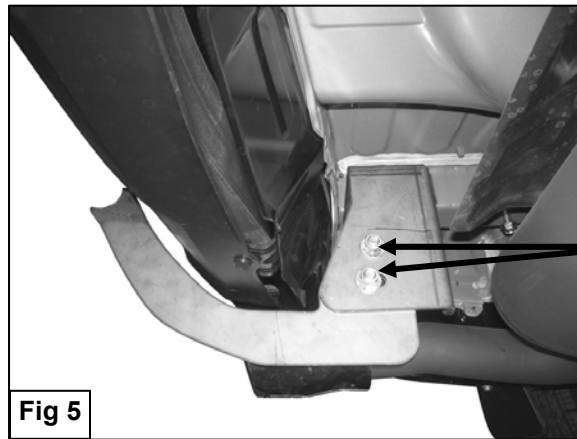

**Fig 5**

12-1.75mm x35mm Hex Head Bolts  
12mm Lock Washers  
12mm Hex Nuts  
12mm Flat Washers

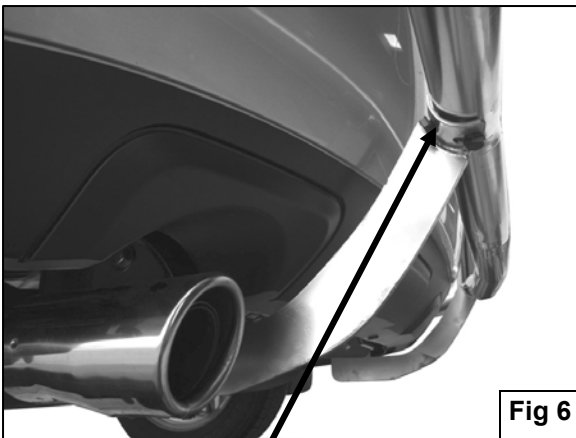

**Fig 6**

8mm x 20mm Hex Head Bolts  
12mm Lock Washers  
12mm Flat Washers

**Installation Complete**



**Fig 7**