




TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS

**REAR BUMPER GUARD FOR MADZA CX-7 07-10
PART # 8D992347SS/8D992347A**

PARTS LIST:

1	Bumper Guard	2	Bumper Mounting Brackets
2	Frame Mounting Brackets	4	10-1.25mmX40mm Bolt Plates
4	10mm Nylock nuts	8	10mmX30mmx2.5mm Flat Washers
4	10mm Lock Washers	4	10-1.25mmX30mm Hex head Bolts
4	12-1.5mmX40mm Hex Head Bolts	4	12mm Nylock Nuts
8	12mmX37mmx3mm Flat Washers		

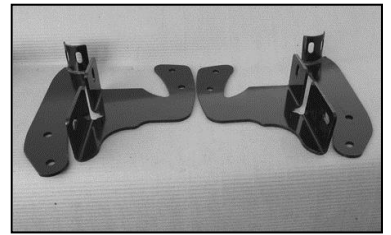

PROCEDURE:

1. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.
2. On passenger side, install two of the 10mm bolt plates into the frame holes, figure 1.
3. Install the passenger side frame bracket using two each of the 10mm washers and 10mm nylon lock nuts and leave nuts loose so bracket can be adjusted, figure 2.
4. Install the passenger side bumper bracket onto the insider side of frame mount, with bumper cradle towards the center of car, using 2 of the 12mm bolts, 4 of the 12mm flat washers and 2 of the 12mm Nylock Nuts, leave nuts loose, figure 3 for install, figure 4 for direction reference.
5. Repeat steps 2 through 4 on the drivers side.
6. Attach the bumper to the brackets using the four 10mm bolts, four 10mm washers and four 10mm lock washers.
7. Center the bumper and adjust fit to car then tighten all nuts, figure 4.
8. Do periodic checks to make sure all the hardware is tight and secure.

