INSTALLATION INSTRUCTION

ITEM NUMBER: 8HO1SS-DL

BRACKETS FOR S/S UNIVERSAL REAR BUMPER GUARD (DOUBLE LAYER) FOR HONDA ODYSSEY 2015

NOTICE:

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- \Rightarrow Please periodically check and retighten all the hardware and clean the investment for a refresh look.

No.	Qty	Name	No.	Qty	Name
ð	1	Rear bar	6	4	Hook bolt
Q	1	Bracket-A-L	Ø	4	Hook bolt connection plate
			8	4	Plastic plate
3	1	Bracket-A-R	9	4	M8*25 Hex bolt
			10	4	M10*35 Hex bolt
4	1	Bracket-B-L	Ы	12	D10 Flat washer
			12	8	O D10 Spring washer
5	1	Bracket-B-R	ß	8	D10 Hex nut


PART LIST


ASSEMBLY PROCEDURE:

Step 1: Check all the contents are available in accordance with the above list.

- Step 2: Using hook bolt to install Bracket-B-L. Do not tighten all the bolts. (FIG.2)
- Step 3: Using hook bolt to install Bracket-B-R. Do not tighten all the bolts. (FIG.3)
- Step 4: Install the rear bar on Bracket-A-L &B. Connect Bracket-A & B as FIG.1. Do not tighten all the bolts
- Step 5: Test and make sure that the rear bar is steadily fixed, and then tighten all the hardware.

Step 6: Installation is finished.

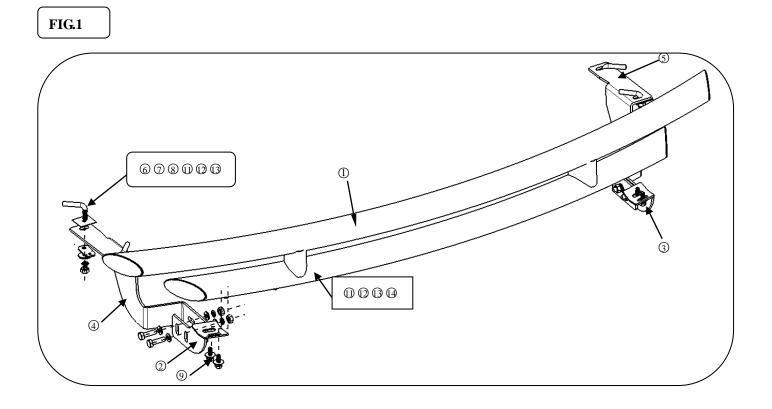

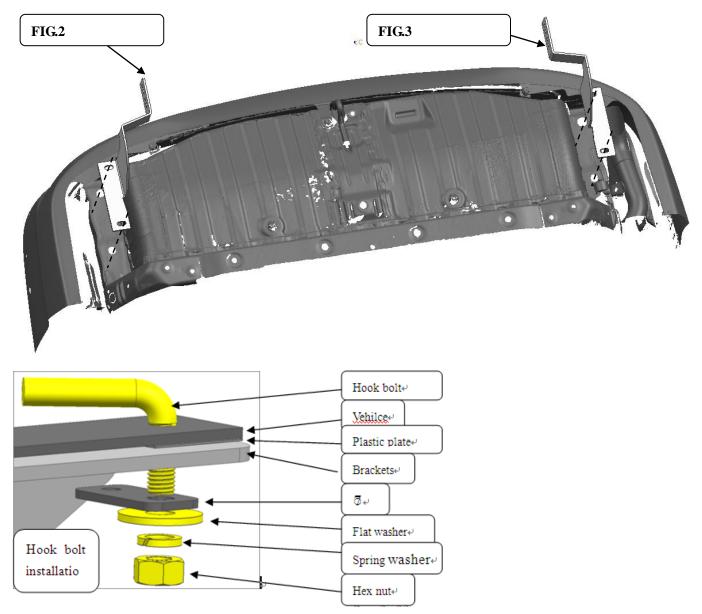

NOTE: Any damages and losses caused by improper installation and application, goes beyond our quality warranty.