




**TEL:1-866-XANATOS**

**INSTALLATION INSTRUCTIONS**  
**REAR BUMPER GUARD FOR HONDA ODYSSEY 09-10 (DOUBLE TUBE)**  
**PART # 8HO1SS/8HO1A**

**PARTS LIST:**

1	Rear Bumper Guard
1	Driver/Left Frame Mounting Bracket
1	Passenger/Right Frame Mounting Bracket
4	12-1.25mm x 40mm Fine Thread Hex Bolts
4	12-1.75mm x 35mm Hex Bolts
8	12mm Lock Washers
12	12mm ID x 24mm OD x 2.5mm Flat Washers
4	12-1.75mm Hex Nuts

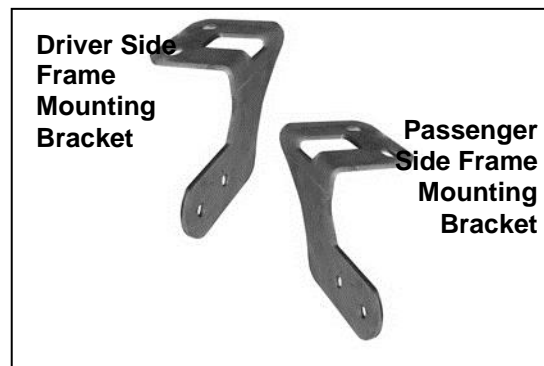

**PROCEDURE:**

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- 2. IMPORTANT! The passenger side mounting location of the Frame Bracket is very close to the exhaust pipe. Allow exhaust pipe to cool before starting the installation.**
- Starting on the driver side, locate the (2) threaded holes on the floor panel next to the rear well in the body.
- Select the driver side Frame Mounting Bracket and position it up to the (2) threaded holes in the body panel. Secure the Frame Bracket with the included (2) 12-1.25mm x 40mm Fine Thread Hex Bolts, (2) 12mm Lock Washers and (2) 12mm Flat Washers, **(Figure 1)**. Snug but do not tighten hardware at this time. Repeat Steps 3-4 for passenger side Frame Mounting Bracket installation, **(Figure 2)**. **IMPORTANT:** Verify that the exhaust pipe is cool to the touch. Once cooled, **gently** push the exhaust pipe away from the Mounting Bracket to provide enough room to insert the (2) 12-1.25mm x 40mm Fine Thread Hex Bolts, (2) 12mm Lock Washers and (2) 12mm Flat Washers.
- Carefully position the Rear Bumper Guard up to the outside of the Frame Mounting Brackets. Attach the Rear Bumper Guard to the Mounting Brackets using the included (4) 12-1.75mm x 35mm Coarse Thread Hex Bolts, (4) 12mm Lock Washers, (8) 12mm Flat Washers and (4) 12mm Hex Nuts, **(Figure 3 & 4)**.
- Align and adjust the Rear Bumper Guard properly and tighten all hardware.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Rear Bumper Guard.



**For gloss black finishes:** Mild soap may be used to clean the Rear Bumper Guard.

REAR BUMPER GUARD FOR HONDA ODYSSEY 09-10 (DOUBLE TUBE)

Driver Side Frame Bracket Mounting Location

(2) 12-1.25mm x 40mm Fine Thread Hex Bolts  
(2) 12mm Lock Washers  
(2) 12mm Flat Washers

Passenger Side Frame Bracket Mounting Location

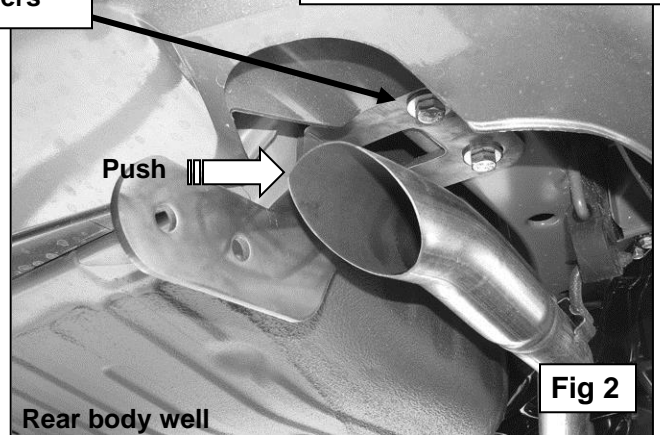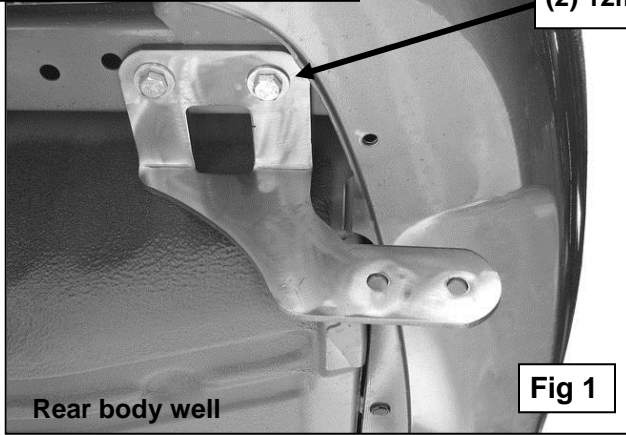

**Muffler/Exhaust Pipe Warning:**

**IMPORTANT!** Due to close proximity of the Frame Bracket to the exhaust pipe, allow exhaust pipe to cool before starting the installation.

Once the exhaust has cooled, **gently** push the exhaust pipe over to provide clearance for the 12-1.25mm x 40mm Fine Thread Hex Bolts, 12mm Lock washers and 12mm Flat Washers to mount the passenger side Frame Mounting Bracket.

(2) 12-1.75mm x 35mm Hex Bolts  
(2) 12mm Lock Washers  
(4) 12mm Flat Washers  
(2) 12mm Hex Nuts

