



TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS

**TAIL LIGHT GUARD
CADILLAC ESCALADE 07-10
CHEVROLET SUBURBAN 07-10/TAHOE 07-10
GMC YUKON/YUKON XL/YUKON DENALI 07-10
PART # 7G037406SS/7G037406A**

PART LIST

1	Tail Light Guard for Driver Side
1	Tail Light Guard for Passenger Side
2	Mounting Bracket
2	T Bolt Plate6*12MM
2	¼ -20 Hex Nut
4	#4.2 x1 Screw
2	#4.0 x ½ Screw
4	5mm flat washer
2	4mm flat washer

PROCEDURE:

1. Remove contents from box and check for damage. Verify all parts are present. Read instruction carefully.
2. Open rear tail gate, remove existing screws and detach tail light assembly carefully.
3. Insert (1) T bolt plate on the vehicle and attach (1) mounting bracket using ¼ -20 Hex nut and tighten. (note: T bolt plate should be aligned at top end of oval hole before tightening) See Fig #1. and Fig #2.
4. RE attach tail light assembly and install tail light guard using (2) #4.2x1 screw and (1) #4.0 x ½ screw, align and tighten as desired. See Fig #3 (Driver side shown)
5. Repeat procedures 3-4 on opposite side.

TAIL LIGHT GUARD
CADILLAC ESCALADE 07-10
CHEVROLET SUBURBAN 07-10/TAHOE 07-10
GMC YUKON/YUKON XL/YUKON DENALI 07-10



Kit



Fig #1

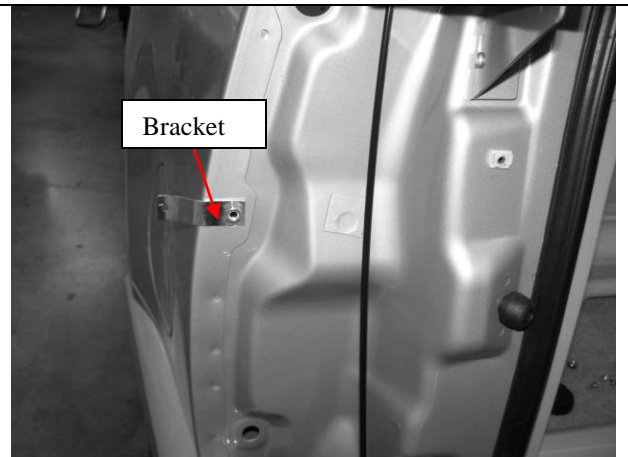


Fig #2



Fig #3