



**TEL: 1-866-XANATOS**

## **INSTALLATION INSTRUCTIONS**

**TAIL LIGHT GUARD PART#: 7GJ15SS\7GJ15A  
CHEVY SUBURBAN 00-06\TAHOE\YUKON 00-06**

**NOTE:** Please read this information before installing. **OPTIONAL DRILLING REQUIRED** for installation of these tail light guards. To obtain correct installation, we recommend you to follow these step by step installation instructions carefully. The manufacturer is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product.

**Step One:** Locate hardware and check contents with the hardware listed below.

DESCRIPTION	QTY
Taillight Guard Set (Left & Right)	1
4.2*19 Phillips Sheet Metal Screws	6
M5 Flat Washers	6

**Step Two:** Remove the two mounting screws that support the tail light to the vehicle as shown in fig #1. Position the tail light guard onto the vehicle and secure the guard to the vehicle using the factory screws. **Open and close the tail gate slowly, to be certain that the guard does not interfere with the tail gate.** Repeat this step for opposite side.

#### OPTIONAL DRILLING

**Step Three:** Use the holes on the Bracket as templates to drill 1/8" holes (Figure 2). **“Caution” before drilling be sure to check the back side of the drilling area for possible hazards or obstructions.**

**Step Four:** Use the included two #4.2 x 19 Phillips Sheet Metal Screws to reinforce the Tailgate Guard. Repeat steps 3 & 4 for opposite side.

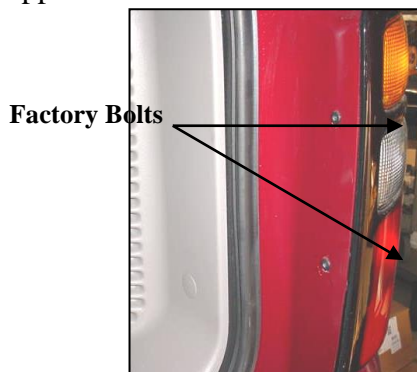


Figure 1



Optional  
Drilling  
Locations

Cleaning Instructions: For stainless steel, an aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap, window and glass cleaner may be used to clean stainless steel. For gloss black: Mild soap, window and glass cleaner may be used. Do not use any type of polish or wax that contains abrasive that could damage the finish.